


SECTION 5: PARTS SECTION

SECTION 5: PARTS SECTION

TS-44/TSC-44 CONTROL BOX ASSEMBLY

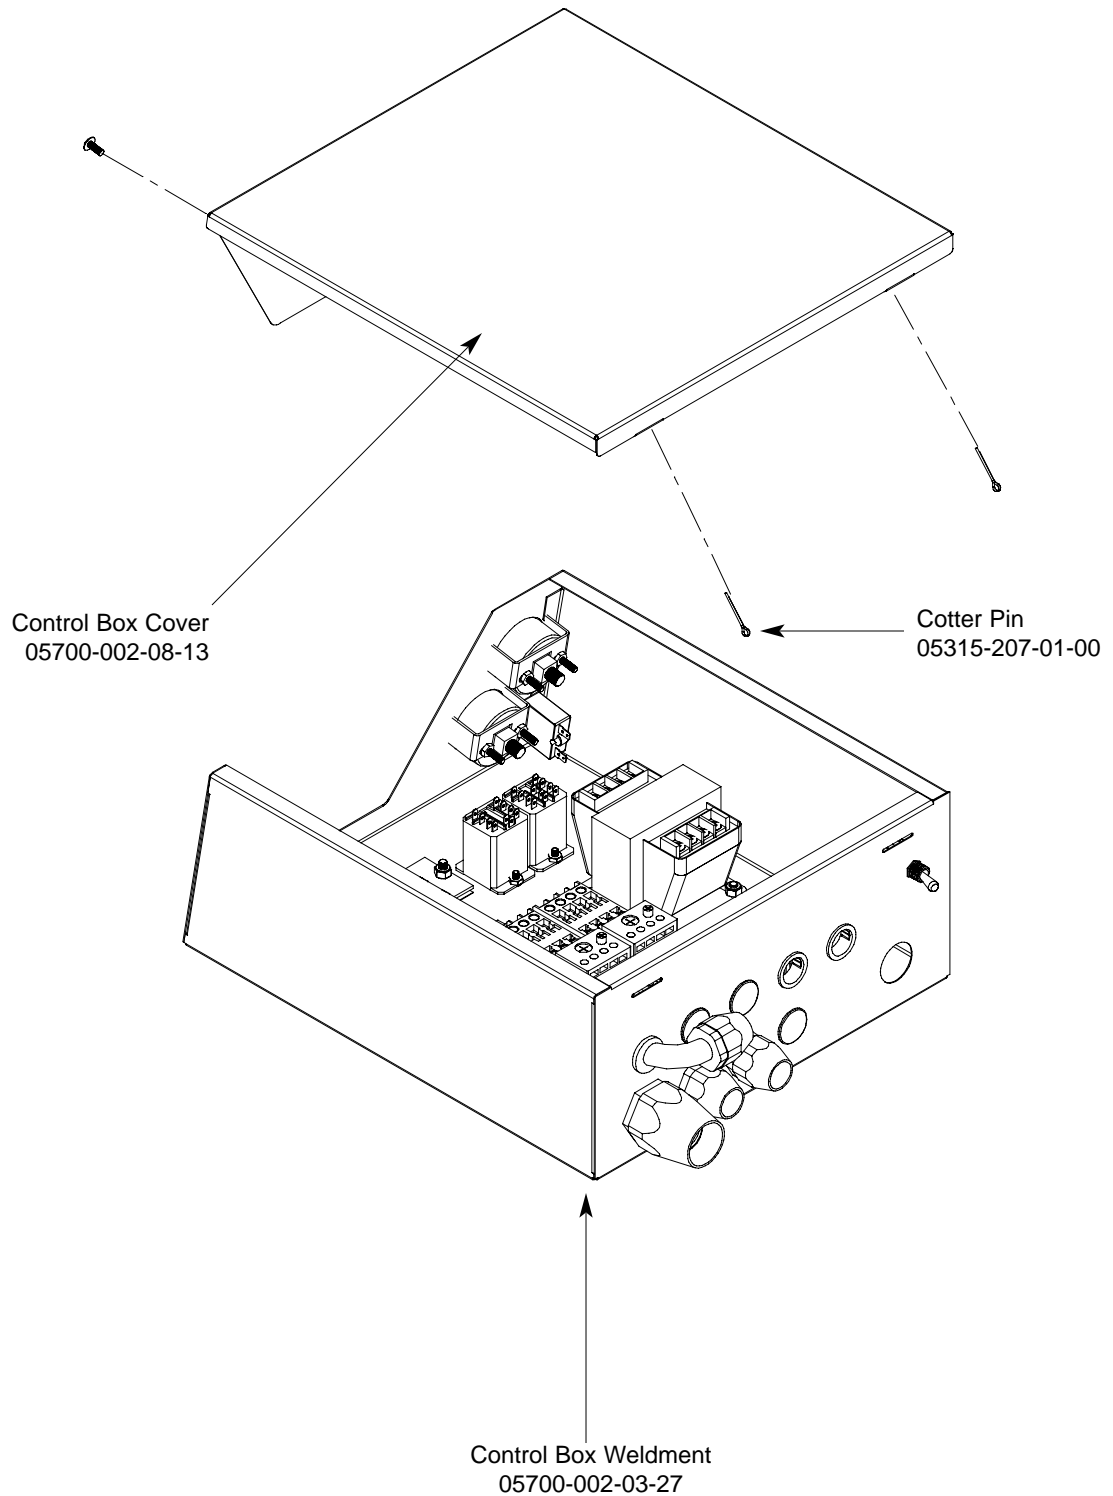



SECTION 5: PARTS SECTION
TS-44/TSC-44 CONTROL BOX ASSEMBLY (CONTINUED)

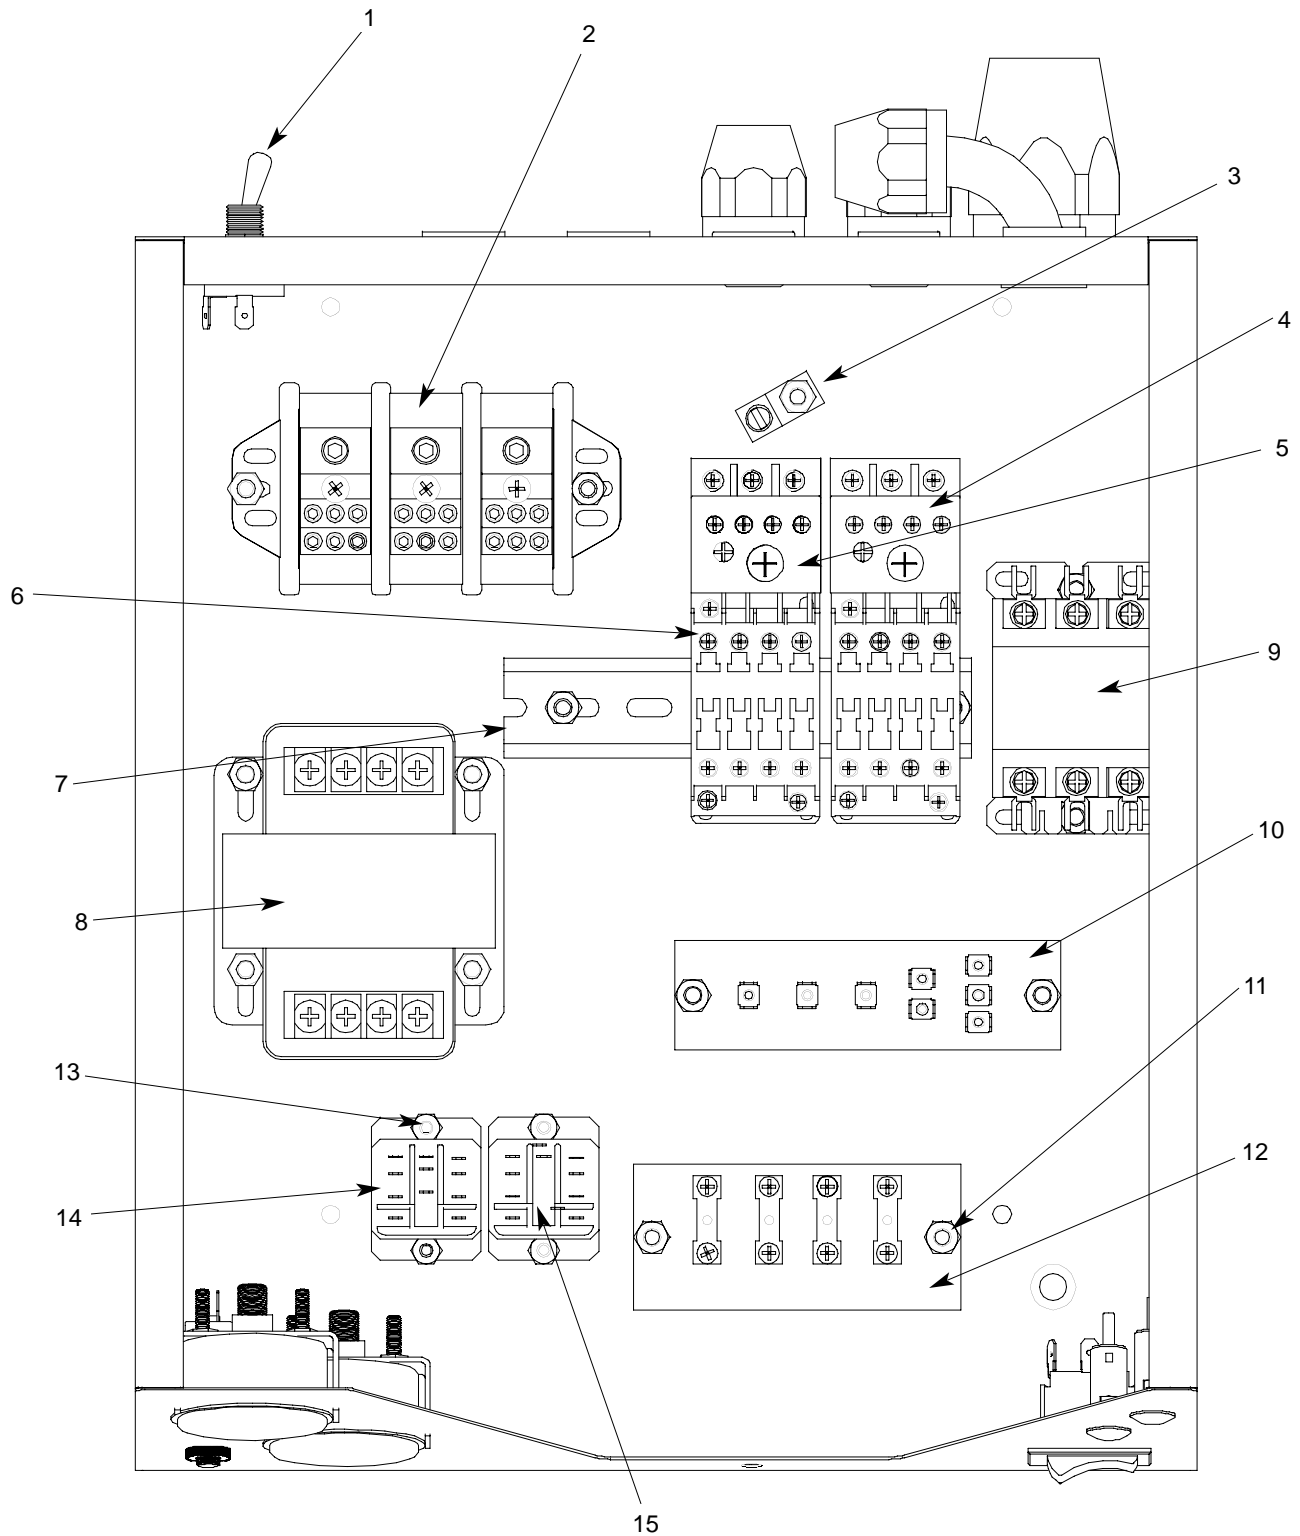

SECTION 5: PARTS SECTION


TS-44/TSC-44 CONTROL BOX ASSEMBLY (CONTINUED)

ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Switch, Master	05930-301-22-18
2	1	Terminal Block, 3 Pole	05940-011-48-27
3	1	Wire Lug, 2 AWG to 14 AWG	05940-200-76-00
4	1	Overload, 5.5 - 7.5 RT1M (3 phase only)	05945-111-68-40
	1	Overload (460-600V Models Only)	05945-111-69-12
5	1	Overload, 1 - 1.5 RT1G (3 phase only)	05945-111-68-39
	1	Overload (460-600V Models Only)	05945-111-68-41
6	2	Contactor	05945-111-68-38
7	1	Din Rail	05700-021-72-75
8	1	Transformer (TS-44/TSC-44)	05950-011-68-35
	1	Transformer (TS-44GP/TSC-44GP)	05950-002-46-10
	1	Transformer (TS-44/TSC-44 600V MODELS)	05950-002-23-77
9	1	Contactor, Heater	05945-002-24-70
10	1	Terminal Board	05940-002-78-97
11	15	Locknut, 1/4"-20 with Nylon Insert	05310-374-01-00
12	1	Terminal Board, Screw Down	05940-021-89-41
13	8	Locknut, 10-24 with Nylon Insert	05310-373-01-00
14	1	Relay, 120V, 3PDT, Top Mount	05945-111-72-51
15	1	Relay, Control	05945-111-35-19
16	1	Rinse Thermometer, 96" Lead	06685-111-68-49
	1	Decal, 180°F Rinse	09905-002-97-62
17	1	Circuit Breaker (208-230V Electric Models Only)	05925-011-68-34
17	1	Circuit Breaker (208-230V Gas Models Only)	05925-111-64-18
18	1	Wash Thermometer, 96" Lead	06685-111-68-49
	1	Decal, 160°F Wash	09905-003-00-69
19	1	Light, Amber (TS-44/TSC-44 Only)	05945-111-44-44
20	1	Light, Red	05945-111-44-45
21	1	Switch, Power	05930-301-46-00
22	1	Fitting, 1/2" NPT x 90°	05975-011-45-14
23	1	Fitting, 1" Straight	05975-011-70-75
24	2	Fitting, 1/2" Straight	05975-011-45-13
25	2	Plug, Heyco, 2700 G-875	05975-011-47-81
26	2	Bushing, Heyco	05975-210-09-00
27	1	Grommet, 1/2" OD x 3/8" ID	05325-011-46-73
	1	Fuse (460V Models) (Not Shown)	05920-011-72-88
	1	Fuse (600V Models) (Not Shown)	05920-002-75-95
	1	Fuse Holder (460-600V Models)(Not Shown)	05920-011-72-89
28	1	Decal, Front	09905-002-97-75

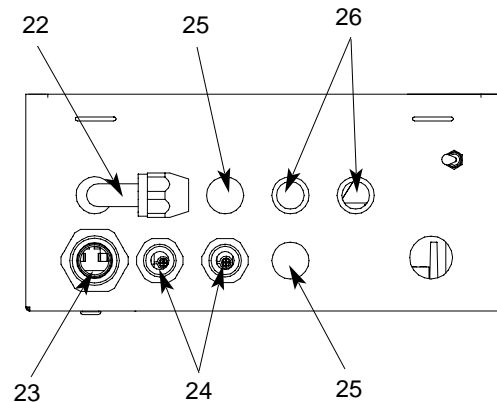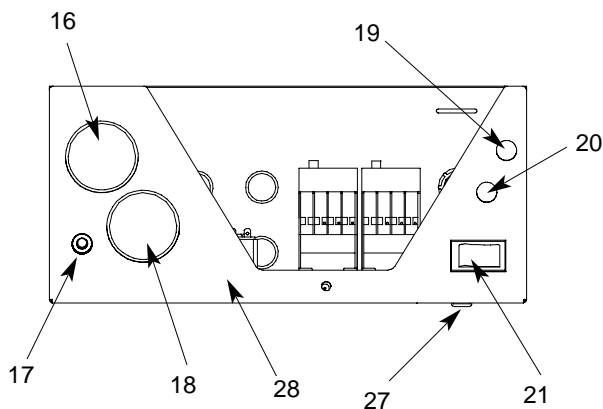

SECTION 5: PARTS SECTION

TS-66/TSC-66 CONTROL BOX ASSEMBLY

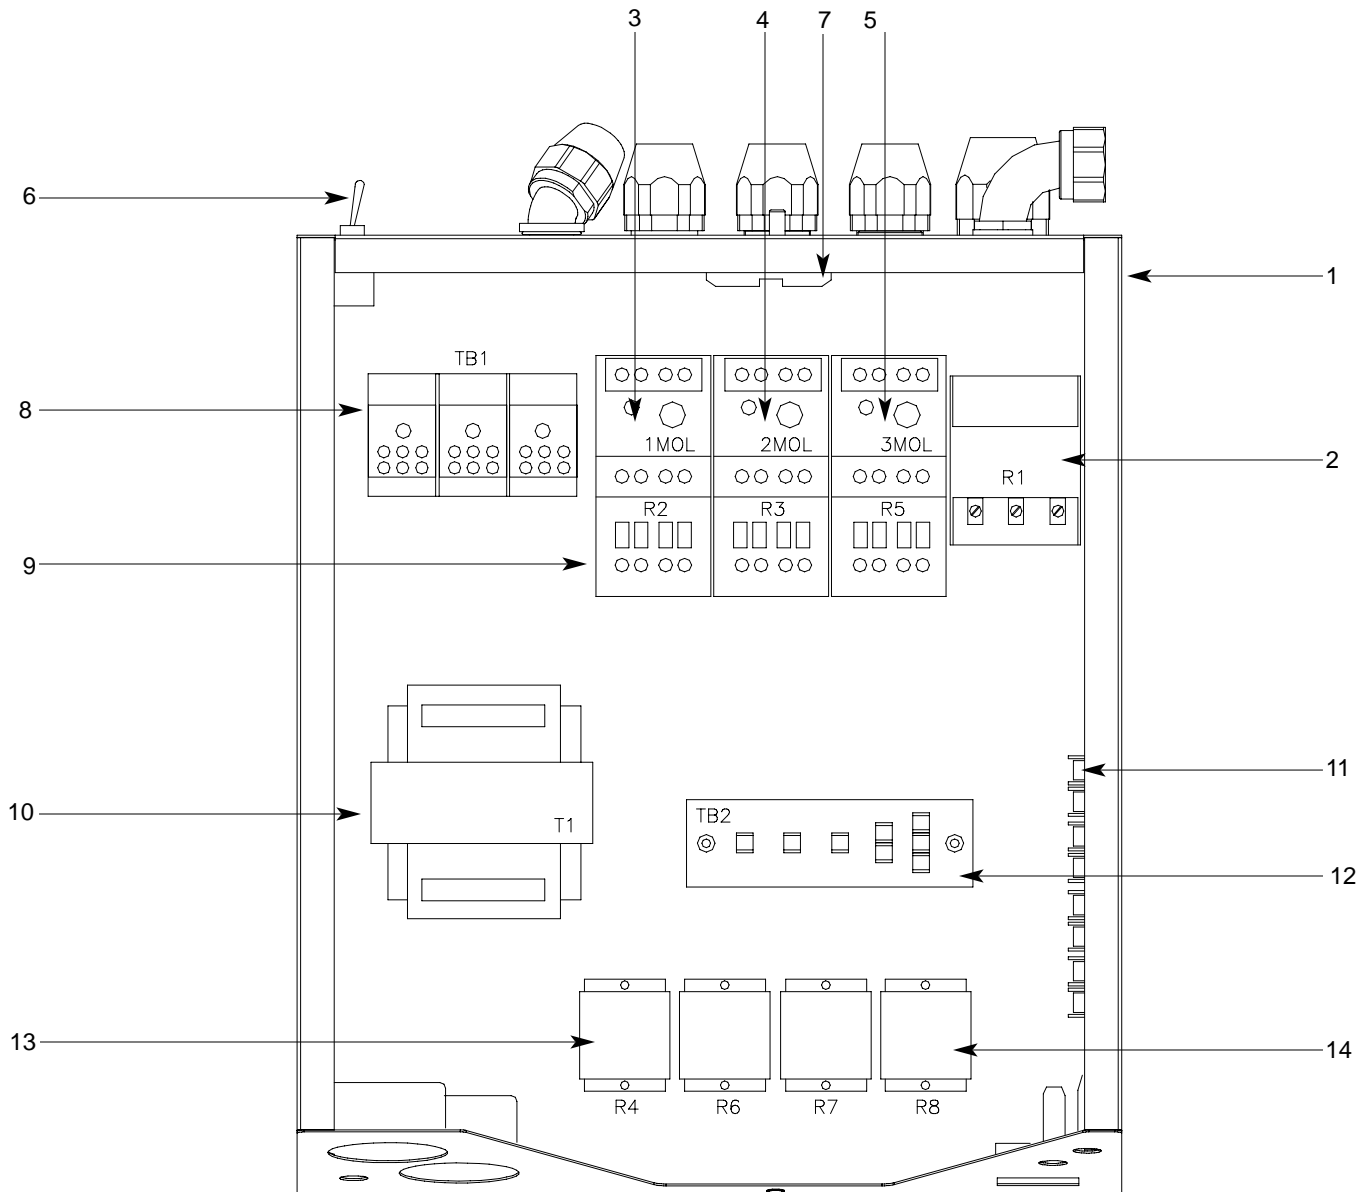


Items not shown but available as service parts:

ITEM	QTY	DESCRIPTION
1	1	Control Box Legs
1	1	Din Rail, Cut to 5-3/4" Long
1	1	Control Box Cover
2	2	Cotter Pin

Mfg. No.
 05700-011-71-47
 05700-021-72-75
 05700-002-08-13
 05315-207-01-00

SECTION 5: PARTS SECTION


TS-66/TSC-66 CONTROL BOX ASSEMBLY (CONTINUED)

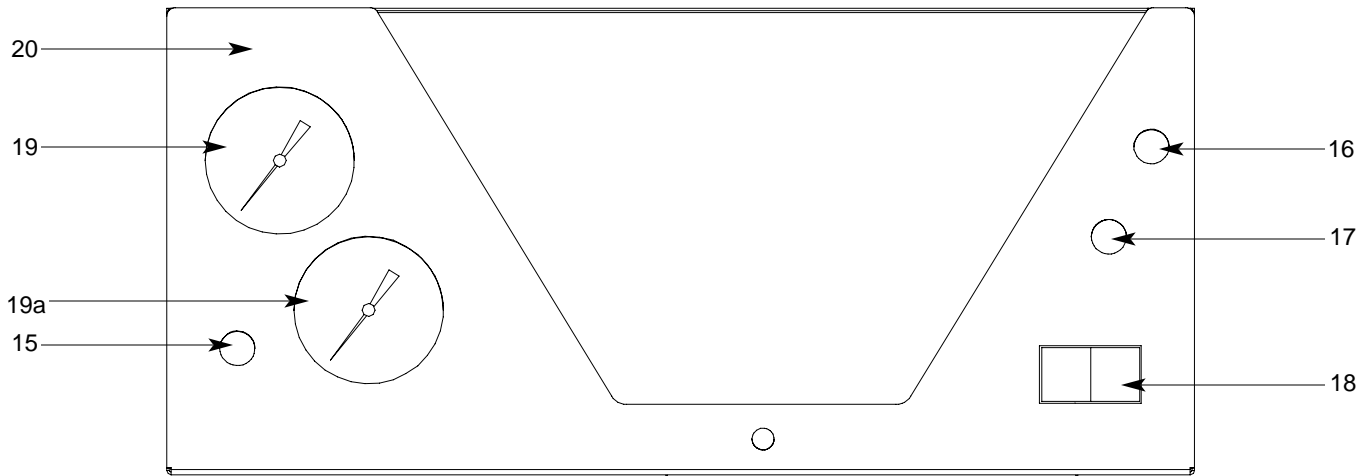

ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Electrical Box Weldment	05700-002-03-27
2	1	Heater Contactor	05945-002-24-70
3	1	Drive Motor Overload	05945-111-68-39
	1	Drive Motor Overload (460-600V Models Only)	05945-111-69-12
4	1	Wash Motor Overload	05945-111-68-40
	1	Wash Motor Overload (460-600V Models Only)	05945-111-68-41
5	1	Prewash Motor Overload	05945-111-68-41
	1	Prewash Motor Overload (460-600V Models Only)	05945-111-69-13
6	1	Master Switch	05930-301-22-18
7	1	Fuse Holder (460V Models Only)	05920-011-72-89
	1	Fuse (460V Models Only)	05920-011-72-88
	1	Fuse (600V Models) (Not Shown)	05920-002-75-95
8	1	Terminal Block	05940-011-48-27
9	3	Motor Contactor	05945-111-68-38
10	1	Transformer (TS-66/TSC-66)	05950-011-68-35
	1	Transformer (TS-66GP/TSC-66GP)	05950-011-46-10
	1	Transformer (TS-44/TSC-44 600V MODELS)	05950-002-23-77
11	1	Terminal Board	05940-021-89-41
12	1	Terminal Board	05940-002-78-97
13	1	Top Mount Relay	05945-111-72-51
14	3	Control Relay	05945-111-35-19
15	1	Circuit Breaker (TS-66/TSC-66 208-230V Only)	05925-011-68-34
15	1	Circuit Breaker (TS-66GP/TSC-66GP 208-230V Only)	05925-111-64-18
16	1	Light, Amber (TS-66/TSC-66 Only)	05945-111-44-44
17	1	Light, Red	05945-111-44-45
18	1	Manual Wash Switch	05930-301-46-00
19	1	Rinse Thermometer	06685-111-68-49
	1	Decal, 180°F Rinse	09905-002-97-62
19a	1	Wash Thermometer	06685-111-68-49
	1	Decal, 160°F Wash	09905-003-00-69
20	1	Decal, Front	09905-002-97-75

SECTION 5: PARTS SECTION

TS-44/TSC-44 DOOR AND HOOD ASSEMBLY

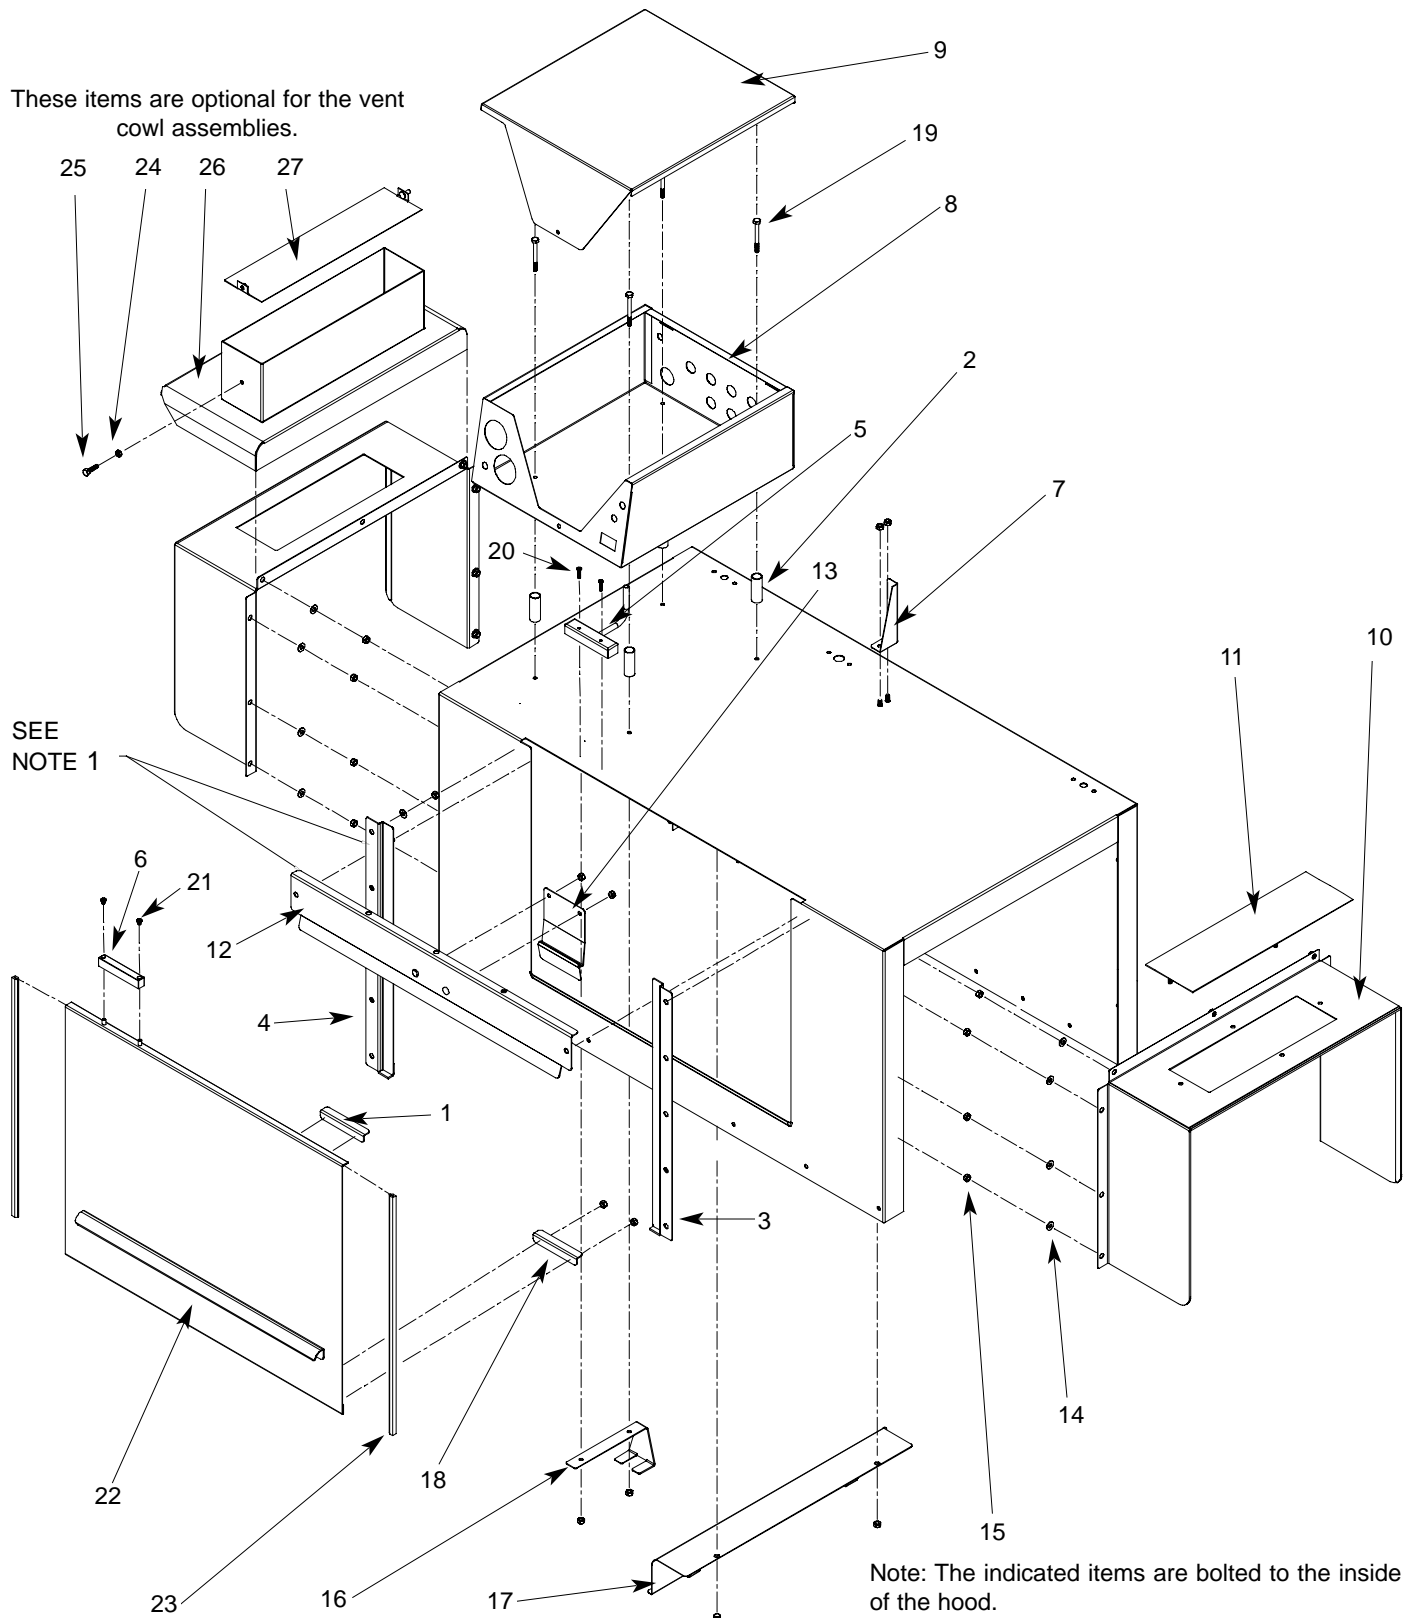


SECTION 5: PARTS SECTION

TS-44/TSC-44 DOOR AND HOOD ASSEMBLY (CONTINUED)

ITEM	QTY	DESCRIPTION	Mfg. No.
1	2	Left Door Stop Weldment	05700-002-96-32
2	4	Legs, Electrical Box	05700-011-71-47
3	1	Door Guide, Right	05700-002-03-44
4	1	Door Guide, Left	05700-002-03-14
5	1	Switch Box Weldment	05700-002-03-30
6	1	Magnet, Reed Switch	05700-111-51-68
7	1	Plumbing Support Bracket	05700-002-05-01
8	1	Control Box Weldment	05700-002-03-27
9	1	Control Box Cover	05700-002-08-13
10	2	Vent Cowl (Optional)	05700-002-03-12
11	2	Cover, Vent Cowl (With studs) (Optional)	05700-011-74-67
12	1	Support, Door	05700-002-03-45
13	1	Door Catch	05700-002-03-15
14	32	Washer, S/S, 1/4"-20	05311-174-01-00
15	56	Locknut, 1/4"-20 with Nylon Insert	05310-374-01-00
16	1	Upper Wash Arm Bracket	05700-021-73-97
17	1	Splash Shield Weldment	05700-002-03-54
18	1	Right Door Stop Weldment	05700-002-96-33
19	4	Bolt, 1/4"-20 x 2-1/2" Long	05306-011-83-52
20	2	Screw, 8-32 x 3/4" Binder Phillipshead	05305-011-72-66
21	2	Screw, 8-32 x 1/4" Phillips Panhead	05305-172-09-00
22	1	Door Weldment	05700-002-94-04
23	2	Door Glide	05700-002-03-28
24	2	Nut, 1/4"-20, Hex (Optional)	05310-274-01-00
25	2	Screw, 1/4"-20 x 1" Long, S/S Tap (Optional)	05305-274-27-00
26	2	Vent Scoop (Optional)	05700-002-12-18
27	2	Baffle (Optional)	05700-002-11-47

SECTION 5: PARTS SECTION


TS-66/TSC-66 DOOR AND HOOD ASSEMBLY

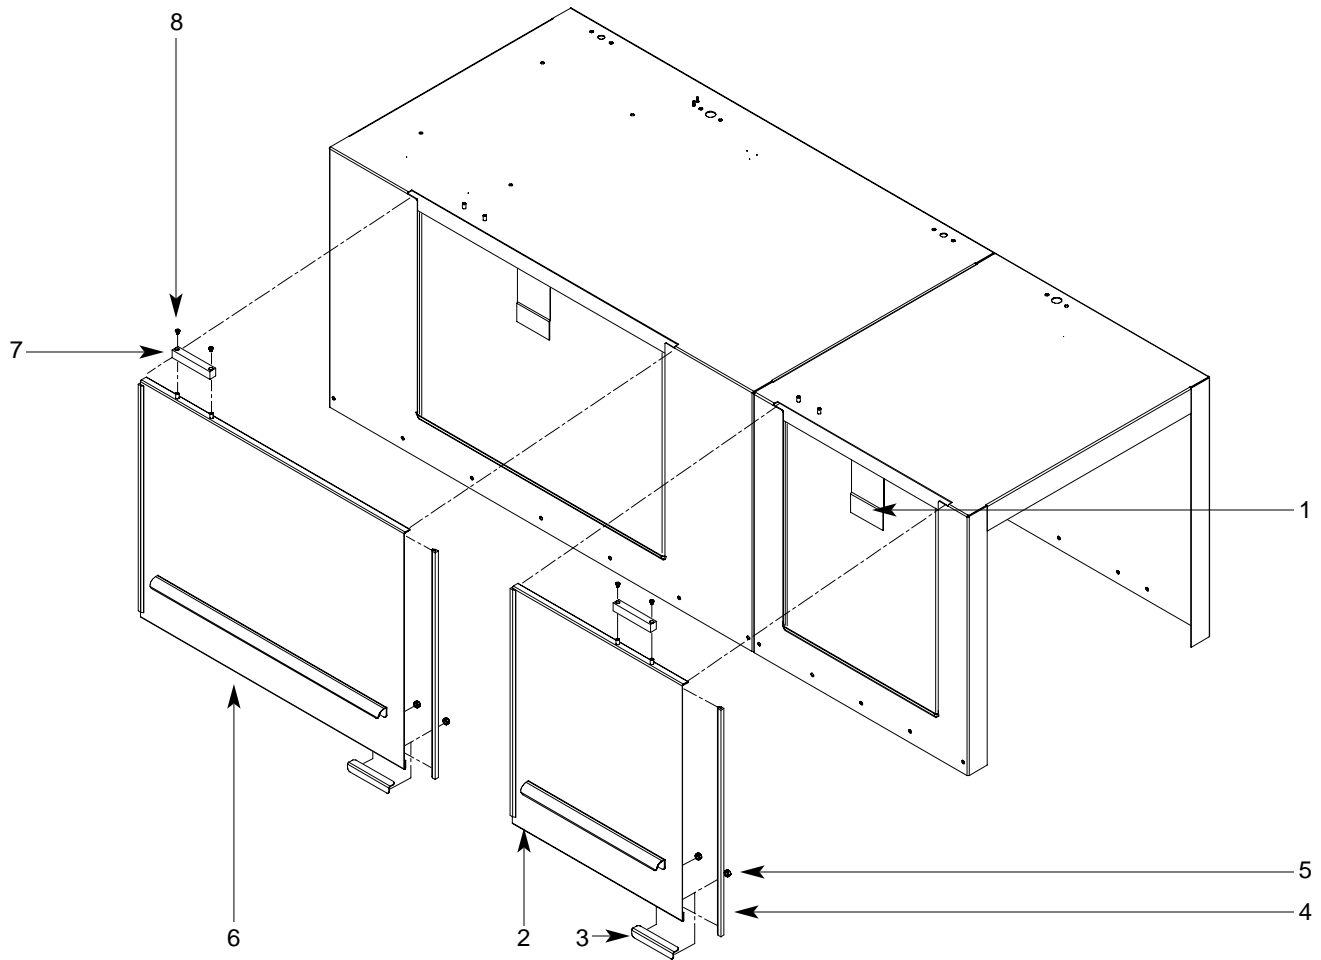

ITEM	QTY	DESCRIPTION	Mfg. No.
1	2	Door Catch Weldment	05700-031-84-80
2	1	Prewash Door Weldment	
		Left to Right	05700-003-13-42
		Right to Left	05700-003-13-40
3	1	Right Door Stop	05700-002-96-33
4	4	Door Guide	05700-002-03-28
5	4	Locknut, 1/4"-20 with Nylon Insert	05310-374-01-00
6	1	Wash Door Weldment	05700-002-94-04
7	2	Door Switch Magnet	05700-011-73-67
8	4	Screw, 8-32 x 1/4" Long	05305-172-09-00
9	1	Right Door Guide Weldment (Not Shown)	05700-031-76-44
10	1	Right Door Stop (Not Shown)	05700-002-96-32
11	1	Wash Door Hood Support (Not Shown)	05700-031-84-13
12	1	Prewash Door Hood Support (Not Shown)	05700-031-84-14
13	1	Left Door Guide Weldment (Not Shown)	05700-002-03-14
14	1	Splash Shield Weldment (Not Shown)	05700-003-01-63

SECTION 5: PARTS SECTION

TS-44/66 & TSC-44/66 HEATER BOX ASSEMBLY

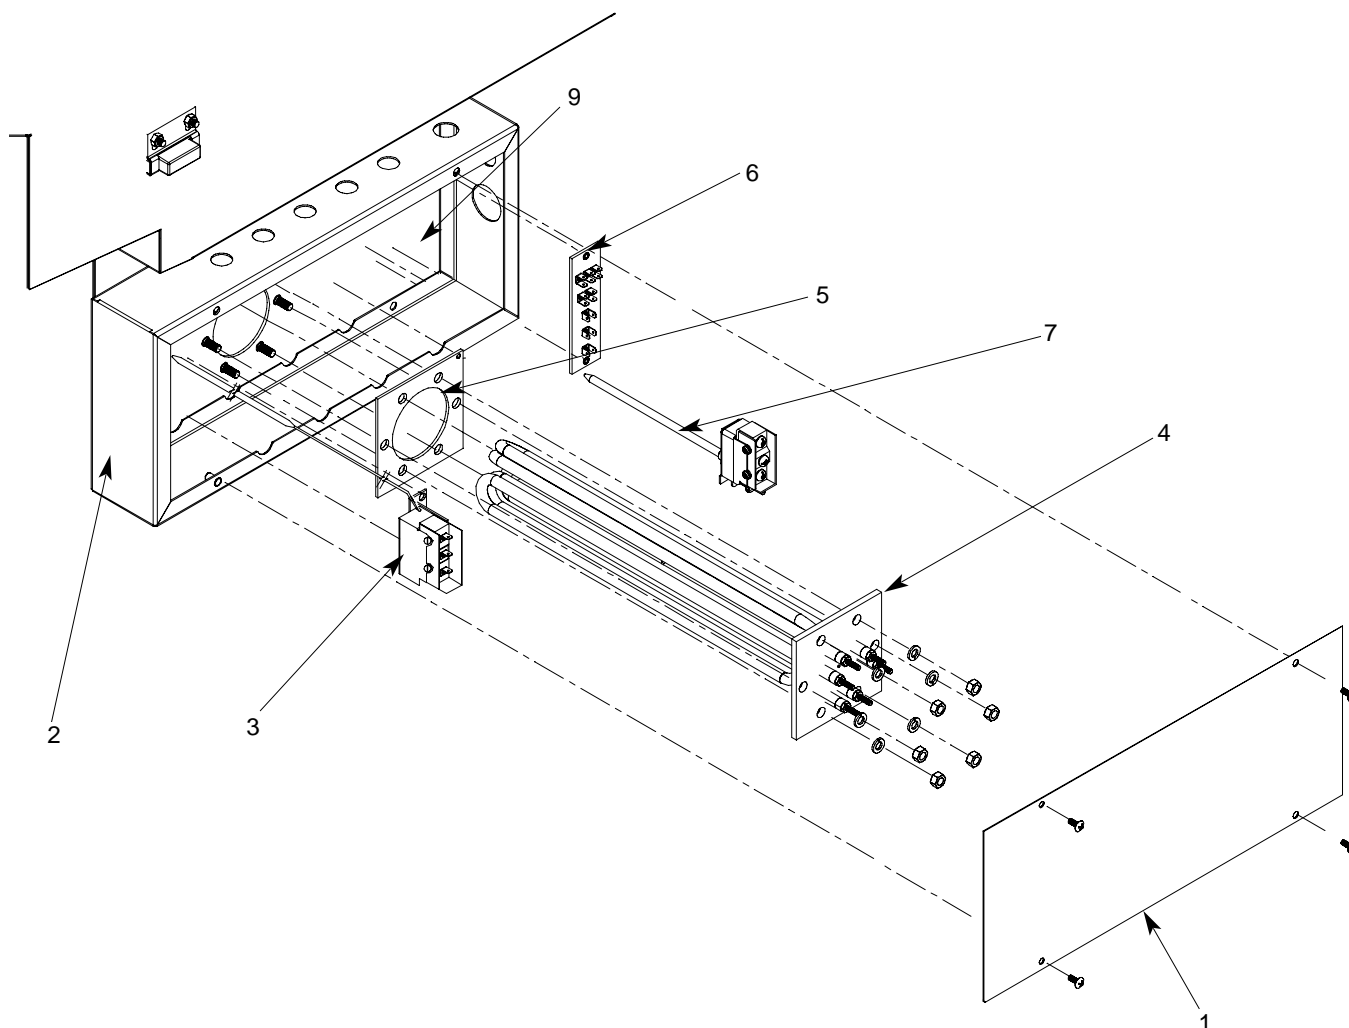

ITEM	QTY	DESCRIPTION
1	1	Heater Box Cover
2	1	Heater Box Weldment
3	1	Thermostat, High Limit
	1	Decal, High Limit
	1	Fitting, 1/4", Imperial Brass
4	1	See Next Page
5	1	Gasket
6	1	Terminal Board
7	1	Wash Thermostat Replacement Kit


Mfg. No.
05700-002-02-04
05700-002-98-38
05930-011-49-43
09905-011-84-32
05310-924-02-05
N/A
05330-200-02-70
05940-002-78-97
06401-003-18-20

SECTION 5: PARTS SECTION

TS-44/66 & TSC-44/66 HEATER BOX ASSEMBLY (CONTINUED)

5/16"-18 Hex Nut
05310-275-01-00

See Heater Chart Below

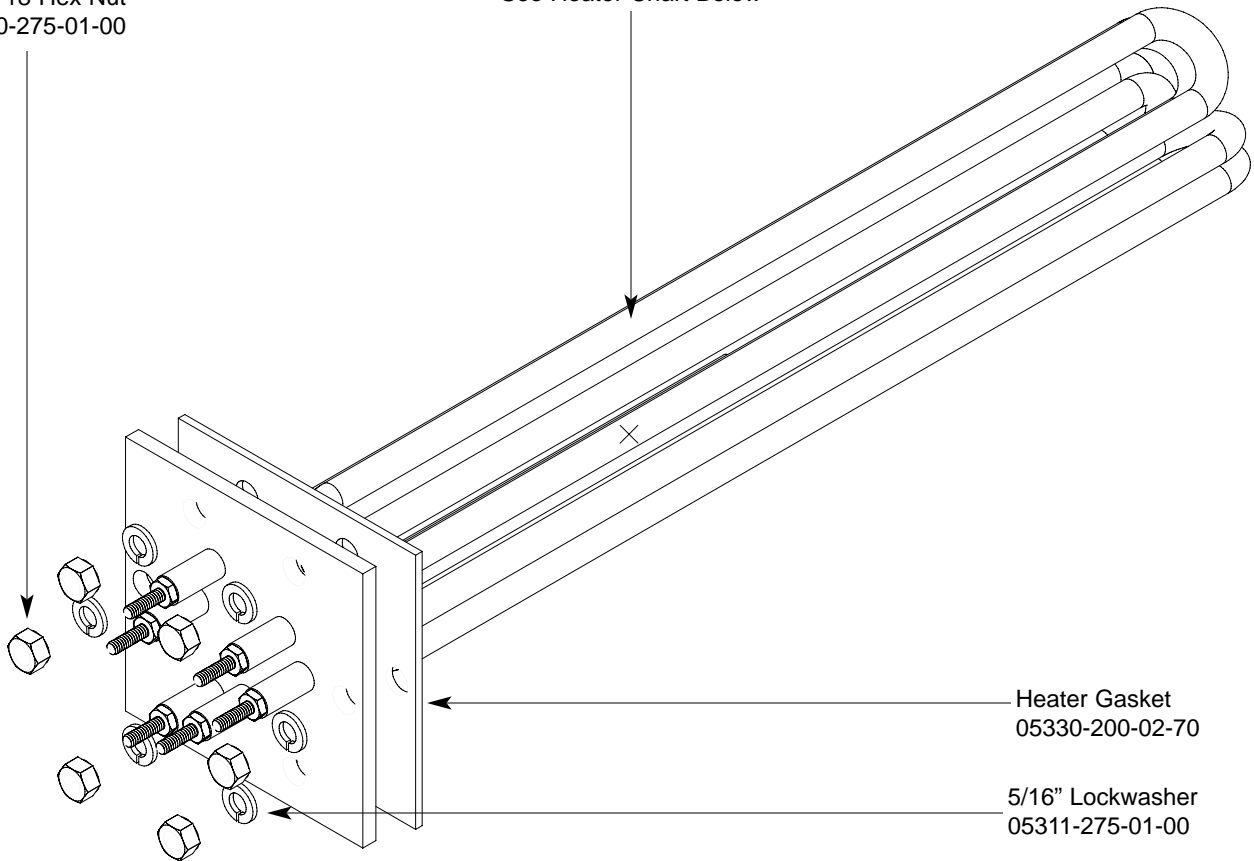

Heater Chart


<u>Model</u>	<u>Volts</u>	<u>Phase</u>	<u>KW</u>	<u>Mfg. Number</u>
TS-44/TSC-44	208	1	15	04540-121-68-45
	230	1	15	04540-121-68-46
	208	3	15	04540-121-68-45
	230	3	15	04540-121-68-46
	460	3	15	04540-121-68-47
	600	3	15	04540-002-39-93
TS-66/TSC-66	208	1	15	04540-121-68-45
	230	1	15	04540-121-68-46
	208	3	15	04540-121-68-45
	230	3	15	04540-121-68-46
	460	3	15	04540-121-68-47
	600	3	15	04540-002-39-93

SERVICE NOTE: When replacing the tub heaters, it is **HIGHLY** recommended that you also change out the gasket as well. Once install, gaskets become compressed and are subjected to extreme temperature changes. Replacing the gasket with a new one when replacing the heater may prevent future leaks.


SERVICE NOTE: The nuts used to secure the heater to the tub should be torqued to 16 in-lbs. After tightening, the unit should be allowed to heat up and operate normally for approximately 30 minutes. Secure power to the machine and check the nuts once more to ensure that they are torqued to 16 in-lbs.

SECTION 5: PARTS SECTION

TS-44/66 & TSC-44/66 HEATER BOX ASSEMBLY (CONTINUED)

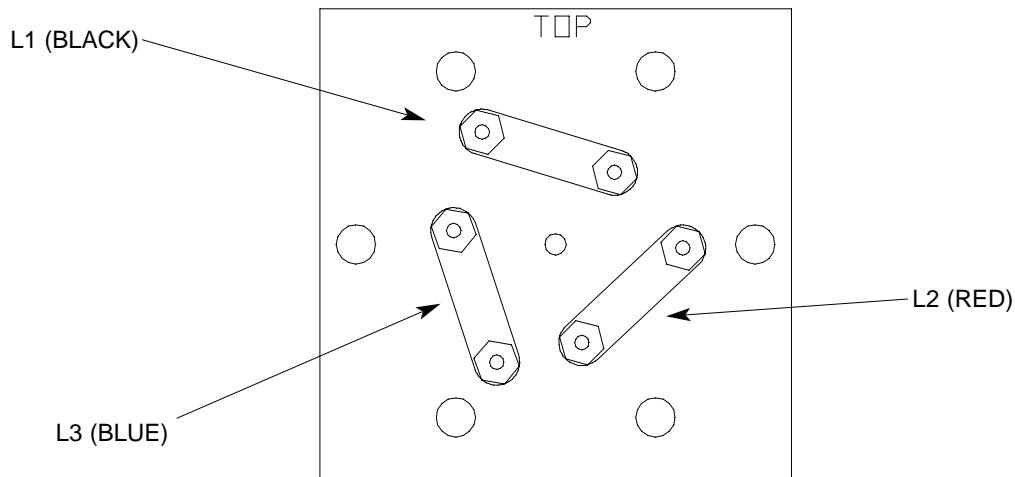

BUS BAR AND LEAD LOCATIONS FOR WASH HEATER TO BE WIRED FOR 3 PHASE AC.

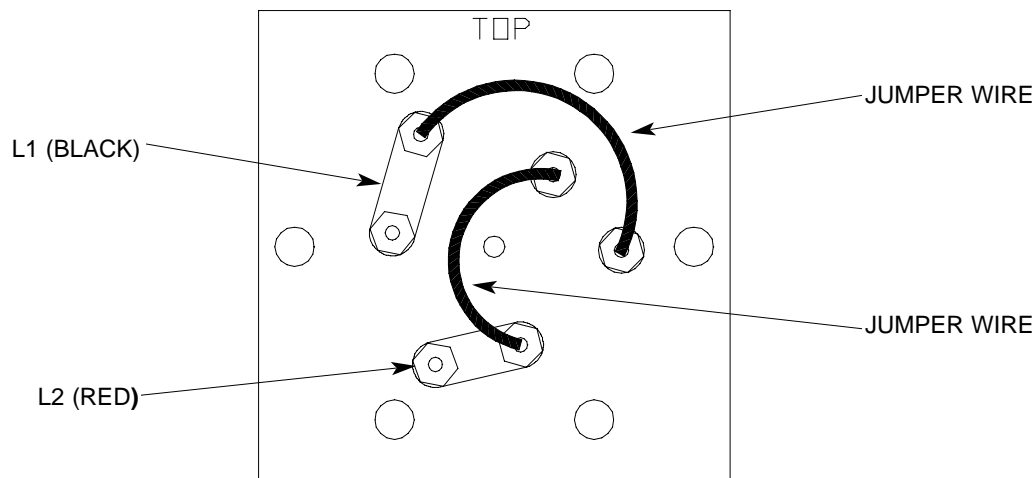

BUS BAR, JUMPER WIRES AND LEAD LOCATIONS FOR WASH HEATER TO BE WIRED FOR 1 PHASE AC.

The wash tank heater system is electrically connected in the circuit so that they are dependent upon the dishwasher being properly filled with and maintaining a safe water level, two thermostats (mounted in the heater box behind the dress panel), float switch (mounted in the wash tank), and the heater relay (mounted in control box) with the heater being activated by the thermostats.

Once the dishwasher has been filled to the correct level, the heater should operate automatically. Should the tank heat be too high, too low or no indication of temperatures at all, the following checkout should be made.

Note: The following checkout should be made by either a qualified service person or electrician.

A- Checkout of the heater system

- 1- If the temperature is too high, adjust thermostat using instructions in the section entitled "Thermostats".
- 2- If temperature is too low, adjust thermostat as above, then:
 - a - Turn off power to machine by placing customer's circuit breaker in the "OFF" position. Turn off machine circuit breaker located on right side of control box.
 - b - Remove cover from control box on top of dishwasher.

SECTION 5: PARTS SECTION

TS-44/TSC-44 HEATER BOX ASSEMBLY (CONTINUED)

- c - Make sure water temperature is below 140°F.(preferably about 130°F).
- d - Turn on both circuit breakers. Observe heater relay (R1) while the power switch is turned "ON" and "OFF". If relay contacts move in and out, the heater relay is operating correctly: if not proceed to "C".

B- If heater relay (R1) closes:

- 1 - Check power supply at incoming terminal board L1, L2 & L3. It should be the same voltage as indicated on the machine data plate.
- 2 - Check power at connections on heater relay (R1). The voltage should agree with the voltage on the machine data plate. If not, check wires for breaks or bad connections.
- 3 - Check power at terminals of heater which should agree with the data plate. If not check wires for breaks or bad connections.
- 4 - Temperatures should rise as explained in "C-1", and amperage may be checked according to those instructions. Replace any defective elements.

C - If heater relay (R1) does not close.

- 1 - There is an insulated movable insulated movable bar on relay across the top. With an insulated probe, depress this bar and observe the thermometer: the temperature should rise noticeably in a minute or two. If it moves slowly, it would indicate that the element is faulty. If it moves constantly higher at a good rate, elements should be good.



Note: A check with an amp probe at heater relay (R1) terminals should be made to verify the amp draw on each leg. This should be appropriate for the voltage and phase indicated on the data plate.

HEATER PROTECTION & AUTOMATIC FILL

This control is activated when the power switch is turned "ON". The primary function is to automatically energize the wash tank heat circuit. It will also cutoff the wash tank heat circuit should the water be accidentally drained from the machine with the power switch still "ON". The power switch should always be turned-off before draining the unit.

This water level control consists of two (2) floats that operate when the power switch is turned on and works in conjunction with the thermostats and heater relays.

When the power switch is turned "ON" water starts to enter the dishmachine. When it reaches the proper level the normally open contacts in the water level float switch close activating the heating circuit for tank heat.

If the water level below the correct level while power is still on, the float switch will sense the lack of water and de-activate the heater.

THERMOSTATS

The thermostat range is from 140°F to 240°F with a maximum bulb exposure temperature of 300°F.

Calibration:

Wash Thermostat: Set Point: 165°F (Adjustable range)


Hi-Limit Thermostat: Fixed set point: 210°F (Non-adjustable)

The hi-limit thermostat is used to protect the heater element in the event of a run away regulating thermostat or a dry fire situation. It is set for 210°F +0°F or -10°F with a fixed set point. **This part is not adjustable.**

The wash tank regulating thermostat will maintain the correct wash water temperature to meet NSF requirements. These specify that the wash be no lower than 140°F on chemical sanitizing models and no lower than 160°F on hot water sanitizing machines.

SECTION 5: PARTS SECTION

TS-44GP/TSC-44GP & TS-66GP/TSC-66GP GAS COIL ASSEMBLY


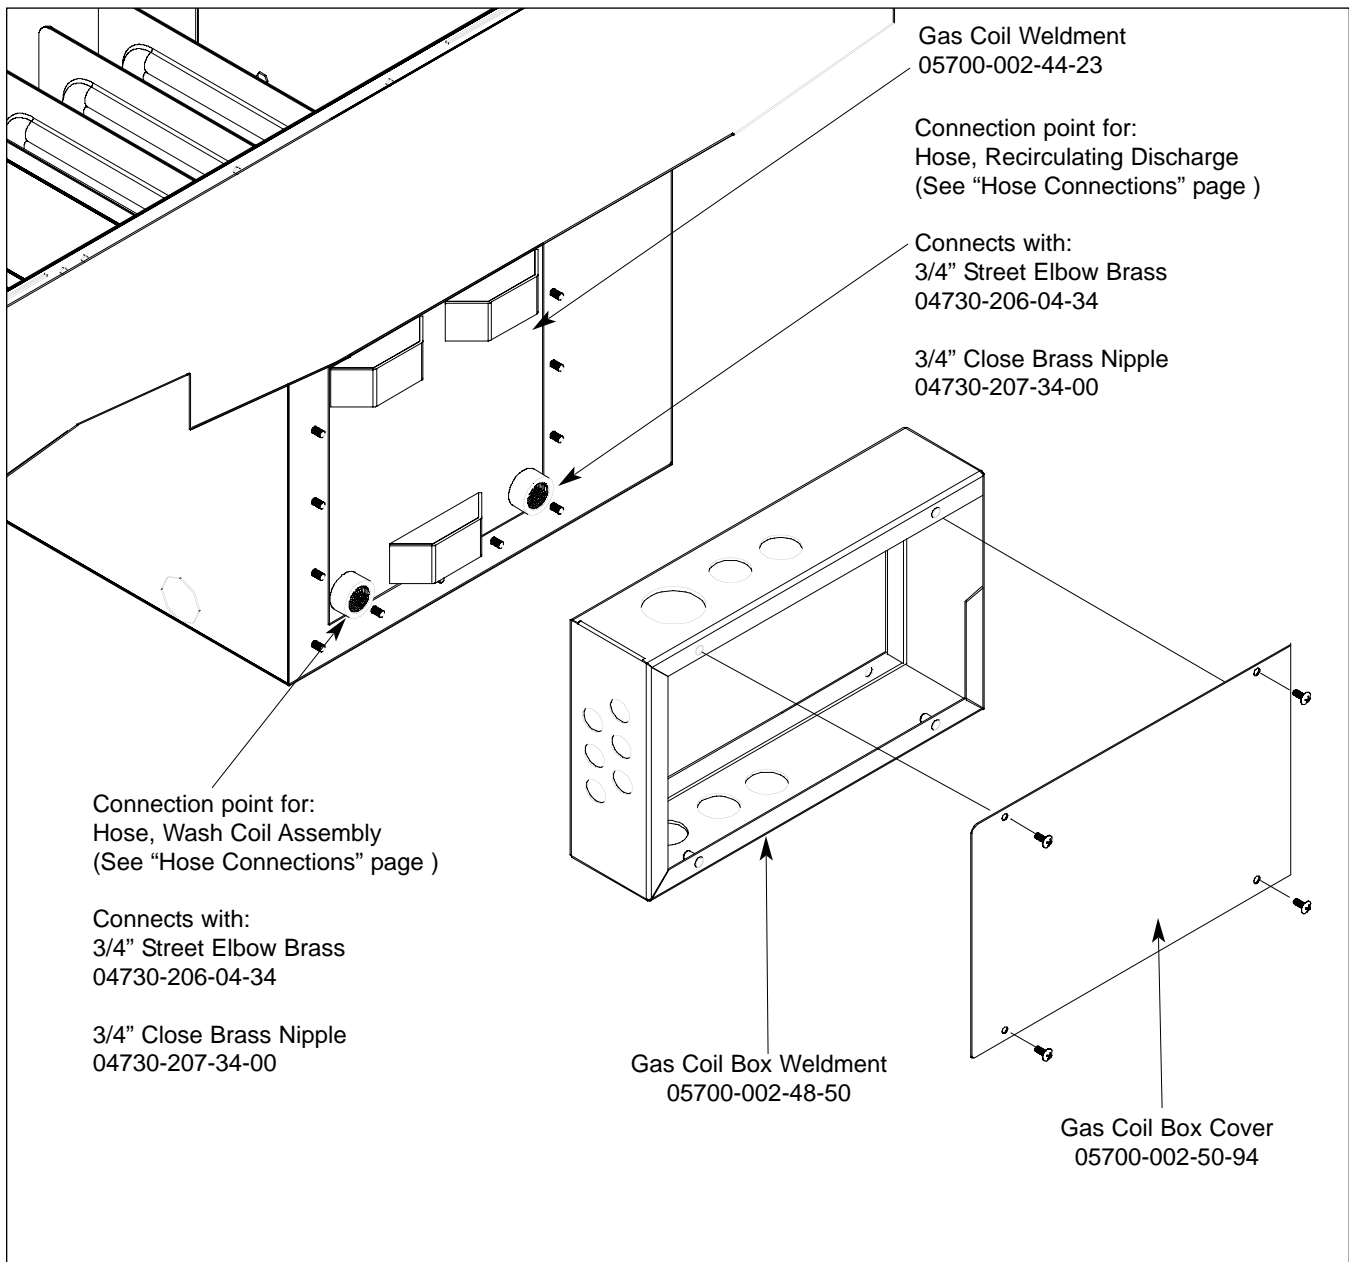


Other items used but not shown.


ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Thermostat, High Limit	05930-011-49-43
	1	Fitting, 1/4", Imperial Brass	05310-924-02-05
2	1	Gasket	05330-200-02-70
3	1	Terminal Board	05940-002-78-97
4	1	Thermostat Bracket	05700-011-81-64
5	1	Decal, Thermostat Regulating	09905-011-84-31
6	1	Thermostat, Wash Regulating	06401-140-00-32

SECTION 5: PARTS SECTION

TANK, RINSE BOOSTER (TS-44GP/TSC-44GP & TS-66GP/TSC-66GP)

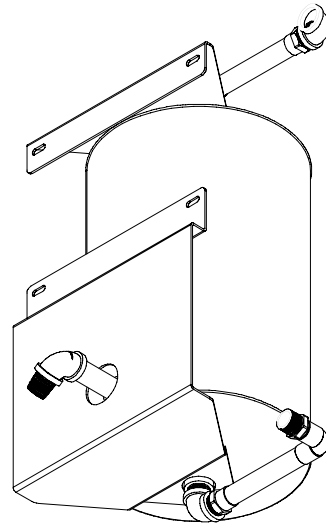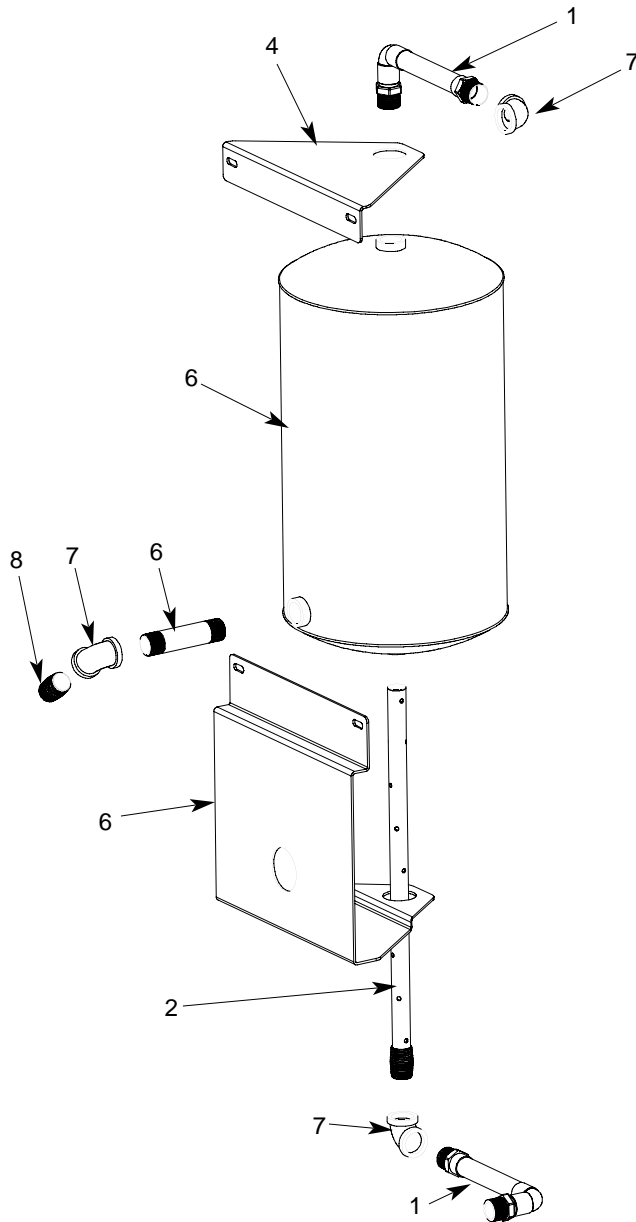

BOTTOM ANGLED VIEW

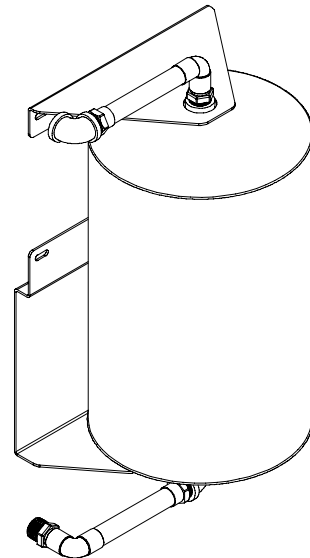

TOP ANGLED VIEW

ITEM	QTY	DESCRIPTION
1	2	Plumbing Assembly, Inlet/Discharge, Rinse Tank
2	1	Tube, Dispersion Weldment
3	1	Tank, GP Rinse
4	1	Bracket, Upper Rinse Tank
5	1	Bracket, Lower Rinse Tank
6	1	Nipple, 3/4" NPT x 4" Long
7	3	Elbow, 3/4" NPT, 90° Brass
8	1	Nipple, 3/4" NPT x Closed Brass

Mfg. No.
05700-002-51-24
05700-002-46-16
05700-002-45-05
05700-002-67-13
05700-002-67-14
04730-207-05-00
04730-206-13-00
04730-207-34-00


SECTION 5: PARTS SECTION

RECIRCULATING PUMP ASSEMBLY (TS-44GP/TSC-44GP & TS-66GP/TSC-66GP)

Elbow, 3/4" 90° Brass
2 per
04730-207-34-00

Pump, Recirculating
05700-002-81-22


Nipple, 3/4" Close Brass
2 per
04730-207-34-00

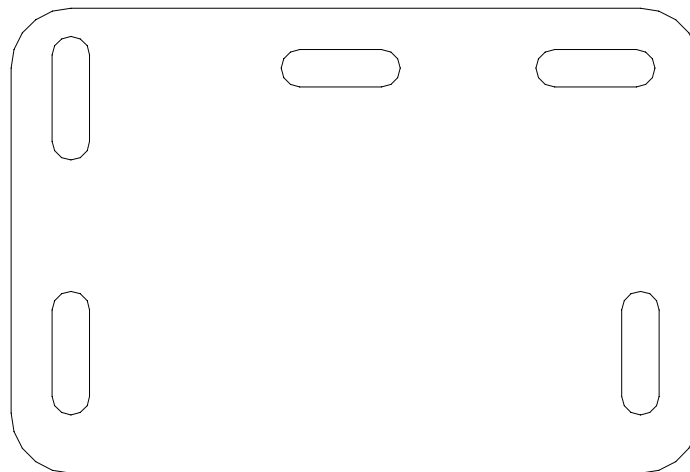


Mounting Bracket
05700-002-25-74

SECTION 5: PARTS SECTION


HOSE CONNECTIONS (GP MODELS ONLY)

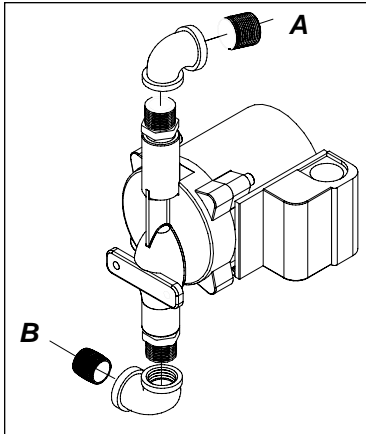


Recirculating Pump Assembly

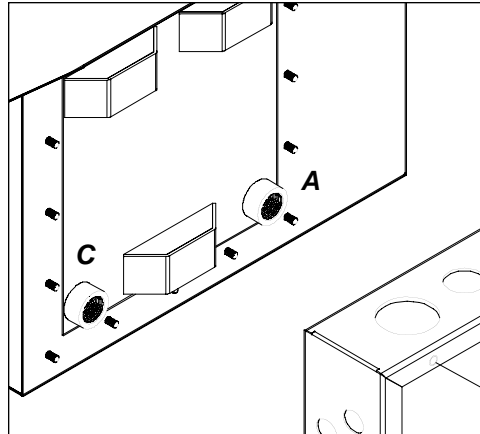


Gas Coil Weldment

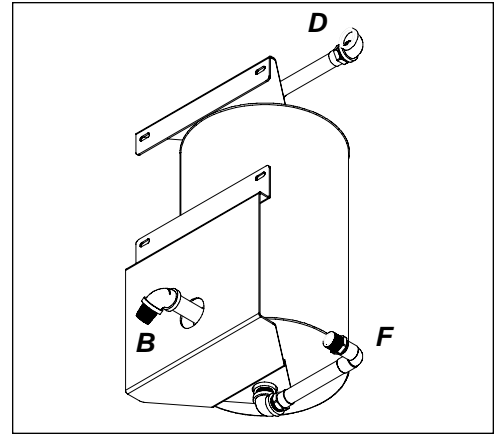

Rinse Booster Tank

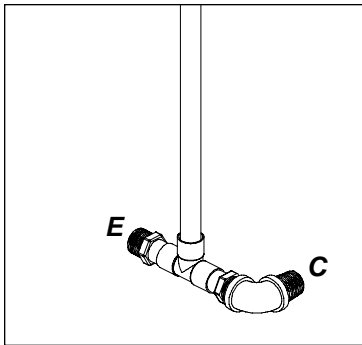

Rinse Header Plumbing Assembly

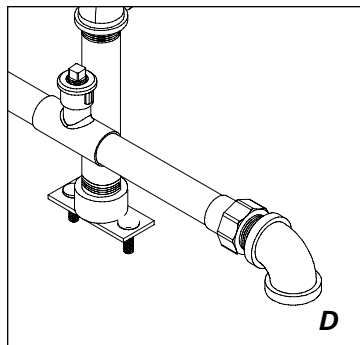

Wash/Fill Plumbing Assembly

HOSE ASSEMBLIES

TS-44CGP

TS-66CGP

*Each hose assembly includes 2, 3/4" Pushlock Fittings part number 4730-011-94-00.

A - Hose, Recirculating Discharge	05700-002-96-57	05700-002-52-74
B - Hose, Recirculating Pump Suction	05700-002-96-55	05700-002-52-75
C - Hose, Wash Coil Assembly	05700-002-52-76	05700-002-57-58
D - Hose, Wash/Fill Supply	05700-002-96-52	05700-002-57-58

E - Hose connection to existing gas booster outlet fitting.

F - Hose connection to existing gas booster inlet fitting.


Gas Booster Connection Kit 05700-002-96-59 includes:

18 Feet of 3/4" Hose

4 - 3/4" Push Lock Fittings

SECTION 5: PARTS SECTION


PREWASH INCOMING PLUMBING ASSEMBLY (TS-66/TSC-66 MODELS ONLY)

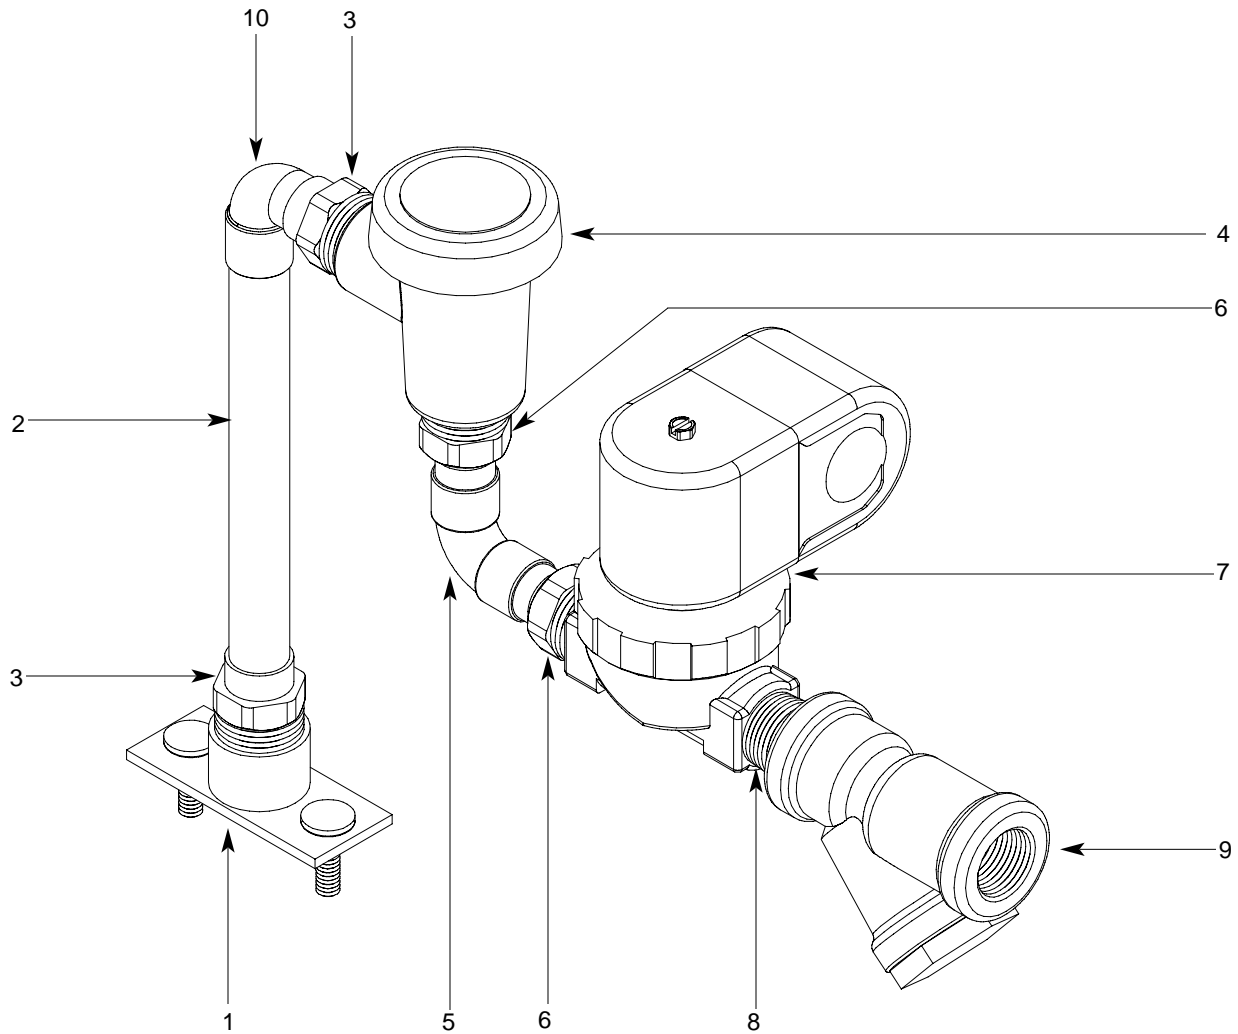

ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Fill Line Injector Weldment	05700-002-04-71
2	1	Tube, Copper, 1/2" x 5.645" Long	05700-002-04-90
3	2	Adapter, Male	04730-401-03-01
4	1	Vacuum Breaker	04820-003-06-13
5	1	Elbow, 607, 1/2" CTOC	04730-406-01-01
6	2	Adapter, 1/2" FTG x Male	04730-011-59-53
7	1	Valve, Solenoid, 1/2" NPT, 110 Volt	04810-100-12-18
8	1	Nipple, 1/2", Close, Brass	04730-207-15-00
9	1	Y-Strainer, 1/2" NPT	04730-217-01-10
10	1	Elbow, 1/2" S. CU to Ftg.	04730-406-31-01

SECTION 5: PARTS SECTION

INCOMING RINSE PLUMBING ASSEMBLIES

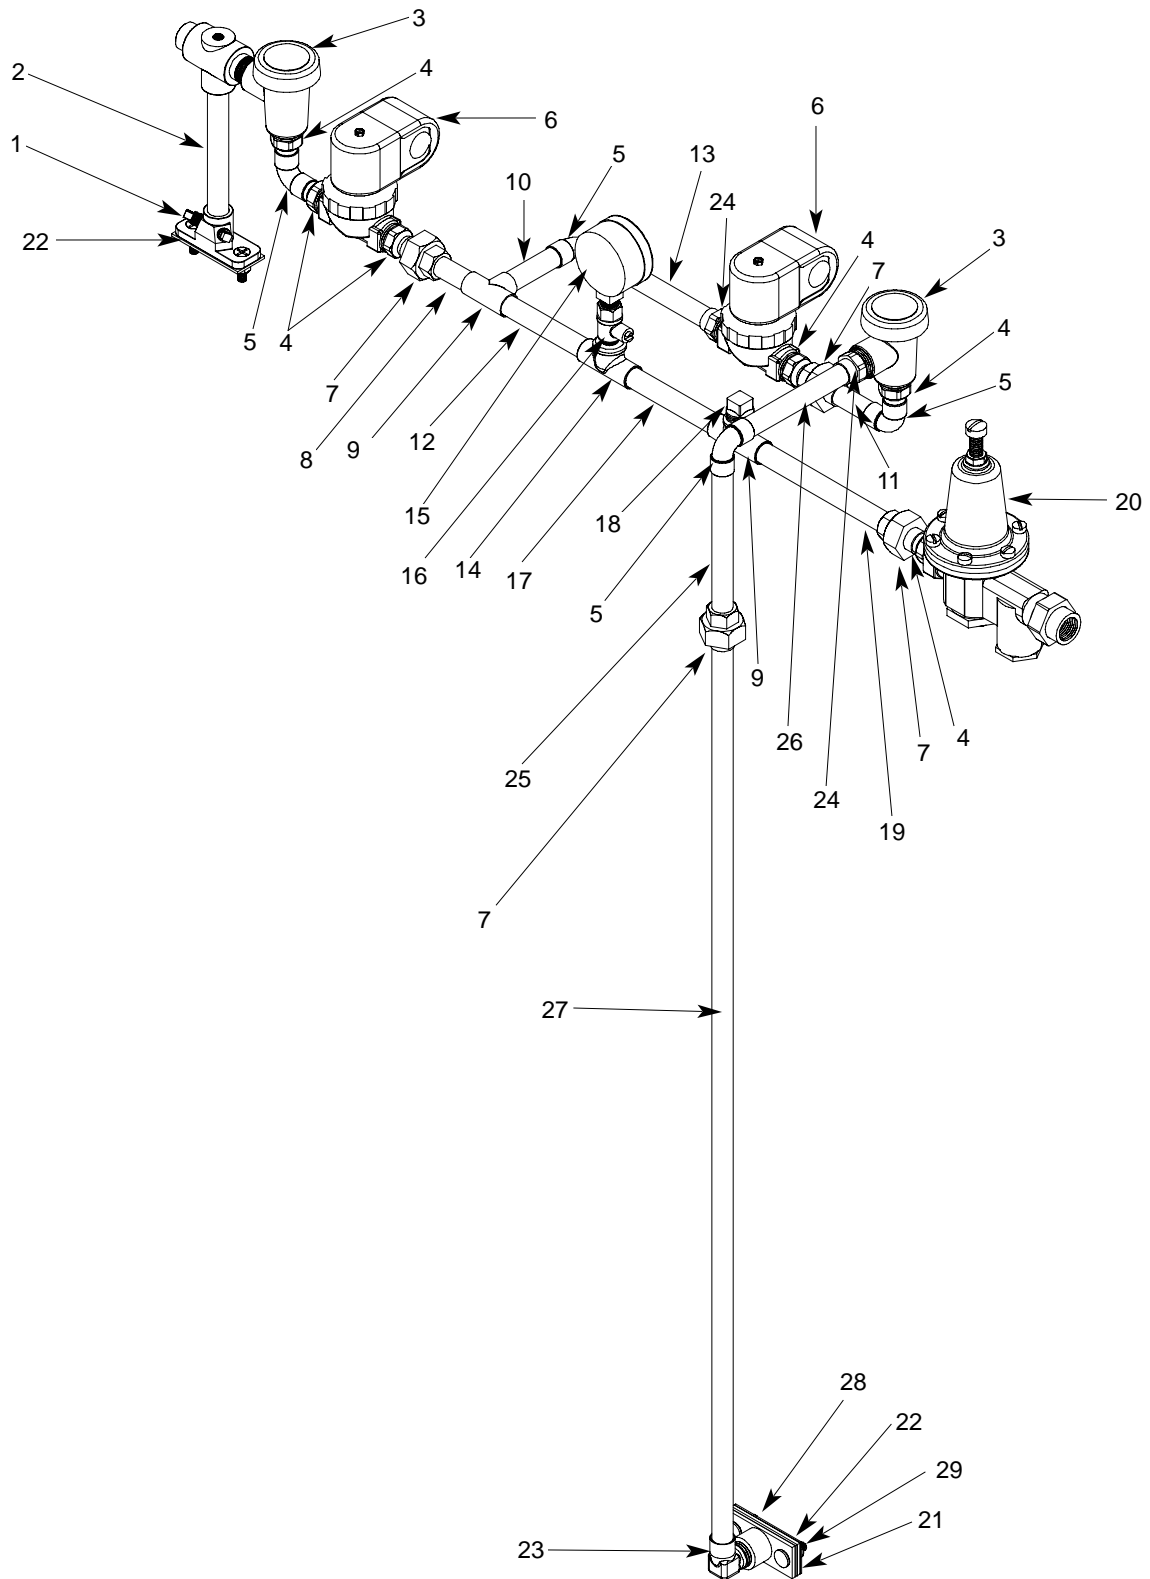


SECTION 5: PARTS SECTION
INCOMING PLUMBING ASSEMBLY (CONTINUED)

ITEM	QTY	DESCRIPTION	Mfg. No.
1	2	Plug, 1/8" NPT, Brass	04730-209-07-37
2	1	Rinse Injector Weldment	05700-002-03-42
	1	Gasket	05330-111-42-81
3	2	Vacuum Breaker, 1/2" NPT	04820-003-06-13
4	6	Adapter, 1/2" Fitting x Male	04730-011-59-53
5	3	Elbow, 607, 1/2" Copper to Copper	04730-406-01-01
6	2	Valve, Solenoid, 1/2" NPT, 110 Volt	04810-100-12-18
7	4	Union, 1/2", Copper to Copper	04730-412-05-01
7A	1	Restrictor, Rinse Flow (TSC models only)	05700-002-96-13
8	1	Tube, Copper, 1/2" x 2" Long	05700-001-04-66
9	1	Tee, Copper, 1/2"	04730-411-01-01
10	1	Tube, Copper, 1/2" x 3.06" Long	05700-002-04-91
11	1	Tube, Copper, 1/2" x 2.08" Long	05700-002-04-88
12	1	Tube, Copper, 1/2" x 4" Long	05700-002-04-87
13	1	Tube, Copper, 1/2" x 5.27" Long	05700-002-04-92
14	2	Tee, 1/2" x 1/2" x 1/4"	04730-411-25-01
15	1	Gauge, Pressure, 0-100 PSI	06685-111-88-34
	1	Decal, 15-25 PSI	09905-002-97-74
16	1	Test Cock, Valve, Ball, 1/4" NPT	04810-011-72-67
17	1	Tube, Copper, 1/2" x 4.185" Long	05700-002-04-89
18	1	Plug, 1/4" NPT, Brass	04730-209-01-00
19	1	Tube, Copper, 1/2" x 5.92" Long	05700-002-04-93
20	1	Regulator, Watts, 1/2" (Not used on GP units)	04820-100-04-07
20	1	Elbow, 90°, 1/2" Street Brass (GP units only)	04730-206-08-00
21	1	Fill Line Injector Weldment	05700-002-04-71
22	2	Gasket	05330-111-42-81
23	1	Elbow, 90° 1/2" Copper to MSPS	04730-406-32-01
24	2	Adapter, Male	04730-401-03-01
25	1	Tube, Copper, 1/2" x 5.75" Long	05700-002-91-03
26	1	Tube, Copper, 1/2" x 4.75" Long	05700-002-91-02
27	1	Tube, Copper, 1/2" x 33" Long	05700-002-91-04
28	1	Plate, Deflector	05700-002-62-49
29	1	Plate, Rinse Plumbing	05700-011-82-86

SECTION 5: PARTS SECTION


INCOMING PLUMBING ASSEMBLY (GP UNITS ONLY)

Complete Plumbing Assembly
05700-002-96-16

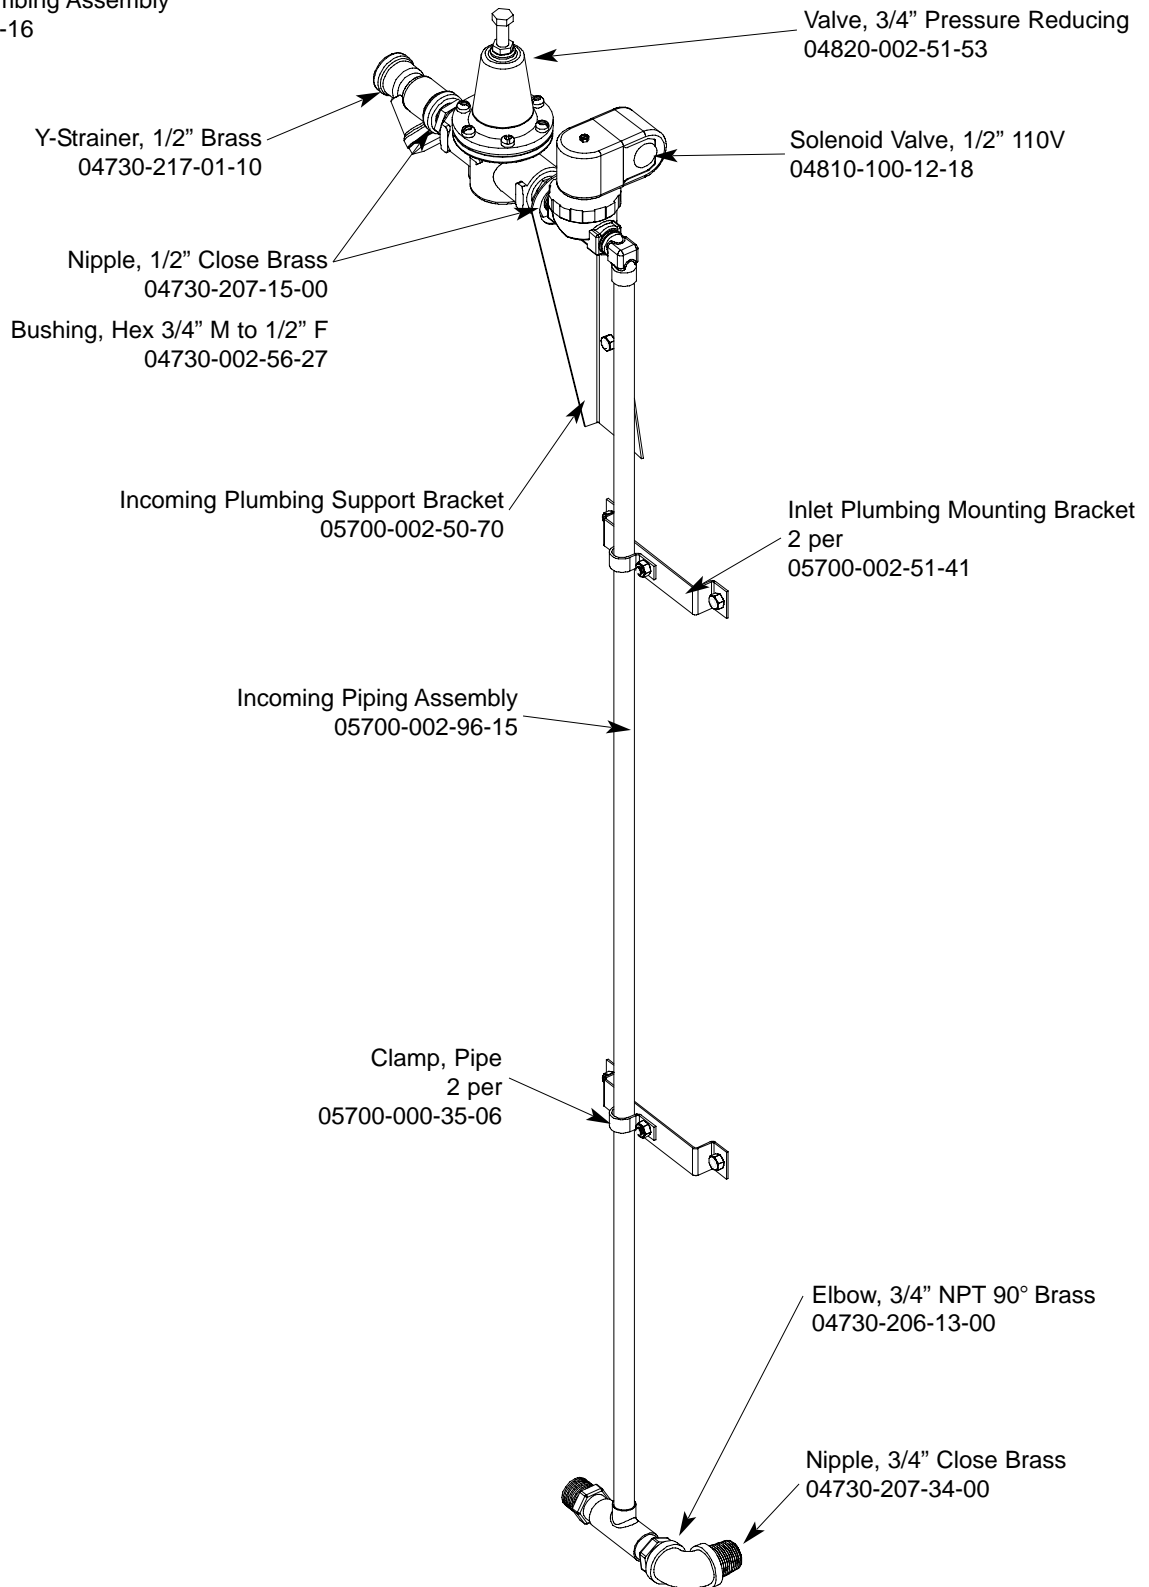


SECTION 5: PARTS SECTION

RINSE SOLENOID VALVE & VACUUM BREAKER REPAIR PARTS KITS

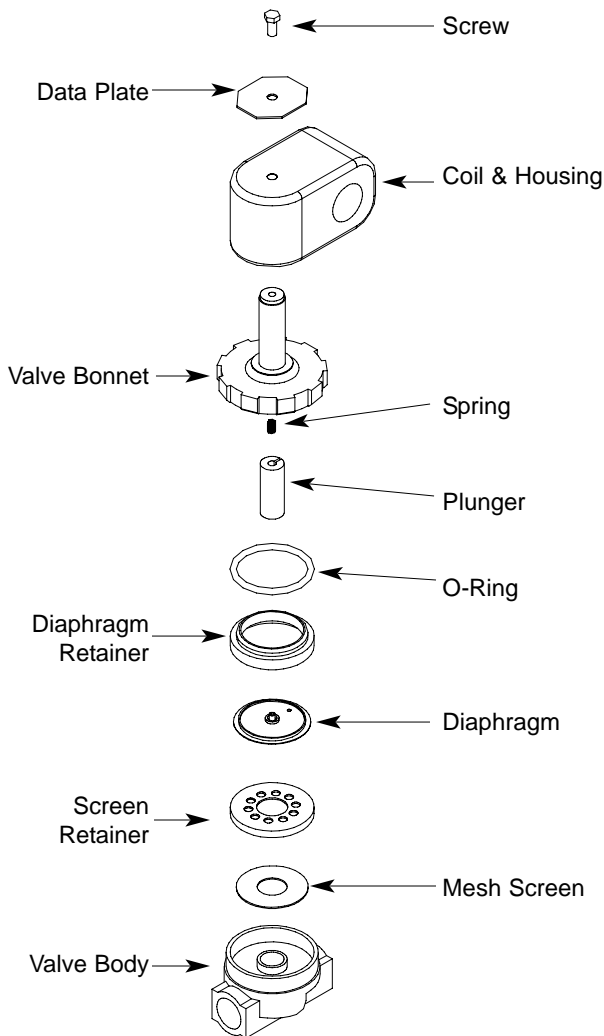

SPECIAL PARTS

- Solenoid Valve Plunger Kit
 - Includes plunger and spring
 - Part number 06401-003-07-40
- Solenoid Valve Diaphragm Kit
 - Includes diaphragm and o-ring
 - Part number 06401-003-07-41 (1/2" NPT)
- Solenoid Valve 110 Volt Coil and Housing Kit
 - Part number 06401-003-07-43
- Complete Solenoid Valve
 - Part number 04810-100-12-18 (1/2", 110 Volt)

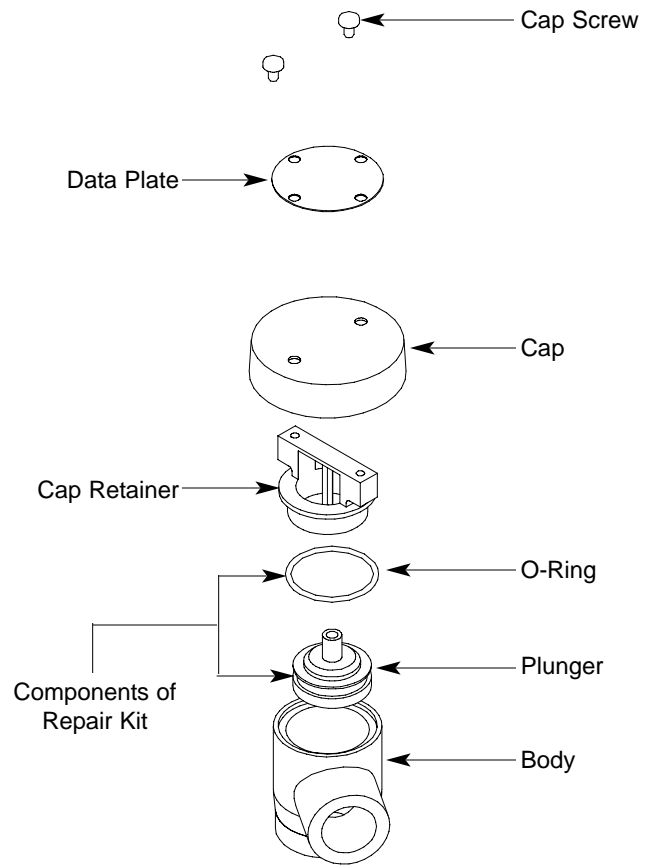


SPECIAL PARTS


- Vacuum breaker repair kit:
 - For 1/2" NPT order 06401-003-06-23
- Complete Vacuum Breaker Assembly
 - Part number 04820-003-06-13 (1/2")

SECTION 5: PARTS SECTION

FRAME WELDEMNTS/DRESS PANELS

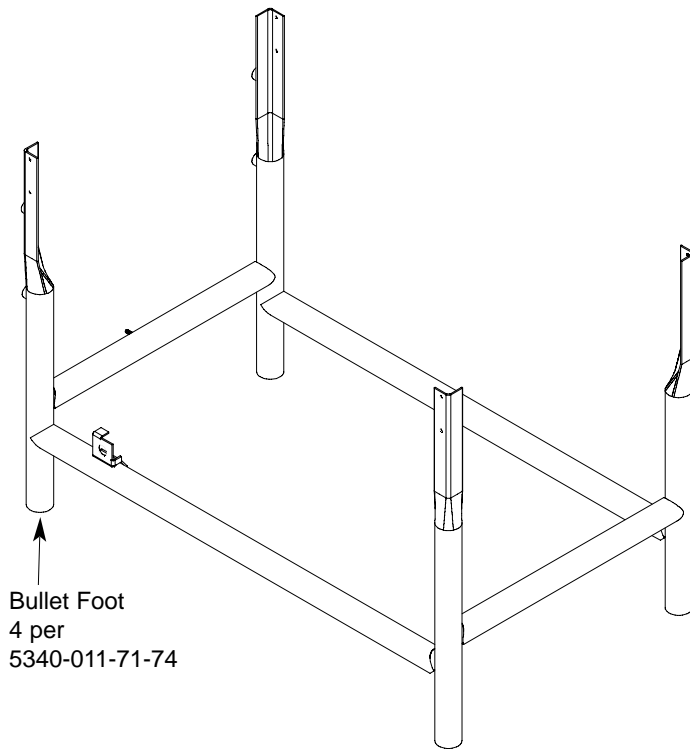

FRAME WELDMENT

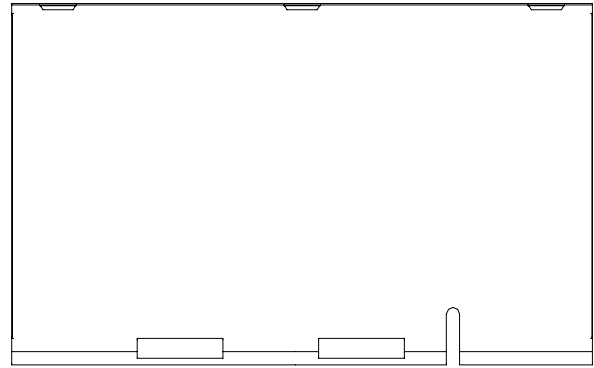

DRESS PANEL WELDMENT

FRAME WELDMENTS


<u>Model</u>	<u>Left to Right Part Number</u>	<u>Right to Left Part Number</u>
TS/TSC-44's	05700-031-67-15	05700-031-67-15
TS-TSC-44CGP's	N/A	05700-002-52-70
TS/TSC-66's	05700-002-49-28	N/A
TS/TSC-66CGP's	05700-002-49-28	05700-002-57-57

FRONT DRESS PANELS

<u>Model</u>	<u>Left to Right Part Number</u>	<u>Right to Left Part Number</u>
TS/TSC-44's	05700-031-72-22	05700-031-72-22
TS/TSC-44CGP	N/A	05700-002-52-77
TS/TSC-66's	05700-002-51-22	N/A
TS/TSC-66CGP's	05700-002-57-84	05700-002-57-84

SECTION 5: PARTS SECTION


TS-44/TSC-44 DRAIN PLUMBING ASSEMBLY

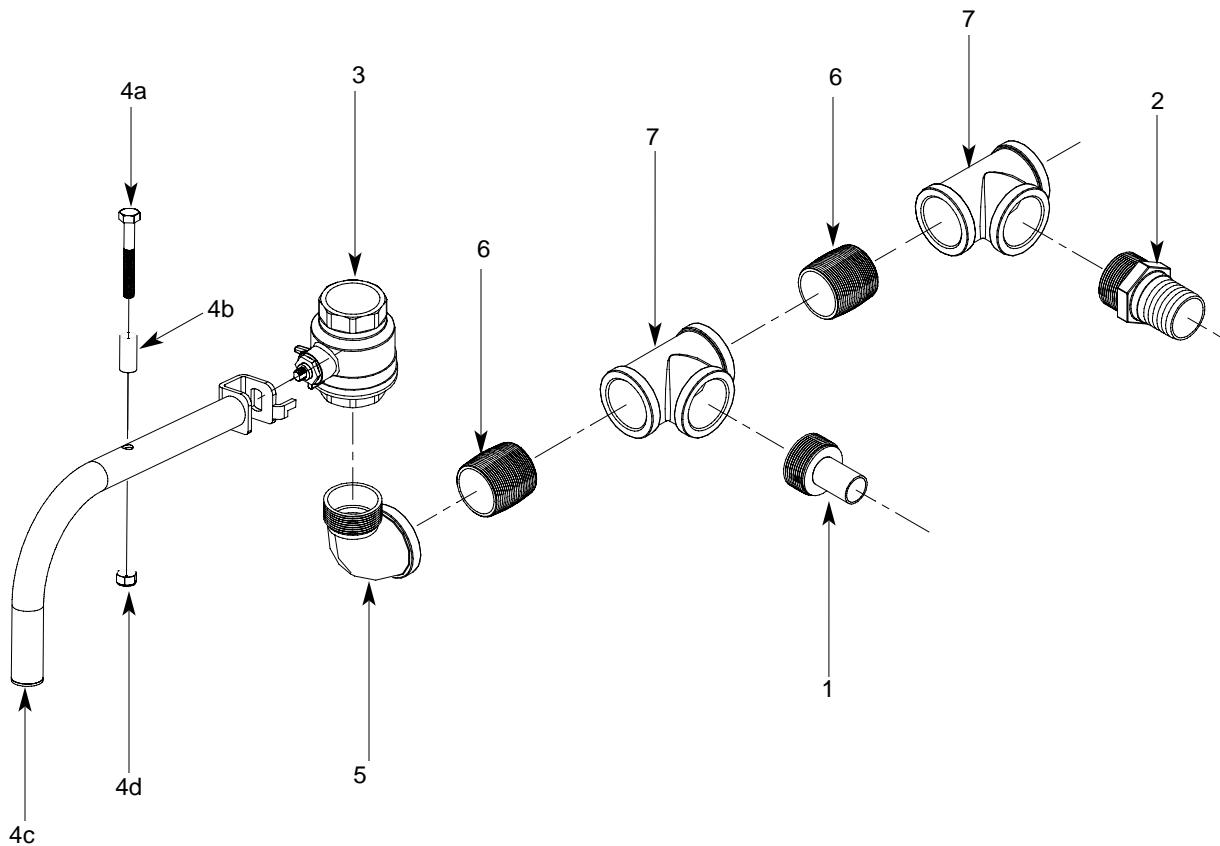

ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Rinse Nipple Weldment	05700-021-84-61
2	1	Barb, 1-1/2" NPT x 1-1/2" Barb	04730-011-69-92
3	1	Ball Valve, 1-1/2" NPT	04820-111-71-46
4	1	Ball Valve Handle Assembly	05700-021-84-74
4a	1	Bolt, 1/4"-20 x 2" Long	05306-011-84-72
4b	1	Sleeve	05700-000-01-53
4c	1	Ball Valve Handle Weldment	05700-021-70-54
4d	1	Locknut, 1/4"-20 with Nylon Insert	05310-374-01-00
5	1	Elbow, Brass, Street, 1-1/2" NPT	04730-206-32-00
6	2	Nipple, Brass, Close, 1-1/2" NPT	04730-207-40-00
7	2	Tee, Brass, 1-1/2" x 1-1/2" x 1-1/2"	04730-011-69-93

SECTION 5: PARTS SECTION


TS-66/TSC-66 (LEFT TO RIGHT) DRAIN PLUMBING ASSEMBLY

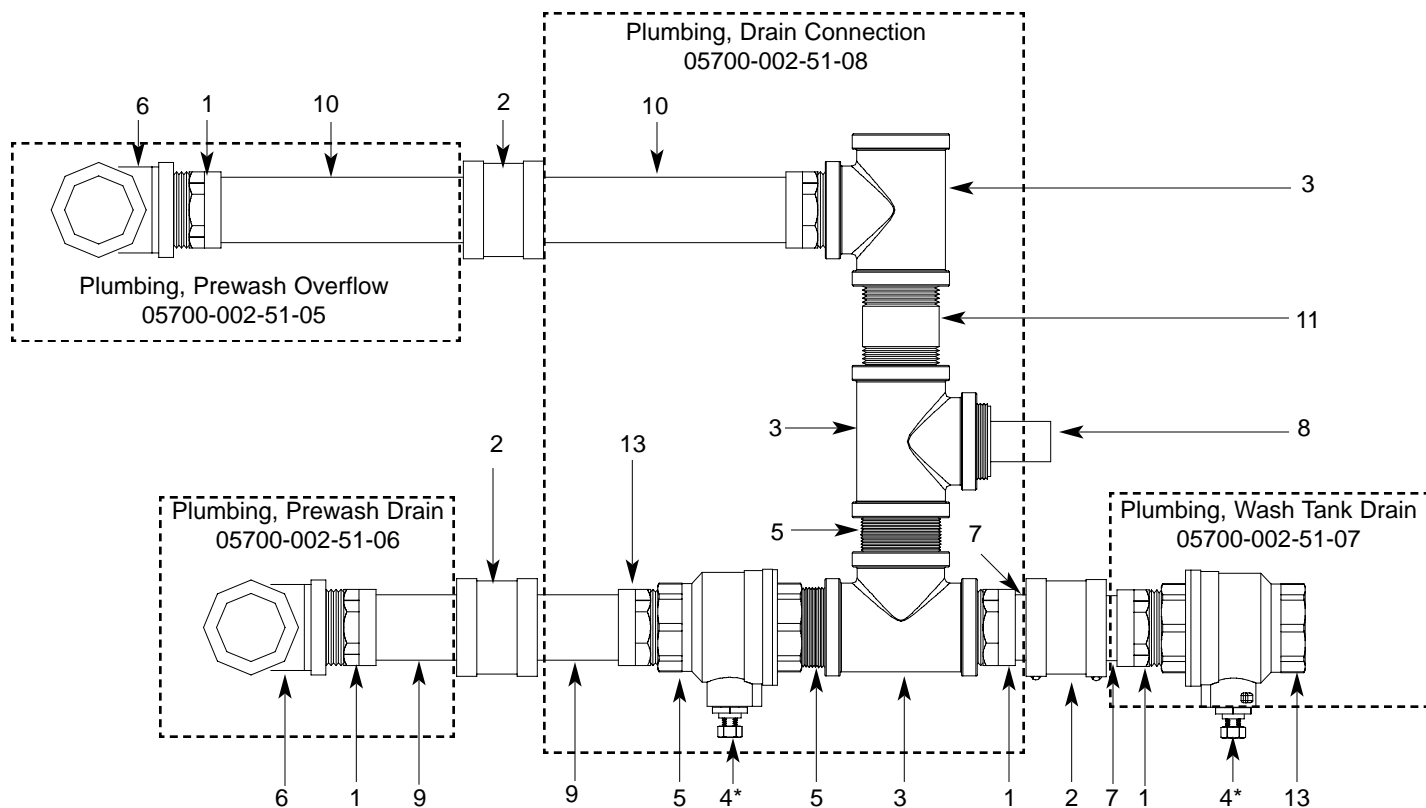

ITEM	QTY	DESCRIPTION	Mfg. No.
1	6	Adapter, Male to Female, 1-1/2"	04730-401-25-01
2	3	No-Hub Connector	04720-604-06-00
3	3	Tee, Brass, 1-1/2" FNPT	04730-011-69-93
4	2	Ball Valve, 1-1/2" FNPT	04820-011-71-46
*	2	Valve Handle Weldment Assembly (Not Shown)	05700-021-84-74
5	2	Nipple, Brass, Close, 1-1/2" NPT	04730-207-40-00
6	2	Elbow, Brass, 90°, 1-1/2" FNPT	04730-011-73-77
7	2	Tube, Copper, 1-1/2" x 1-3/4" Long	05700-000-75-57
8	1	Rinse Nipple Weldment	05700-021-84-61
9	2	Tube, Copper, 1-1/2" x 3-1/2" Long	05700-011-84-23
10	2	Tube, Copper, 1-1/2" x 7-1/2" Long	05700-002-50-98
11	1	Nipple, Brass, 1-1/2" NPT x 3" Long	04730-011-87-04
	1	Entire Assembly	05700-002-50-95

SECTION 5: PARTS SECTION


TS-66/TSC-66 (RIGHT TO LEFT) DRAIN PLUMBING ASSEMBLY

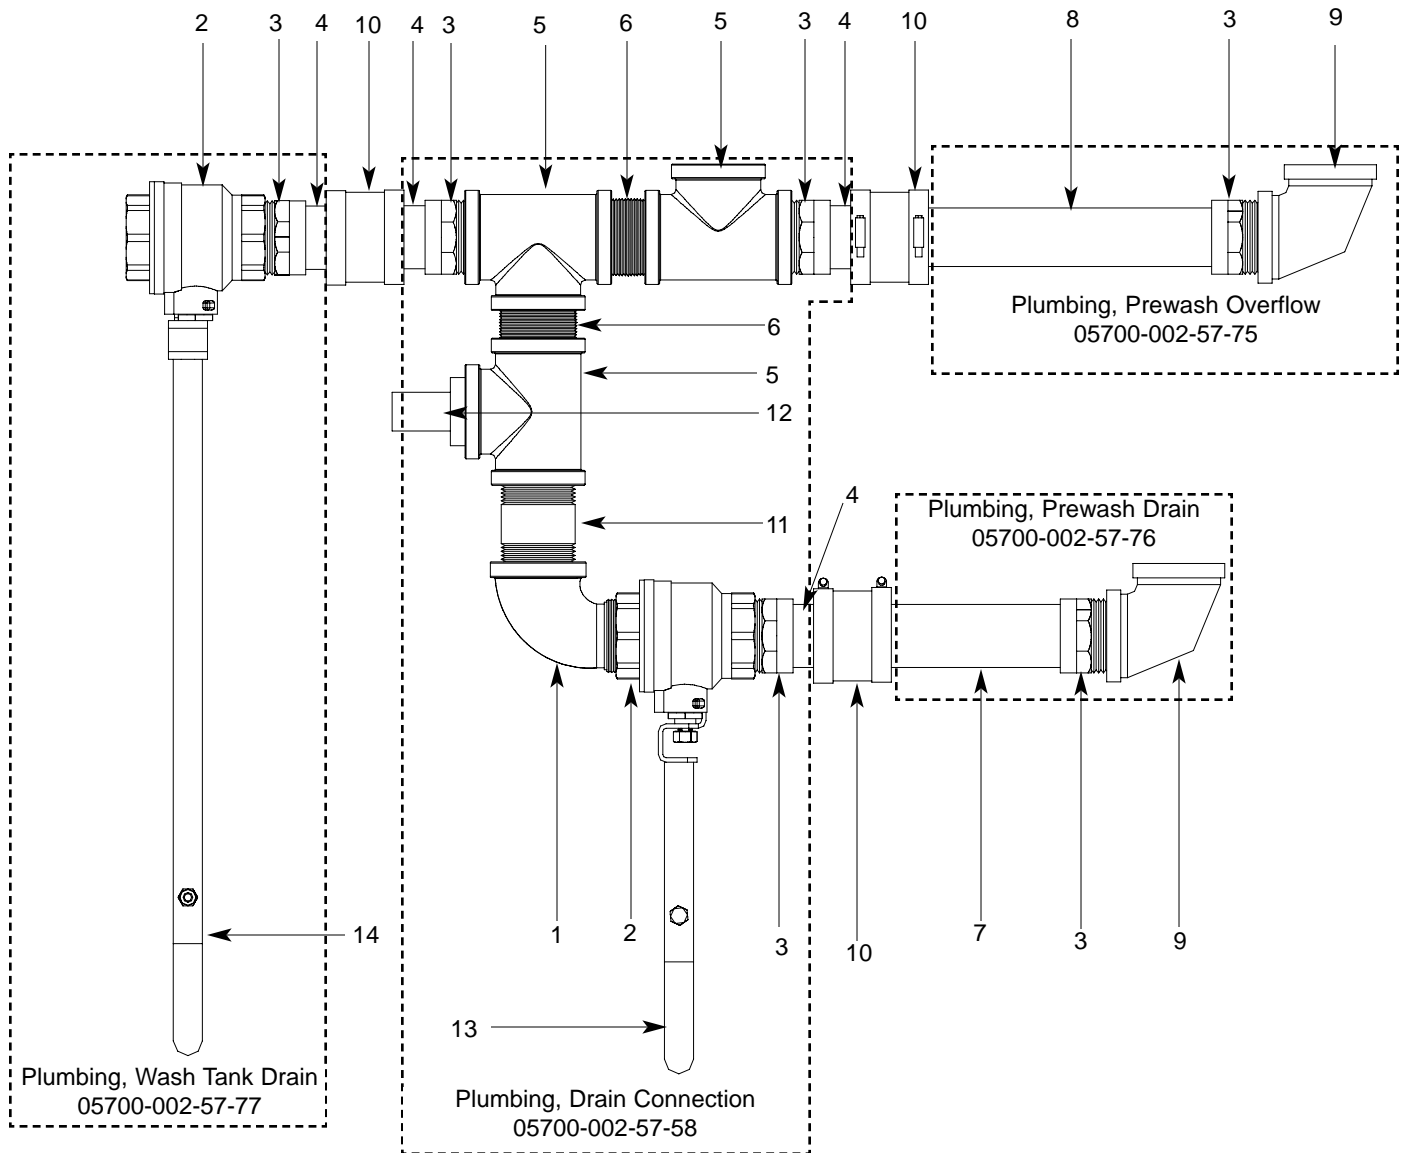


ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Elbow, 1-1/2" NPT, Brass, Street	04730-206-32-00
2	2	Valve, Ball, 1-1/2" FNPT	04820-011-71-46
3	6	Adapter, Male to Female, 1-1/2"	04730-401-25-01
4	4	Tube, Copper, 1-1/2" x 1-7/8" Long	05700-002-57-93
5	3	Tee, Brass, 1-1/2" FNPT	04730-011-69-93
6	2	Nipple, Brass, 1-1/2" NPT, Close	04730-207-40-00
7	1	Tube, Copper, 1-1/2" x 5-3/16" Long	05700-002-57-92
8	1	Tube, Copper, 1-1/2" x 8-1/8" Long	05700-021-70-06
9	2	Elbow, Brass, 90°, 1-1/2" FNPT	04730-011-73-77
10	3	No-Hub Connector	04720-604-06-00
11	1	Nipple, Brass, 1-1/2" NPT x 3" Long	04730-011-87-04
12	1	Rinse Nipple Weldment	05700-021-84-61
13	1	Valve Handle Weldment Assembly	05700-021-84-74
14	1	Valve Handle Weldment Assembly	05700-002-57-83

SECTION 5: PARTS SECTION

TS-66/TSC-66 (RIGHT TO LEFT WITH LOADER) DRAIN PLUMBING ASSEMBLY

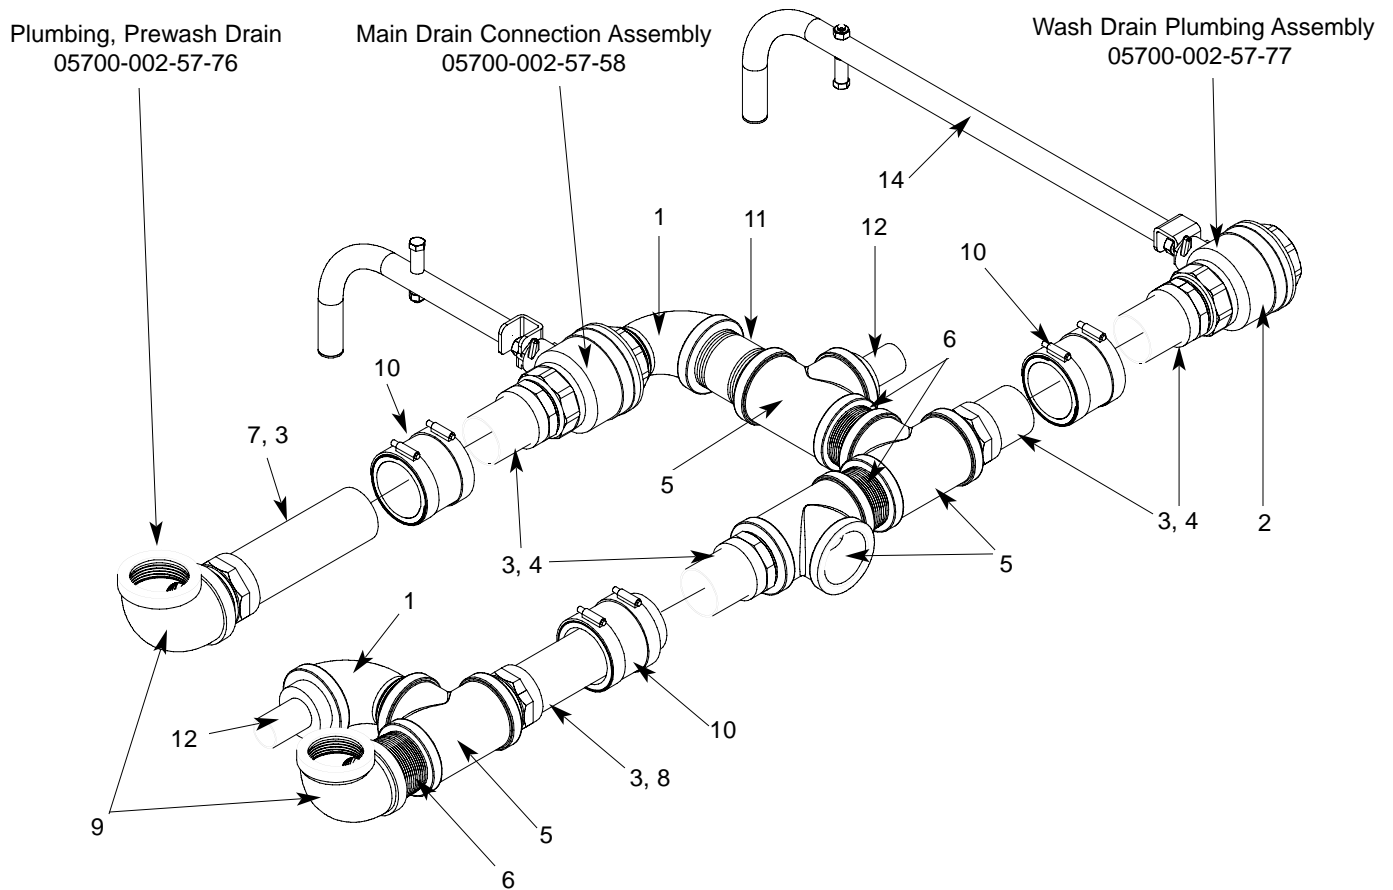


ITEM	QTY	DESCRIPTION	Mfg. No.
1	2	Elbow, 1-1/2" NPT, Brass, Street	04730-206-32-00
2	2	Valve, Ball, 1-1/2" FNPT	04820-011-71-46
3	6	Adapter, Male to Female, 1-1/2"	04730-401-25-01
4	4	Tube, Copper, 1-1/2" x 1-7/8" Long	05700-002-57-93
5	4	Tee, Brass, 1-1/2" FNPT	04730-011-69-93
6	3	Nipple, Brass, 1-1/2" NPT, Close	04730-207-40-00
7	1	Tube, Copper, 1-1/2" x 5-3/16" Long	05700-002-57-92
8	1	Tube, Copper, 1-1/2" x 3-1/2" Long	05700-011-84-23
9	2	Elbow, Brass, 90°, 1-1/2" FNPT	04730-011-73-77
10	3	No-Hub Connector	04720-604-06-00
11	1	Nipple, Brass, 1-1/2" NPT x 3" Long	04730-011-87-04
12	2	Rinse Nipple Weldment	05700-021-84-61
13	1	Valve Handle Weldment Assembly	05700-021-84-74
14	1	Valve Handle Weldment Assembly	05700-002-57-83

 

SECTION 5: PARTS SECTION

MOTOR ASSEMBLIES

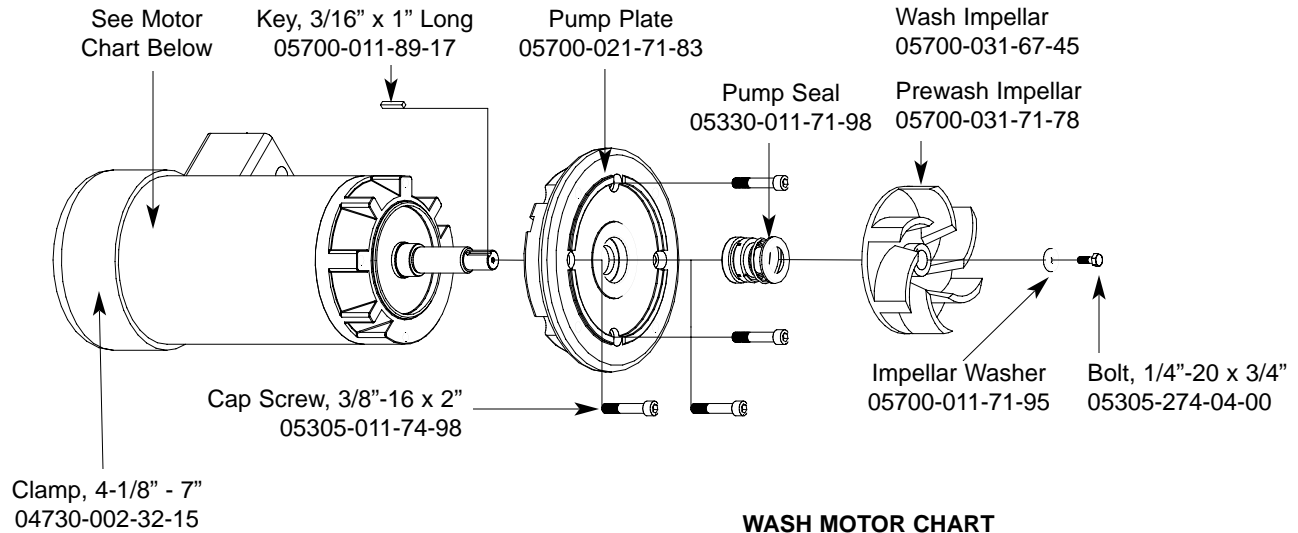


WASH MOTOR CHART

Volts	Phase	Hz	Part Number	Kit Part Number
208 - 230	1	60	06105-021-70-57	06401-003-09-97
200 - 230	3	60	06105-121-70-58	06401-003-09-98
460	3	60	06105-121-70-58	06401-003-09-98
600	3	60	06105-002-48-31	06401-003-09-99

PREWASH MOTOR CHART(TS/TSC-66 ONLY)


Volts	Phase	Hz	Part Number	Kit Part Number
208-230	1	60	06105-121-70-55	06401-003-10-40
200-230	3	60	06105-121-70-56	06401-003-10-38
460	3	60	06105-121-70-56	06401-003-10-38
600	3	60	06105-002-48-31	06401-003-10-41

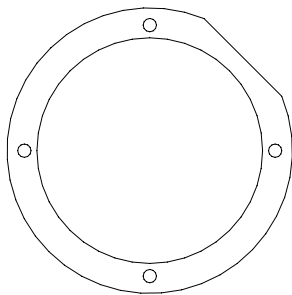


Motor Mounting Gasket
05330-011-71-62

Model(s)

Wash Motor Support Bracket
05700-002-57-10

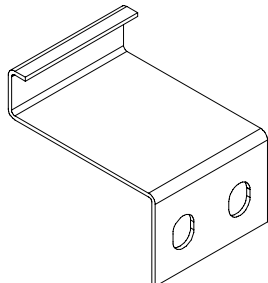


Prewash Motor Support Bracket
Complete Assembly
05700-021-73-42

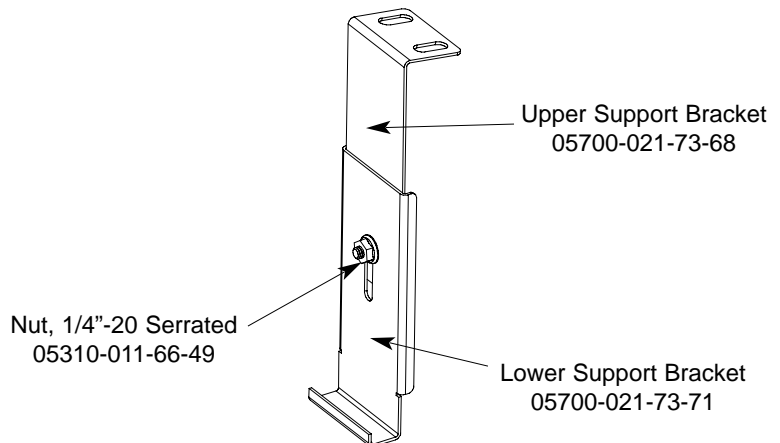


SECTION 5: PARTS SECTION

PREWASH & WASH PUMP WELDMENTS


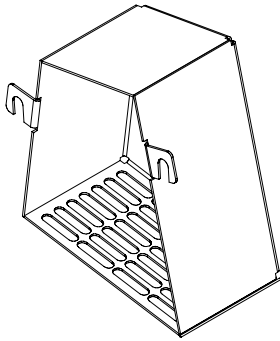


Intake Suction Scoop Weldment
05700-021-87-60


Prewash Intake
Strainer Weldment
05700-021-74-96

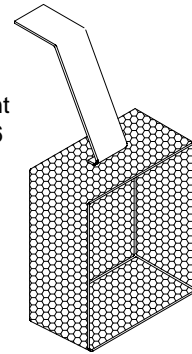

Prewash Strainer
Bracket
05700-021-74-94

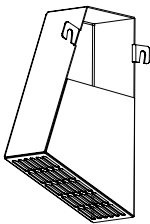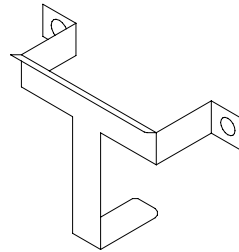


Scoop, Intake Suction Wash
Weldment
05700-002-51-20

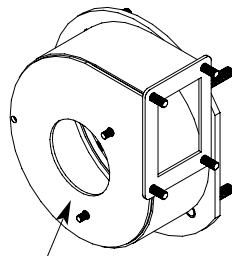


Wash Pump Weldment
05700-002-50-92


Gasket
05330-002-54-55

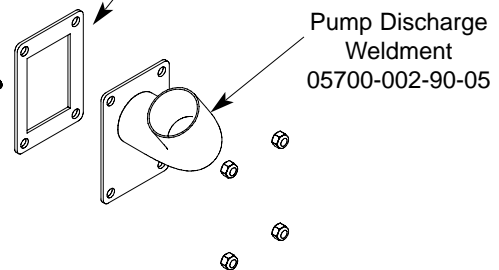

Pump Discharge
Weldment
05700-002-90-05

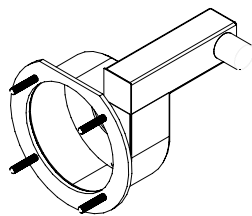


Prewash Pump Weldment
Left to Right
05700-002-43-56

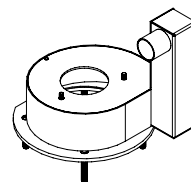

Prewash Pump Weldment
Right to Left
05700-002-42-69

SECTION 5: PARTS SECTION

PREWASH ARM/MANIFOLD ASSEMBLY (TS-66/TSC-66 MODELS ONLY)

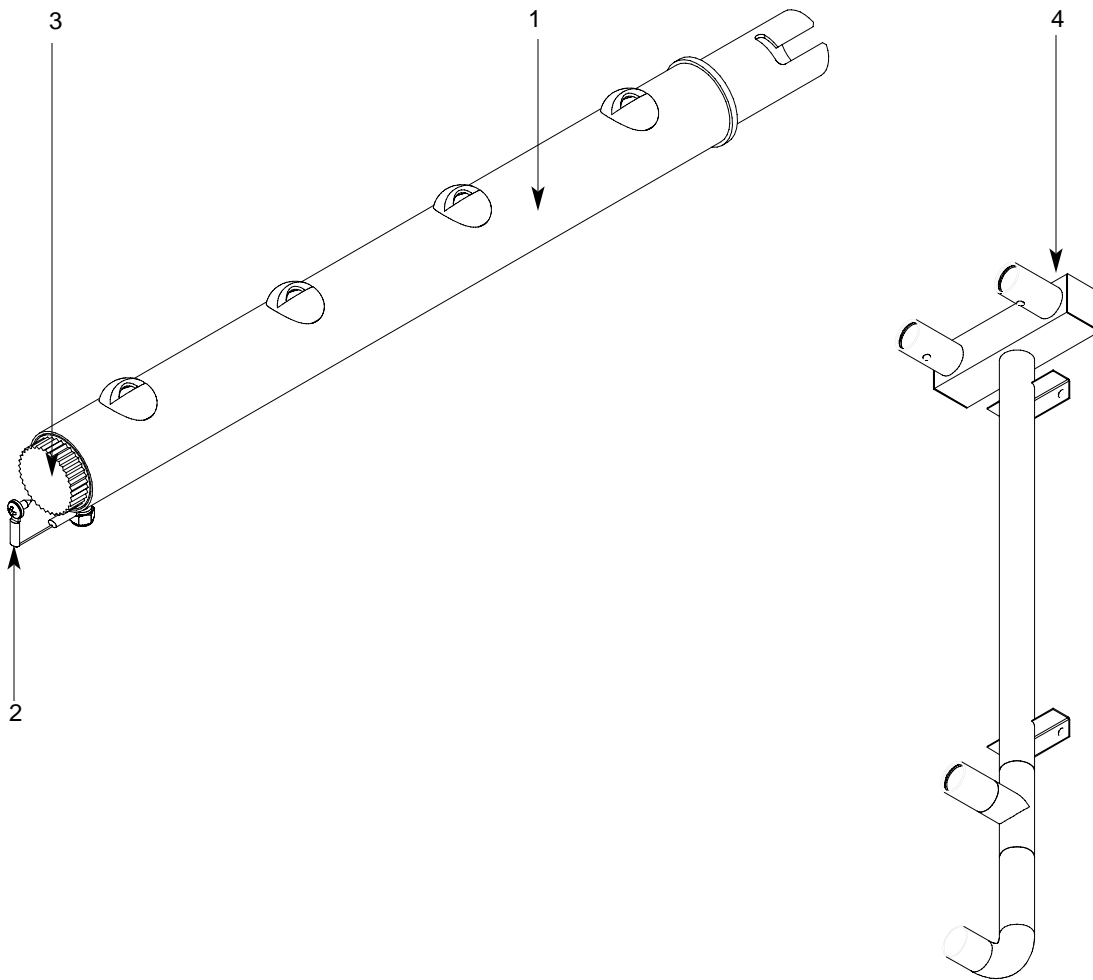


SERVICE NOTE: When replacing the 10-32 screws in the End Caps, it is recommended that a thread locking fluid be used to ensure that the screws do not back out during normal operation.

ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Wash Arm Weldment	05700-002-95-25
2	1	Lanyard	05340-011-72-46
3	1	Cap, Threaded	05700-011-67-11
		Items 1 through 3 + Hardware	05700-002-95-19
	1	O-ring (Not Shown)	05330-400-12-08
4	1	Prewash Manifold Weldment	05700-003-01-66

SECTION 5: PARTS SECTION


WASH ARM/MANIFOLD ASSEMBLY

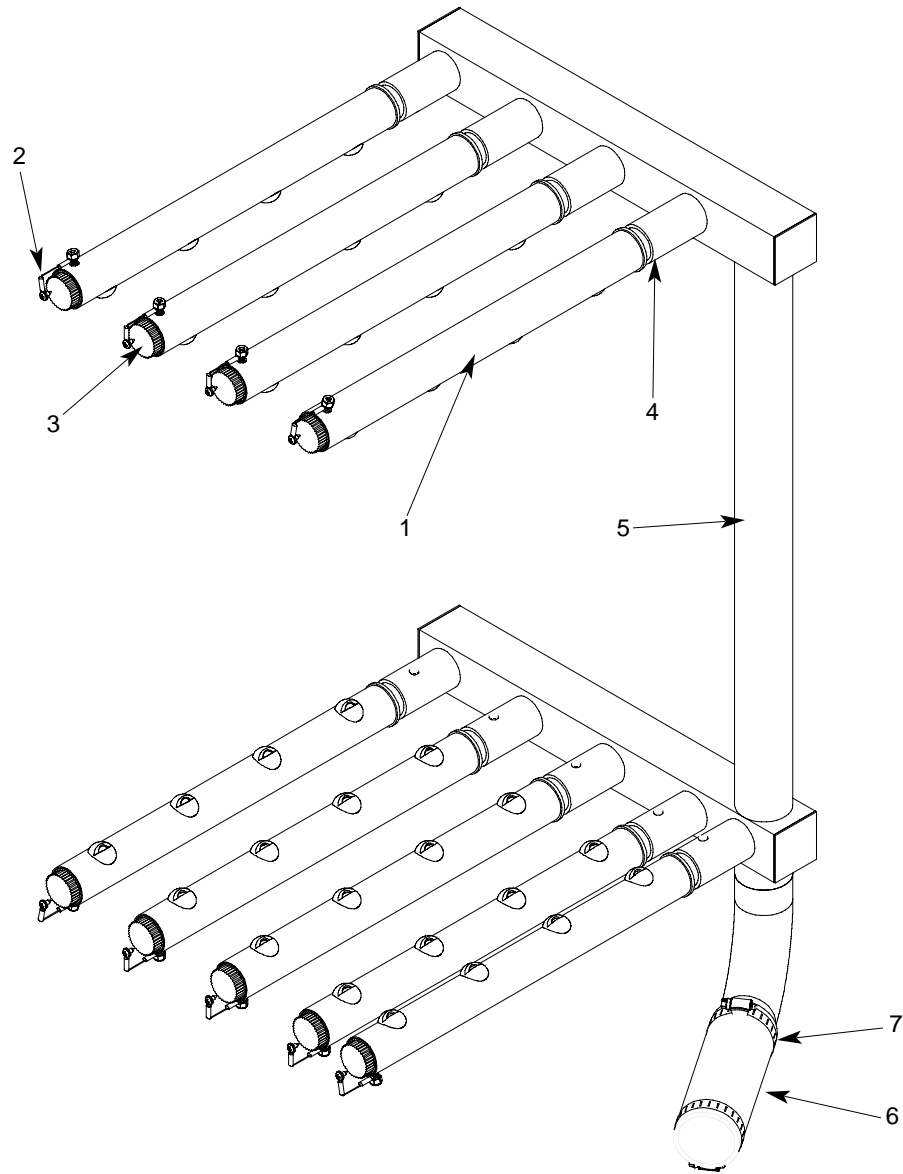

ITEM	QTY	DESCRIPTION	Mfg. No.
		Items 1 through 3 + Hardware	05700-002-95-19
1	9	Wash Arm Weldment	05700-002-95-25
2	9	Lanyard	05340-011-72-46
3	9	Cap, Threaded	04730-603-12-00
4	9	O-ring	05330-400-12-08
5	1	Wash Manifold Weldment	
		Left to Right, Tall	05700-002-95-20
		Right to Left, Tall	05700-002-95-66
		Left to Right, Short	05700-002-95-69
		Right to Left, Short	05700-002-95-70
6	1	Hose, 2" X 6.75" Manifold Pump	05700-002-90-79
7	2	Clamp, Hose 1-9/16" TO 2-1/2"	04730-011-34-89

SECTION 5: PARTS SECTION

FINAL RINSE ASSEMBLY

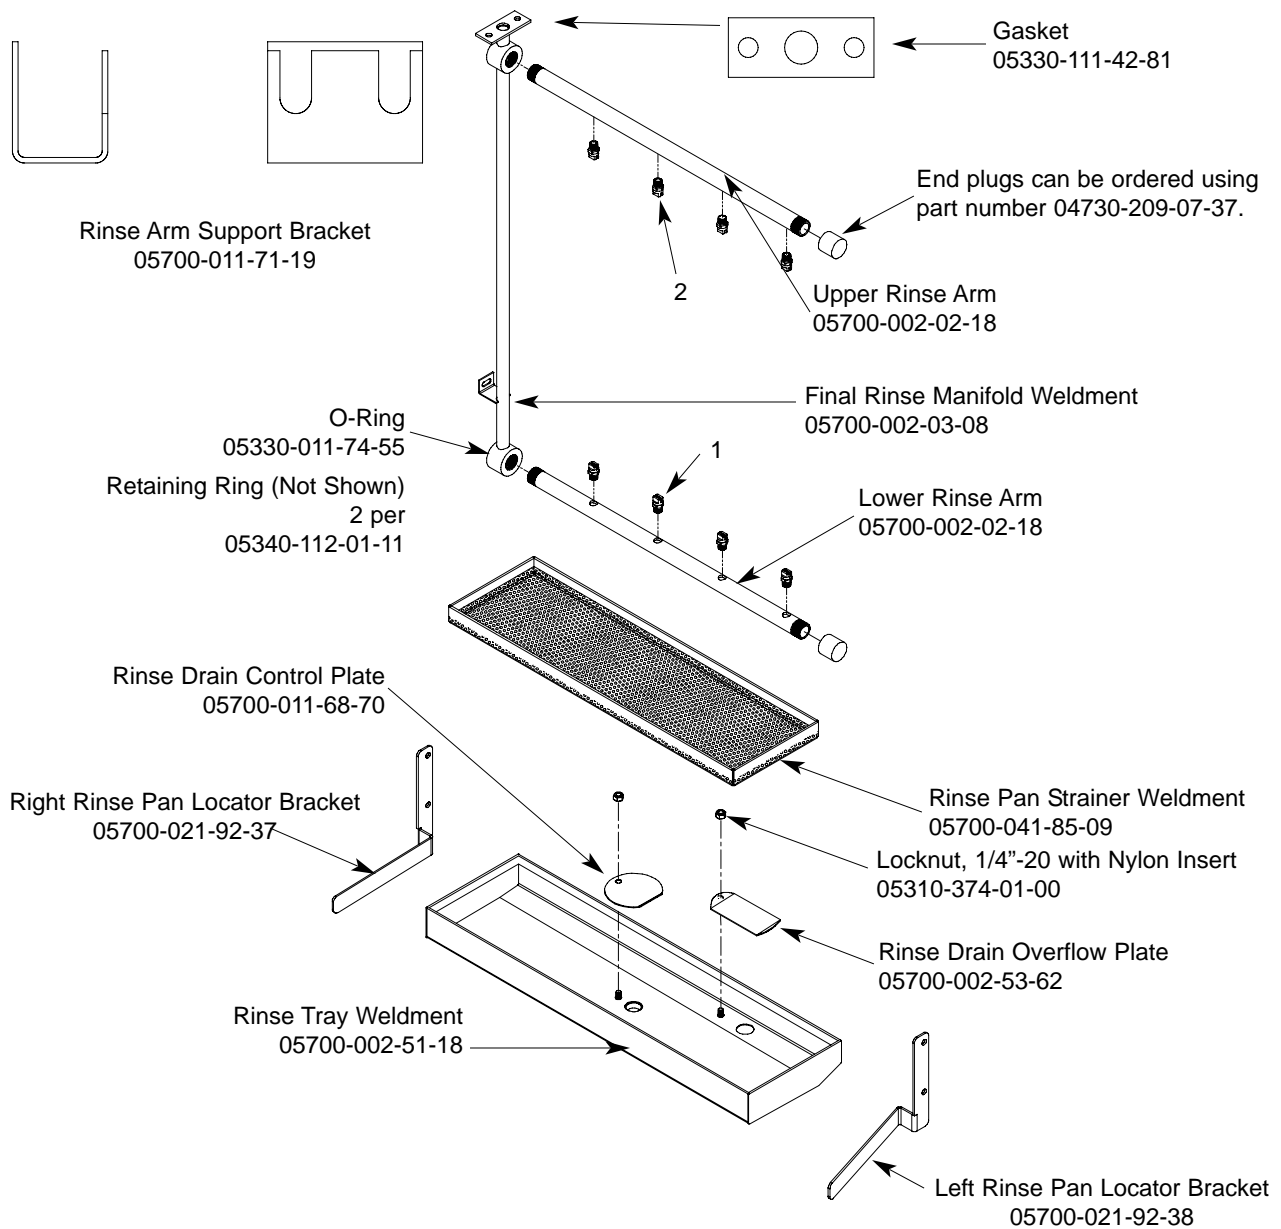

ITEM	QTY	DESCRIPTION	Mfg. No.
1	4	Lower Rinse Nozzle (TS-Series)	05700-002-96-04
1	4	Lower Rinse Nozzle (TSC-Series)	04730-002-73-31
2	4	Upper Rinse Nozzle (TS-Series)	05700-002-03-13
2	4	Upper Rinse Nozzle (TSC-Series)	04730-002-73-31



SECTION 5: PARTS SECTION

PAWL BAR ROLLER BRACKET


Pawl Bar Roller Replacement Kit
06401-003-11-80

Replacement Kit Notes:


The replacement kit for the pawl bar roller comes with the roller, roller shaft, hardware and locknut as shown.

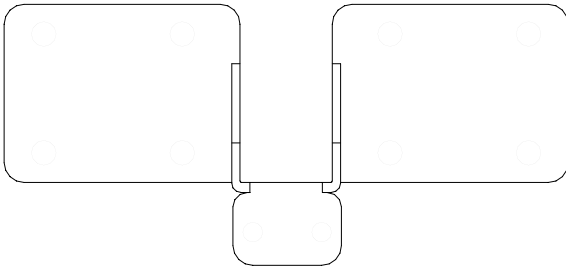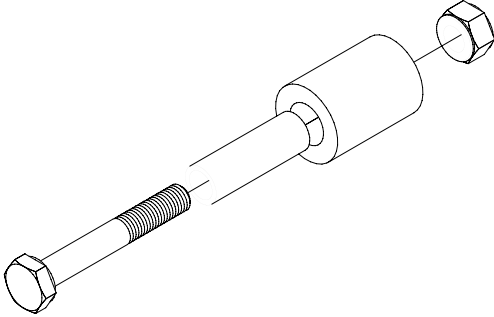

Pawl Bar Bracket (without tabs) Weldment
05700-031-92-36

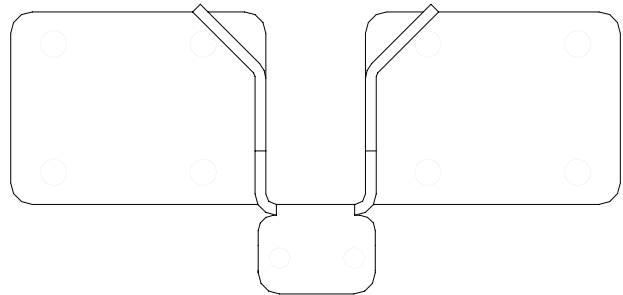


Pawl Bar Bracket (with studs) Weldment
05700-031-84-68

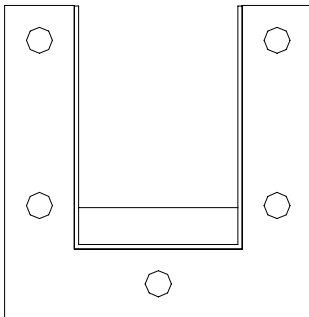


Pawl Bar Gutter Weldment Replacement Kit
06401-003-09-95

Replacement Kits Notes:

The pawl bar gutter weldment replacement kit contains the weldment, a gasket and the mounting hardware. The guide block kit contains both blocks and a gasket.

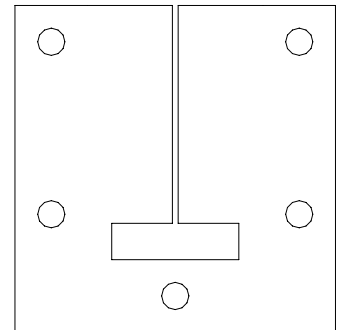


Pawl Bar Gutter Gasket
05330-011-68-55

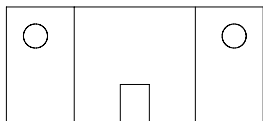

Top Guide Block

Guide Block Replacment Kit
06401-003-10-15

Bottom Guide Block

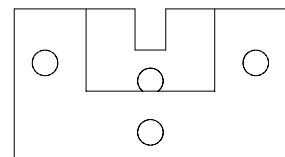

Service Note: It is highly recommended that when changing out one guide block, that the other be changed out as well, along with the gasket.

SECTION 5: PARTS SECTION

PAWL BAR ASSEMBLIES

Pawl Bar Dog Casting
TS-44 12 per, TSC-44 6 per
05700-021-69-00

TS-44 Complete Assembly with Hardware
06401-131-81-00

TS-44 Prison Assembly with Hardware
06401-231-81-00

TSC-44 Complete Assembly with Hardware
05700-002-03-24

Pawl Bar Spacer
24 per
05700-011-71-45

TS-44 Pawl Bar Weldment
05700-031-72-77

TSC-44 Pawl Bar Weldment
05700-002-03-25

AJ-66T Complete Assembly with Hardware
06401-141-74-64

AJ-66T Prison Assembly with Hardware
06401-241-74-64


Pawl Bar Dog Casting
18 per
05700-021-69-00

Pawl Bar Spacer
36 per
05700-011-71-45

Pawl bar Weldment
05700-031-72-78

SECTION 5: PARTS SECTION

TS/TSC-44 RACK RAIL ASSEMBLY

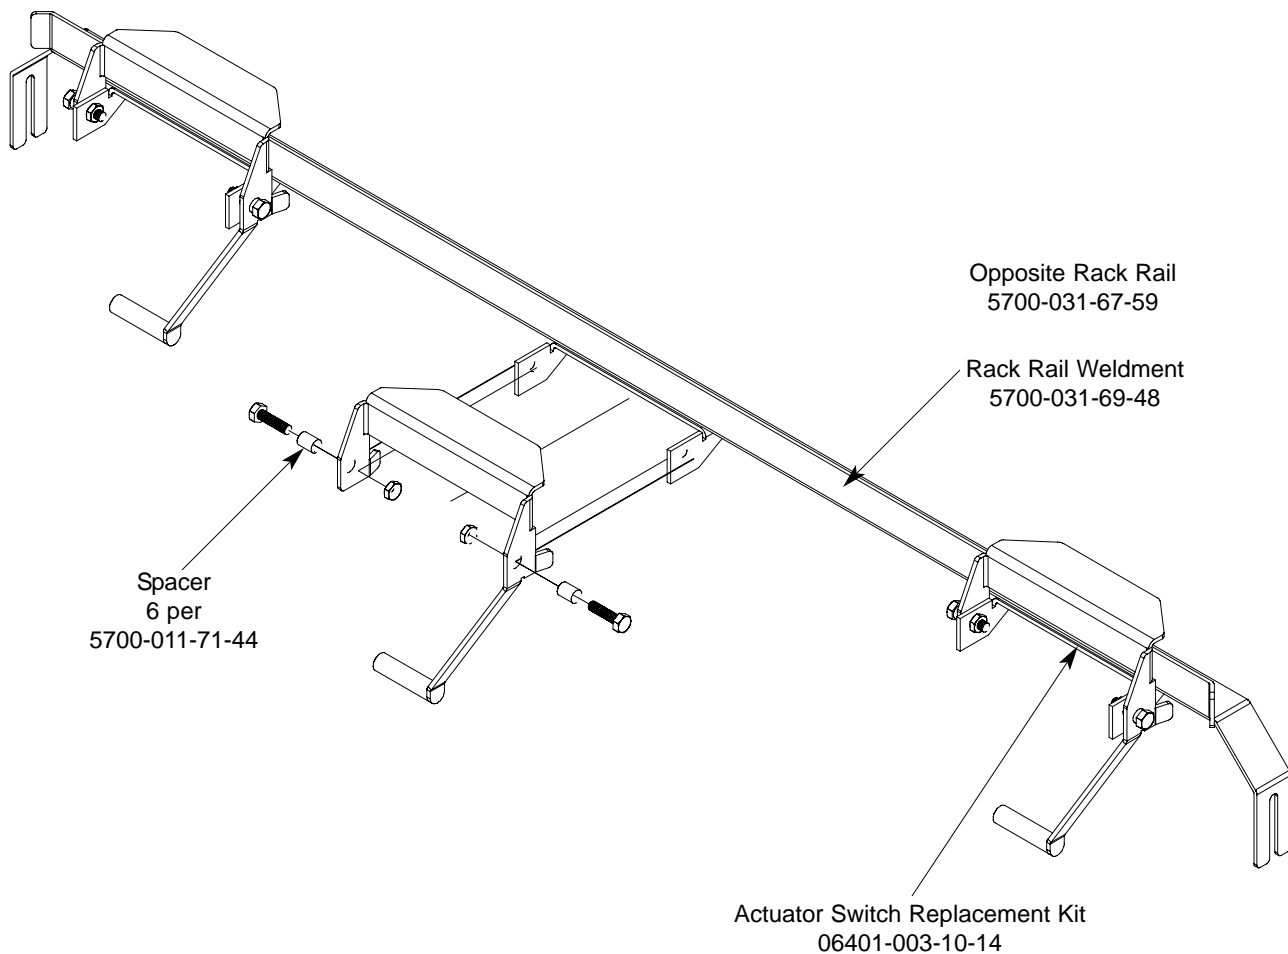


Replacement Kit Note:

The replacement kit for the actuator switch comes with the switch, two spacers and the mounting hardware.


SECTION 5: PARTS SECTION

AJ-66 RACK RAIL ASSEMBLIES

Left to Right Assembly

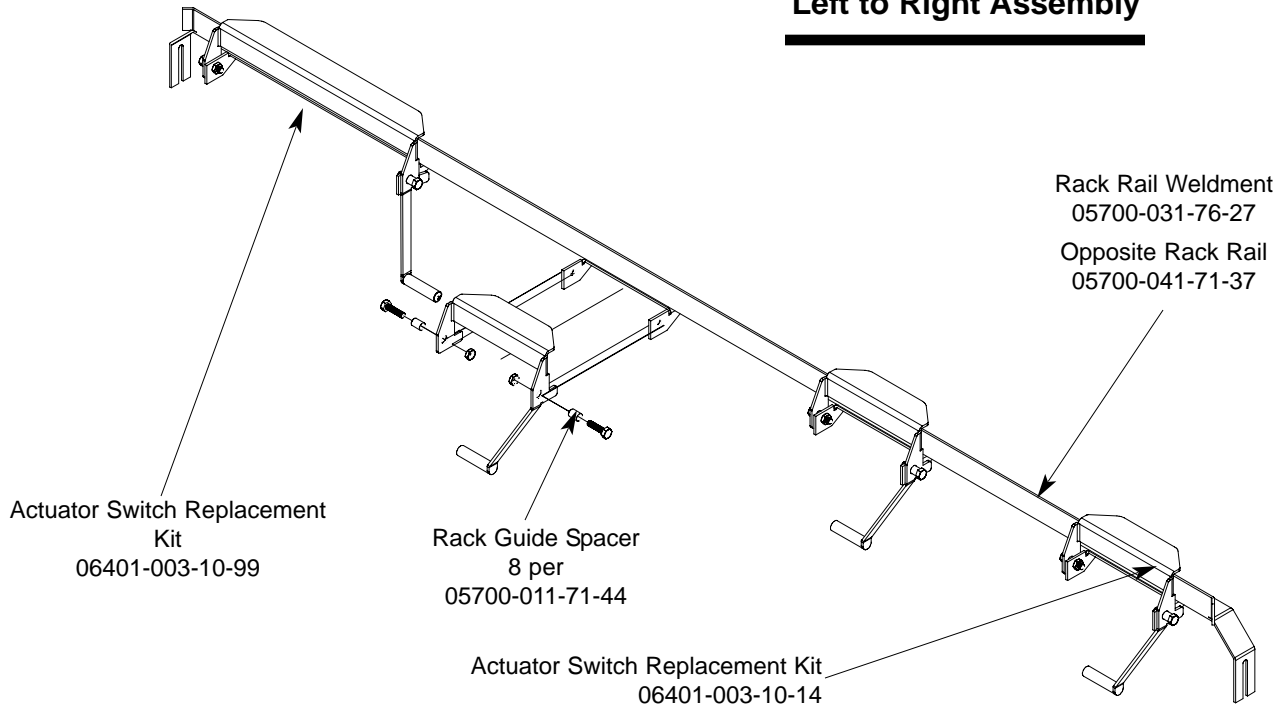

Right to Left Assembly

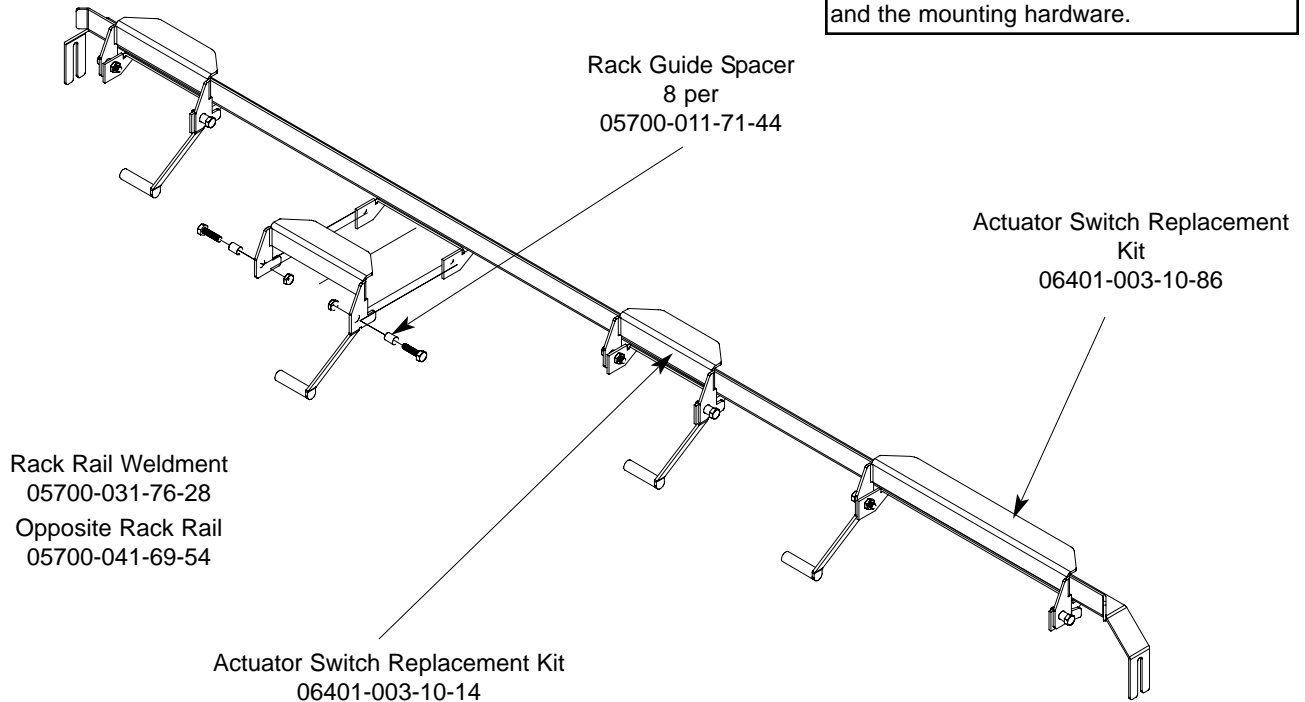


Replacement Kit Notes:

The replacement kits for the actuator switches come with the switch, two spacers and the mounting hardware.

SECTION 5: PARTS SECTION

DRIVE ASSEMBLY

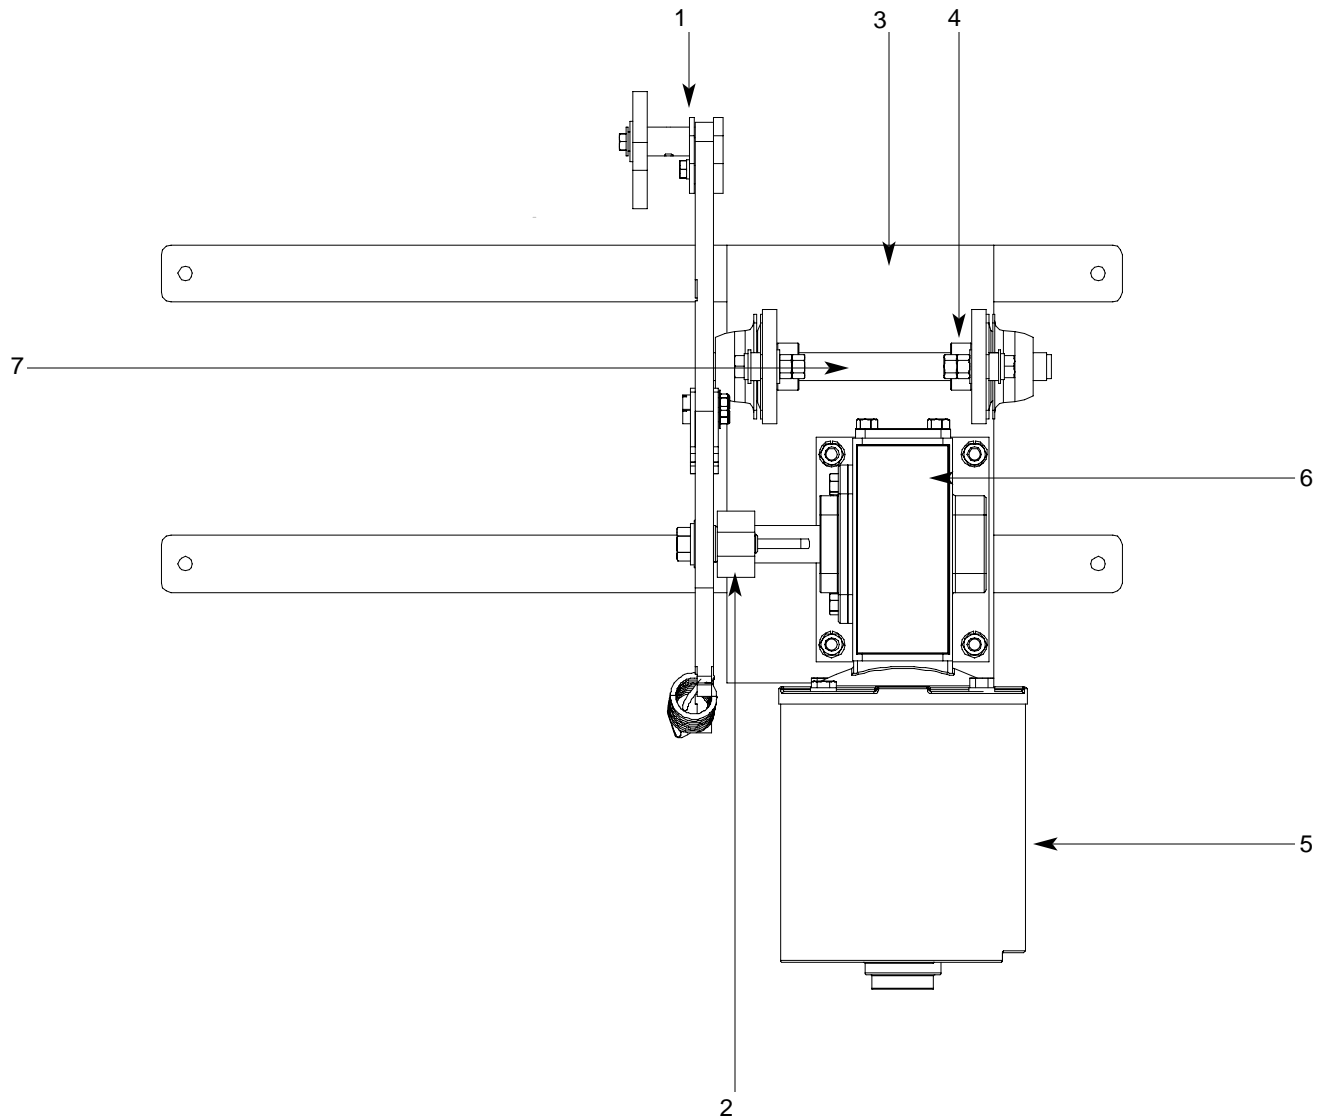


ITEM	QTY	DESCRIPTION	Mfg. No.
1	1	Plate, Drive & Rod Weldment	05700-002-99-28
2	1	Drive Hub	05700-011-67-97
3	1	Drive Motor Mounting Plate Weldment	05700-031-73-56
4	2	Shaft Collar	05700-011-89-18
5	1	Motor	
		Drive Motor, 115/230V, 1 Ph, 1/4 HP	06105-021-70-53
		Drive Motor, 208-230/460V, 3 Ph, 1/4 HP	06105-121-70-54
		Drive Motor, 600V, 3 Ph, 1/4 HP	06105-002-48-32
6	1	Gear Drive Motor (TS-44 & TS-66)	06105-011-71-88
6	1	Gear Drive Motor (TSC-44 & TSC-66)	06105-002-68-52
7	1	Drive and Rod Weldment	05700-002-99-28




SECTION 5: PARTS SECTION

DRIVE ASSEMBLY (CONTINUED)

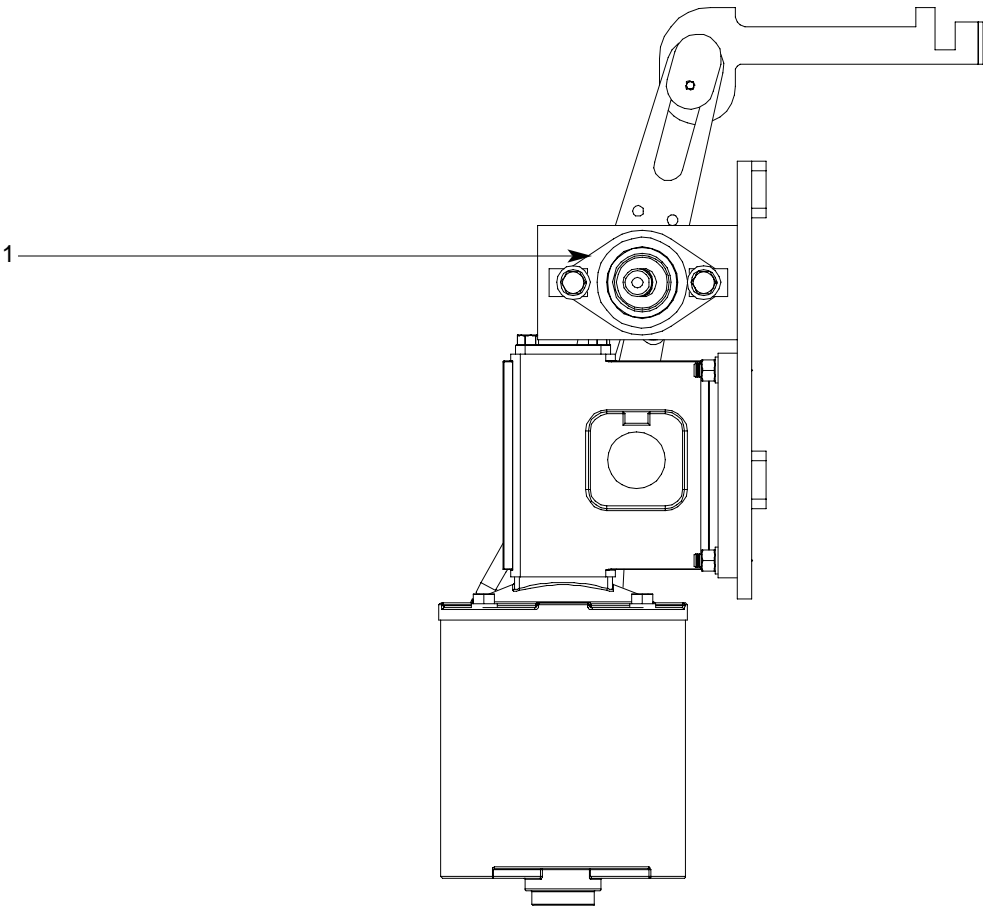

ITEM	QTY	DESCRIPTION	Mfg. No.
1	2	Pillow Block	03120-021-71-87

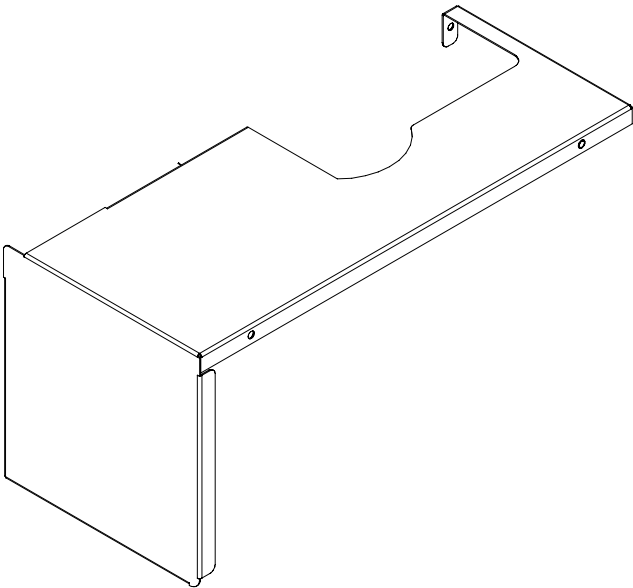


The drive assembly covers may be ordered using the following numbers:

Top cover: 05700-002-01-98
Bottom cover: 05700-002-41-21

SECTION 5: PARTS SECTION


FLOAT SWITCH COMPONENTS/SCRAP BASKETS

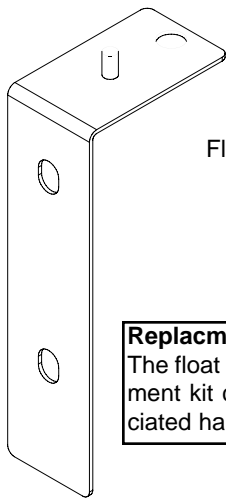

Float Switch Support Bracket
Replacement Kit
06401-003-11-77

Replacment Kit Note:

The float switch support bracket replacement kit contains the bracket and associated hardware for mounting.

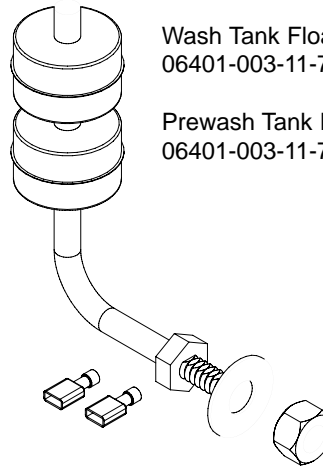

Wash Tank Float Switch Replacment Kit
06401-003-11-75


Prewash Tank Float Switch Replacment Kit
06401-003-11-76

Replacment Kit Note:


The float switch replacement kits contain the float switch with associated terminals, the flat washer and the nut.

Service Agent Note:


Remember than when reinstalling the float switch that the flat washer goes inside against the tub wall while the nut is on the outside of the tub.

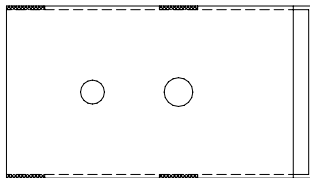

Float Switch Cover
05700-021-75-71

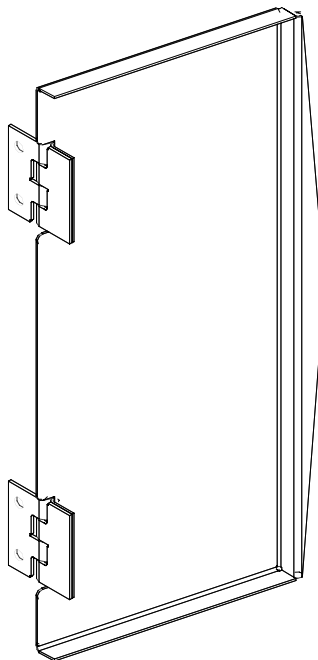


Scrap Basket Lid
Weldment
05700-002-56-55

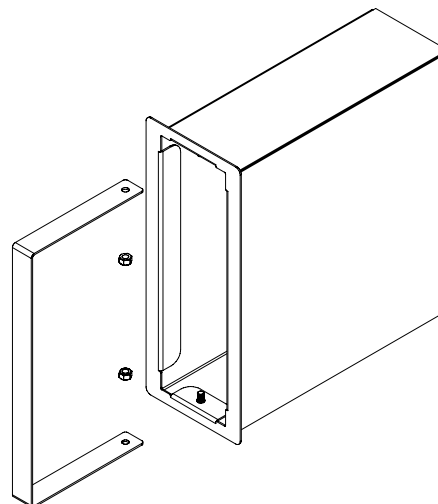


Scrap Basket Assembly
06401-002-11-21

SECTION 5: PARTS SECTION


MISCELLANEOUS PARTS AND WELDMENTS

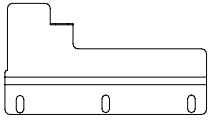


Plate, Left Water
Directional
05700-021-79-27

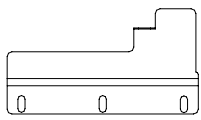


Plate, Right Water
Directional
05700-021-79-23

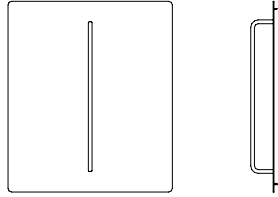

Run Off Sheet Weldment
05700-021-71-39

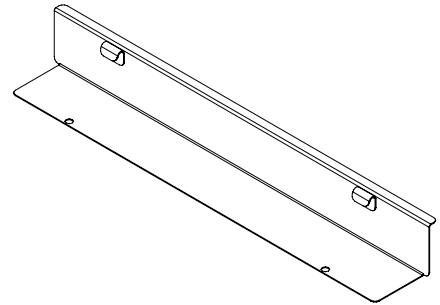


Splash Shield Weldment
5700-002-03-54

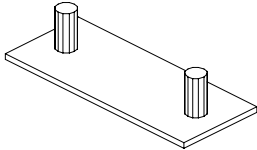


Hole Direction Plate Replacment Kit
06401-003-10-00

Replacement Kit Note:


The kit for the hole direction plate comes with the plate, a new gasket and the mounting hardware.

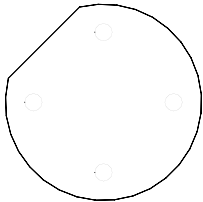

Rinse Drain Plate Replacment
Kit
(TG Models Only)
06401-003-10-07

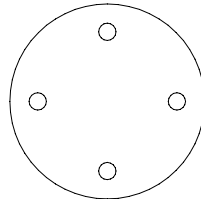


Rinse Drain Plug Replacement Kit
06401-003-10-06

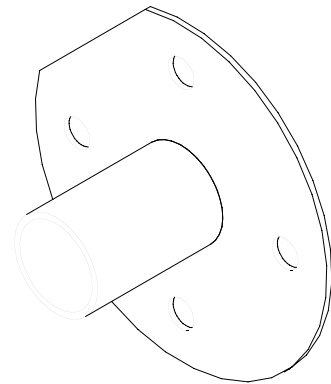


Rinse Drain Weldment Replacement Kit
06401-003-10-05

Replacement Kits Notes:


The kits for the drain weldments and drain plugs come with the weldments/parts, a new gasket and the mounting hardware.

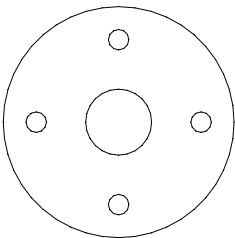


Rinse Drain Plate Gasket
05330-011-72-27

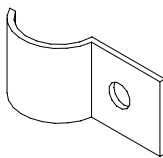

Pipe Clamp
05700-000-35-05

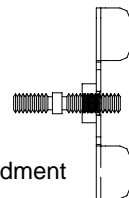

 Shoulder Bolt Wingnut Weldment
05700-002-46-02




Wash Fill Tube Weldment
05700-002-03-06

Vellumoid Gasket
05330-111-42-81


Prewash Fill Tube Weldment
(AJ-66 & AJ-80 Models Only)
05700-002-43-18

SECTION 5: PARTS SECTION


STRAINERS

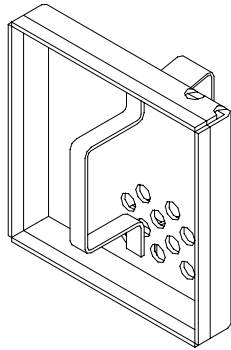

Drain Guard
Strainer Weldment
05700-002-09-15

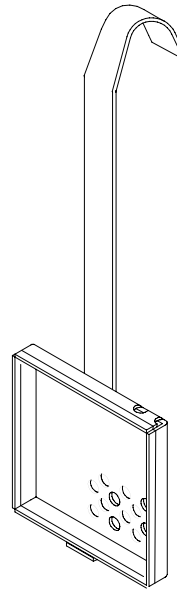


Wash Intake Strainer Weldment (TG Models)
05700-002-51-52

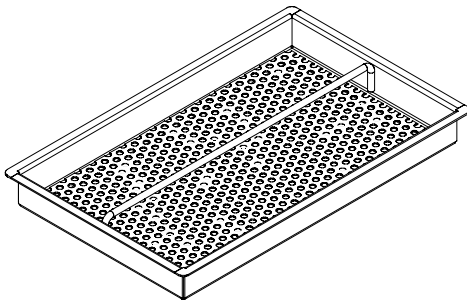

Tub Strainer Weldment
05700-002-03-21


Prewash Pan Strainer
05700-041-85-09

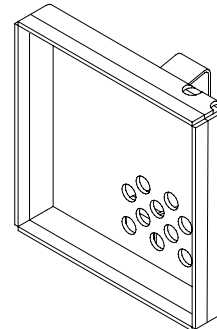


Screen Strainer
with Handle Weldment
05700-002-09-04

SECTION 5: PARTS SECTION


CURTAINS/TUB MAGNETS

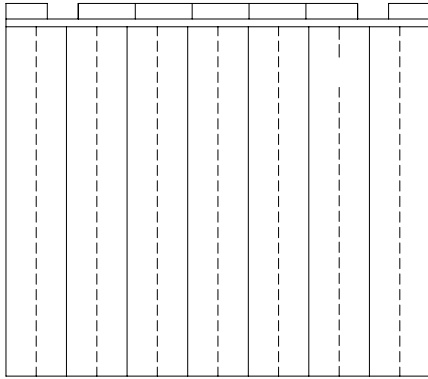

Curtain, 21" Long x 20-1/2" Wide
08415-131-73-45

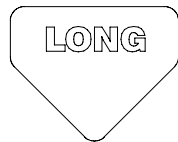


Long Curtain Decal
09905-011-73-84

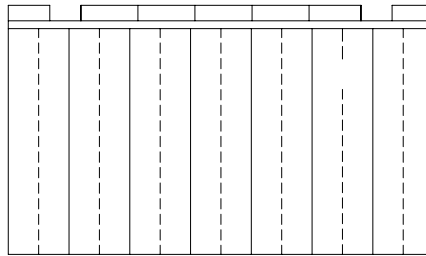


Curtain, 12" Long x 20-1/2" Wide
08415-131-73-44




Short Curtain Decal
09905-011-73-82

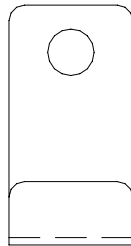


Curtain Hook
05700-011-83-54

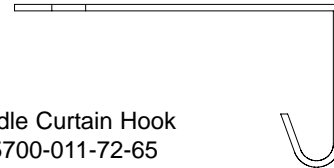


Middle Curtain Hook
05700-011-72-65

 

Curtain Rod
05700-021-73-43

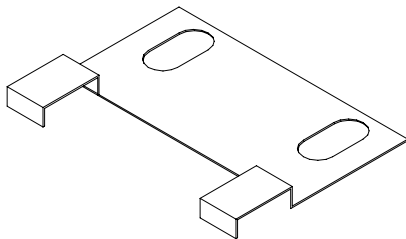

Limit Switch Bracket
05700-021-71-18

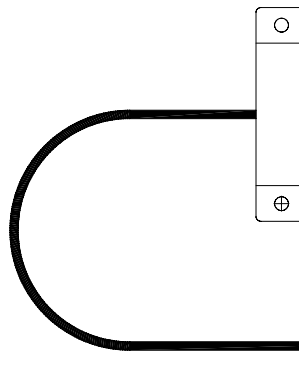

Conveyor Switch Replacement Kit
06401-003-11-79

Replacement Kit Note:


The conveyor switch replacement kit comes with the switch, a terminal and a wire nut.

Service Note:


The cord for the conveyor switch needs to be cut to length in the field and have the pink terminal applied there.

SECTION 5: PARTS SECTION

EXHAUST FAN CONTROL/TABLE LIMIT SWITCH OPTIONS

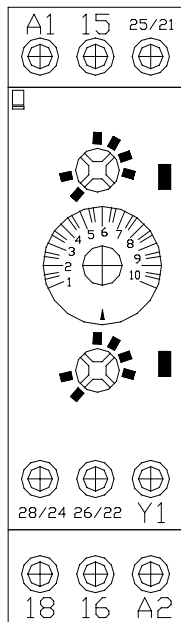


Delay Timer
05945-011-65-44

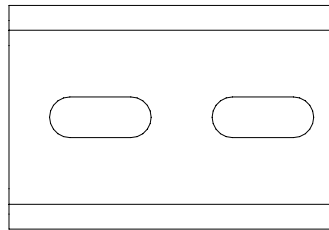

2" Din Rail
05700-002-36-09

**FAN LOAD ON TIMER OUTPUT
5A, 1/4HP, 240 V AC MAX**


Decal, Fan Load
09905-003-32-20

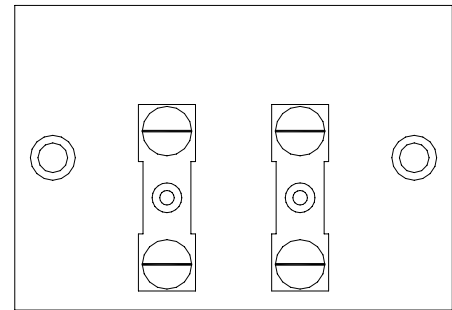

Terminal Board
05940-011-84-41

Kit, Exhaust Fan - Electric & Steam Models
05700-031-90-53

Kit, Exhaust Fan - Gas Models
05700-003-14-59


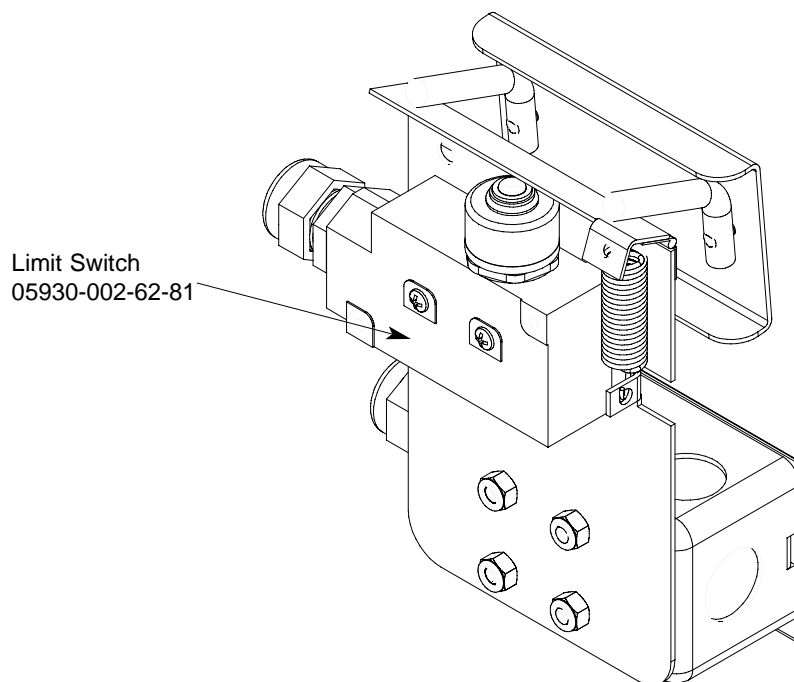


Striker Plate Limit Switch
Assembly
05700-002-62-94

SECTION 5: PARTS SECTION

SIDE LOADER TRACK ASSEMBLY/LEG REPLACEMENTS

Side loader track assembly
(left to right model shown).

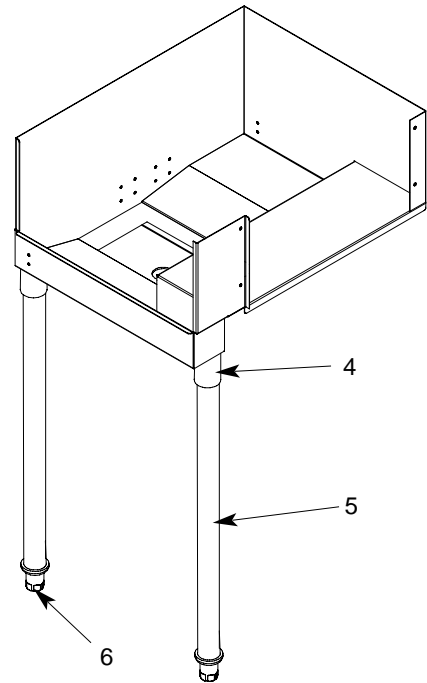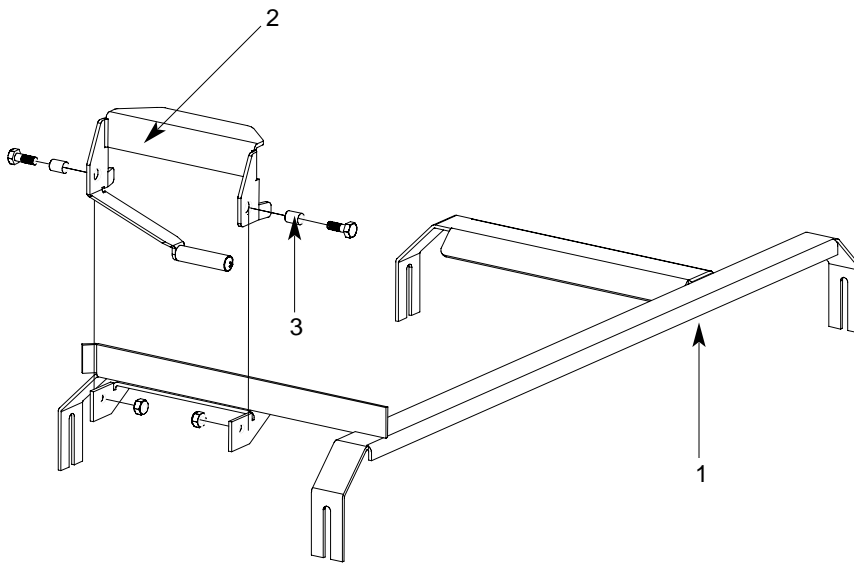

ITEM	QTY	DESCRIPTION
1	1	Track Weldment (Left to Right) 24"
	1	Track Weldment (Right to Left) 24"
	1	Track Weldment (Left to Right) 30"
	1	Track Weldment (Right to Left) 30"
2	1	Actuator Switch Replacement Kit
3	2	Spacer
4	1	Leg Socket Replacement Kit
5	1	Leg Support Replacement Kit
6	1	Bullet Foot

Mfg. No.
05700-031-78-98
05700-031-95-20
05700-003-04-57
05700-003-04-58
06401-003-10-64
05700-011-71-44
06401-003-09-79
06401-003-09-80
05340-108-01-03

Replacement Kits Notes:

The actuator switch replacement kit comes with the actuator weldment, mounting hardware and (2) spacers.

The leg socket replacement kit has the leg socket, mounting hardware and set screw.



The leg support replacement kit has the leg and the bullet foot included.

SECTION 5: PARTS SECTION

SIDE LOADER PAWL BAR ASSEMBLIES/STRAINER/MAGNET

Replacement Kit Note:


The kits for the pawl bars come with the bar weldment, (3) dogs and the hardware.

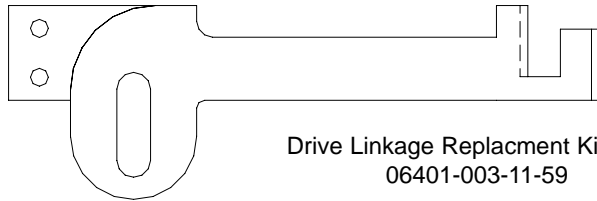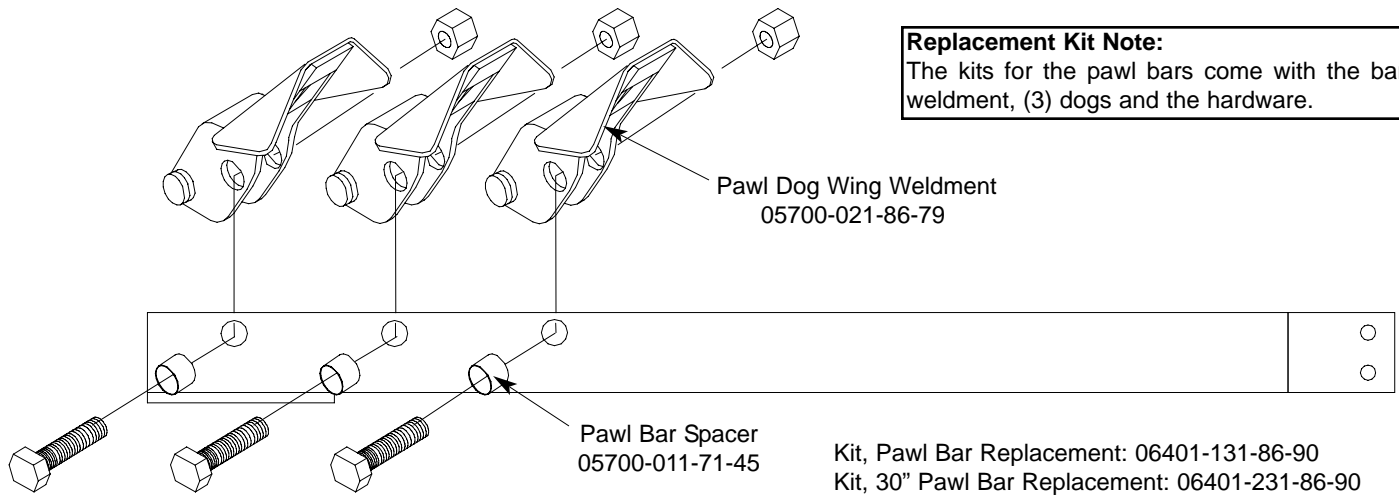

Drive Linkage Replacement Kit (L-R)
06401-003-11-59

Replacement Kit Note:

 The replacement kits for the drive linkages come also with the hardware for mounting them to the pawl bars.




Drive Linkage Replacement (R-L)
06401-003-11-60

Replacement Kit Note:


The conveyor switch replacement kit comes with the switch, a terminal and a wire nut.

Conveyor Switch Replacement Kit
06401-003-11-79

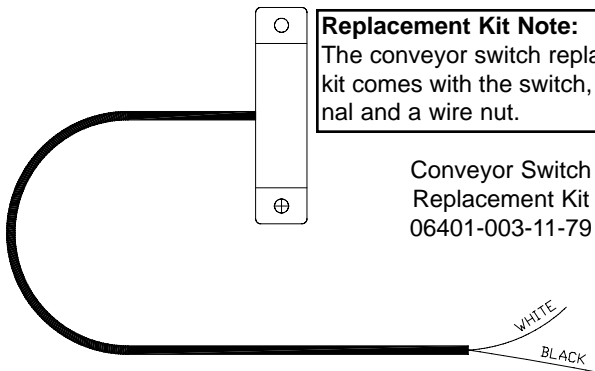

Service Note:


The cord for the conveyor switch needs to be cut to length in the field and have the pink terminal applied there.

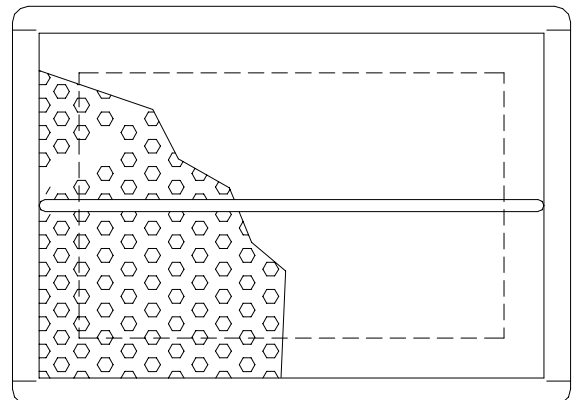


Front Strainer Weldment
05700-021-85-10

SECTION 5: PARTS SECTION


SIDE LOADER PAWL BAR ASSOCIATED PARTS

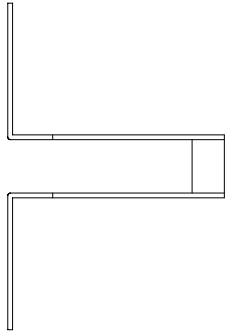

Pawl Bar Roller Bracket
05700-031-77-94

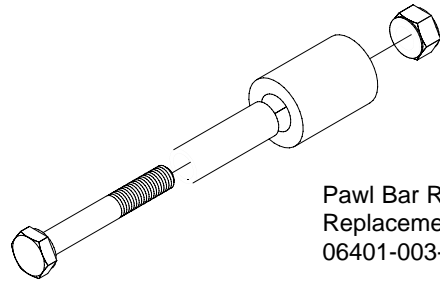

 Pawl Bar Roller
Replacement Kit
06401-003-11-80



Replacement Kit Notes:

The replacement kit for the pawl bar roller comes with the roller, roller shaft, hardware and locknut as shown.


Associated Hardware:

Washer, 1/4"-20 I.D.



05311-174-01-00

Locknut, 1/4"-20 S.S. Hex w/Nylon Insert


05310-374-01-00

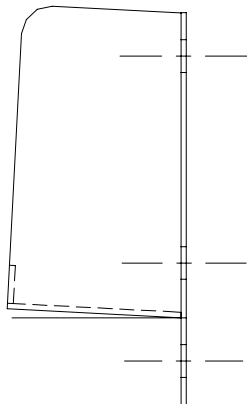


Pawl Bar Gutter Weldment Replacement Kit
06401-003-09-95

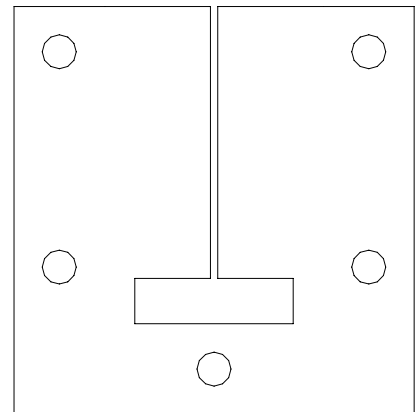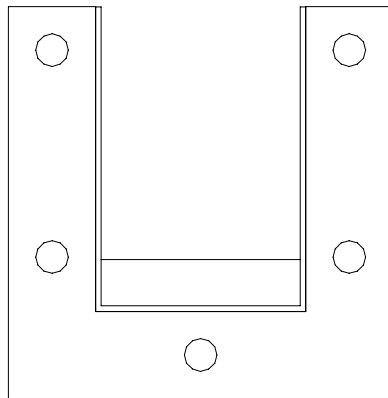

Drive Gutter Gasket
05330-011-68-55

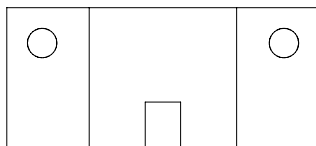

Top Guide Block

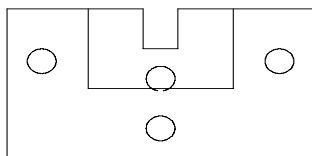

Bottom Guide Block

Guide Block Replacement Kit
06401-003-10-15

Replacement Kit Notes:

The pawl bar gutter kit includes the weldment, lock-nuts and the gasket. The guide block kits includes the blocks and the gasket.


Service Note:

Because of wear patterns that develop over time, it is highly recommended that when replacing either of the guide blocks, that the other be replaced as well from the kit.


SECTION 5: PARTS SECTION

SIDE LOADER VENT COWL OPTION

Vent Cowl Replacement Kit (Left to Right)
06401-003-11-81

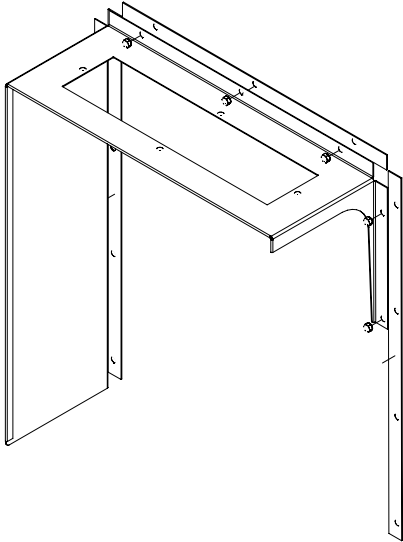

Vent Cowl Replacement Kit (Right to Left)
06401-003-11-83

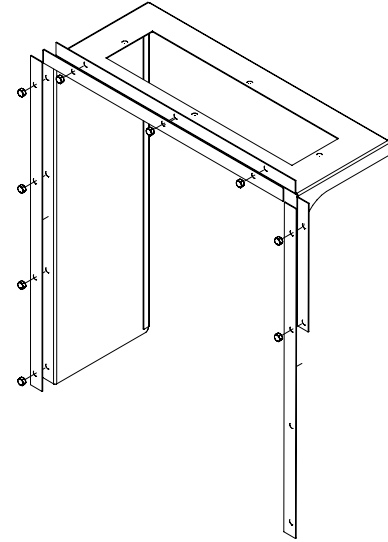


Service Note:
One of the side gaskets that come in the kit will need to be cut to length in order to fit properly on the unit when replaced.

Replacement Kit Note:
The replacement kit(s) for the vent cowl(s) come with the cowl(s), the gaskets and mounting hardware.

Vent Cowl Gasket, Top: 05330-031-83-47
Vent Cowl Gasket, Side: 05330-031-83-48


VENT SCOOP OPTION

Vent Scoop Assembly
05700-002-04-08

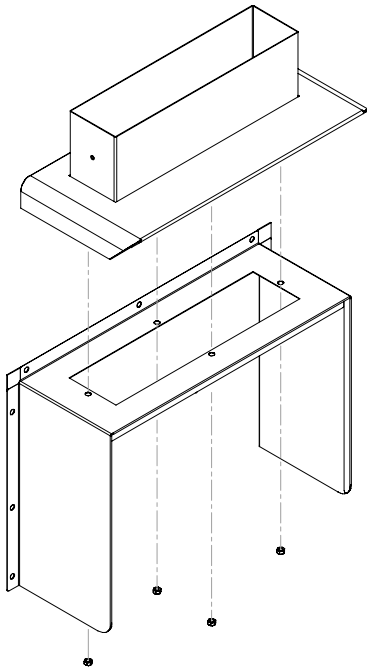


STANDARD ASSEMBLY

Vent Cowl Cover Replacement Kit
06401-003-10-16

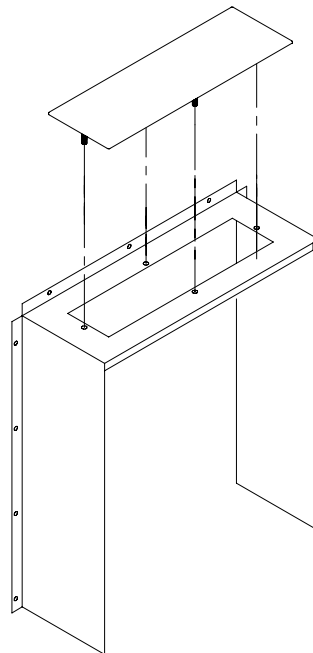


Replacement Kit Note:
The cover kit contains the cover and the hardware for mounting it.

VENT COWL ASSEMBLY FOR
HOODED SIDE LOADER OPTION
05700-003-05-66

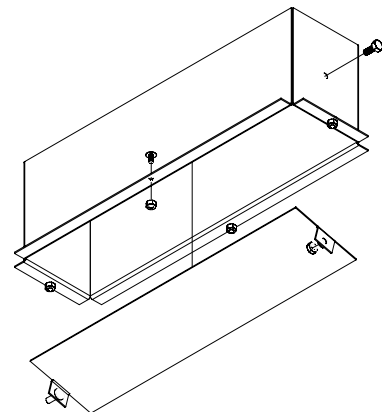

SECTION 5: PARTS SECTION

RINSE FILL OPTION

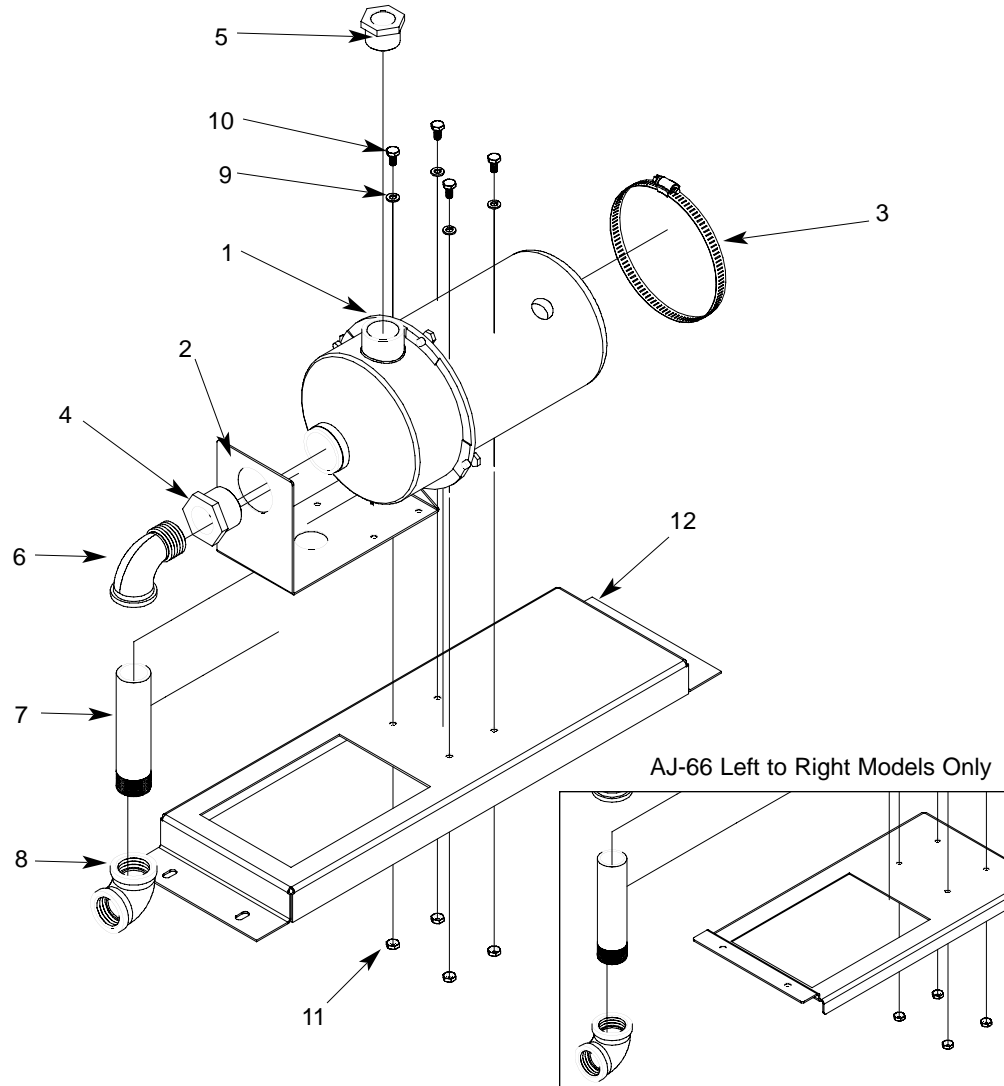


ITEM	QTY	DESCRIPTION	Mfg. No.
	1	Rinse Fill Motor Assembly	05700-002-40-25
	1	Rinse Fill Motor Assembly (TS-66 Left to Right Models Only)	05700-002-48-22
1	1	Motor	06105-002-72-71
2	1	Bracket, Pump Mounting	05700-002-63-59
3	1	Clamp, Hose 5 5/8" to 6"	04730-011-34-90
4	1	Reducer Bushing, 1 1/4" to 1"	04730-002-73-62
5	1	Reducer Bushing 1" to 3/4"	04730-011-65-14
6	1	Elbow, 90 Deg., 1" Street	04730-002-11-99
7	1	Nipple, 1" NPT x 6" Long Brass	04730-002-12-00
8	1	Elbow, 90 Deg. Brass Female	04730-002-12-55
9	4	Lockwasher, 1/4"	05311-274-01-00
10	4	Bolt, 1/4"-20 x 1 1/2" Long	05305-274-02-00
11	4	Nut, Hex S/S 1/4"-20	05310-274-01-00
12	1	Rinse Motor Mounting Bracket	05700-002-38-90
12	1	Rinse Motor Mounting Bracket (TS-66 Left to Right Models Only)	05700-002-39-33

SECTION 6: ELECTRICAL SCHEMATICS

SECTION 6: ELECTRICAL SCHEMATICS


TS-44/TSC-44 (208-230 VOLT, 60 HZ, 1 PHASE)

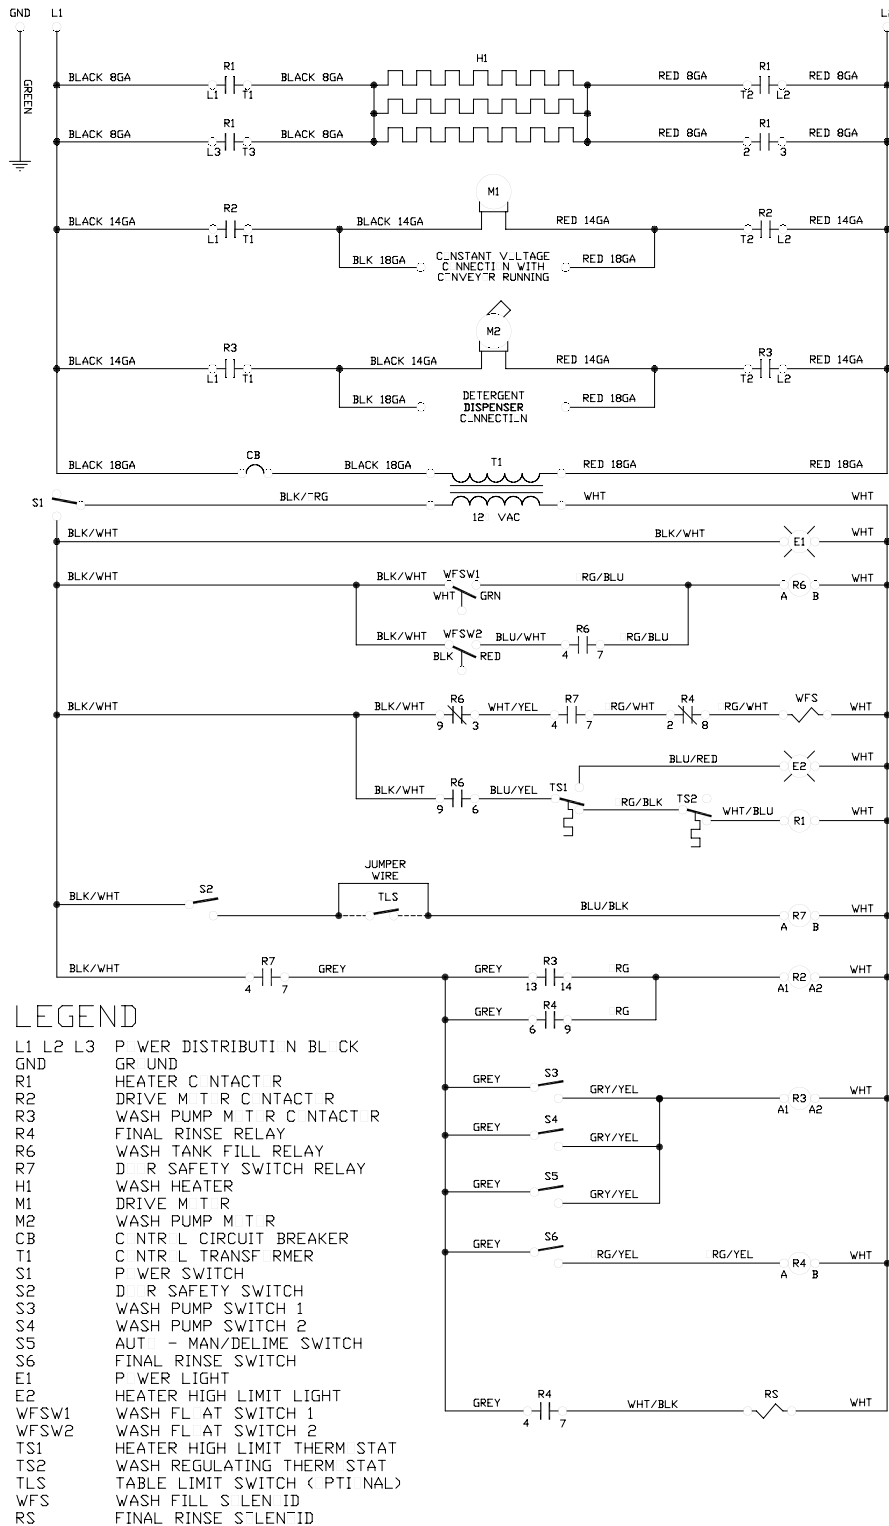

9915-002-95-791

SECTION 6: ELECTRICAL SCHEMATICS


TS-44/TSC-44 (208-230 VOLT, 60 HZ, 3 PHASE)

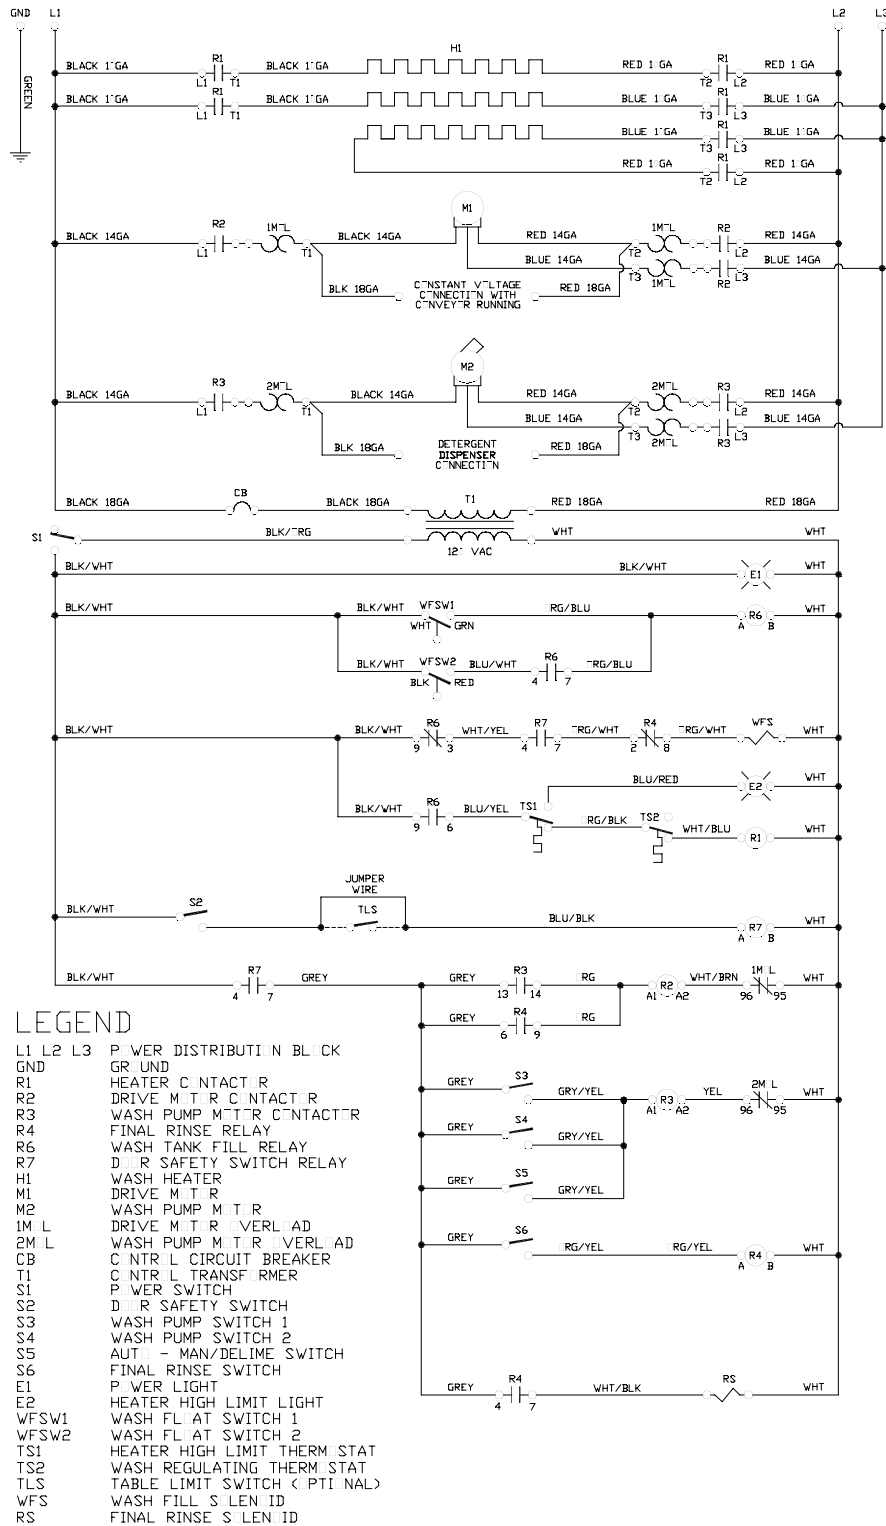

99-5-002-95-38

SECTION 6: ELECTRICAL SCHEMATICS


TS-44/TSC-44 (460-600 VOLTS, 60 HZ, 3 PHASE)

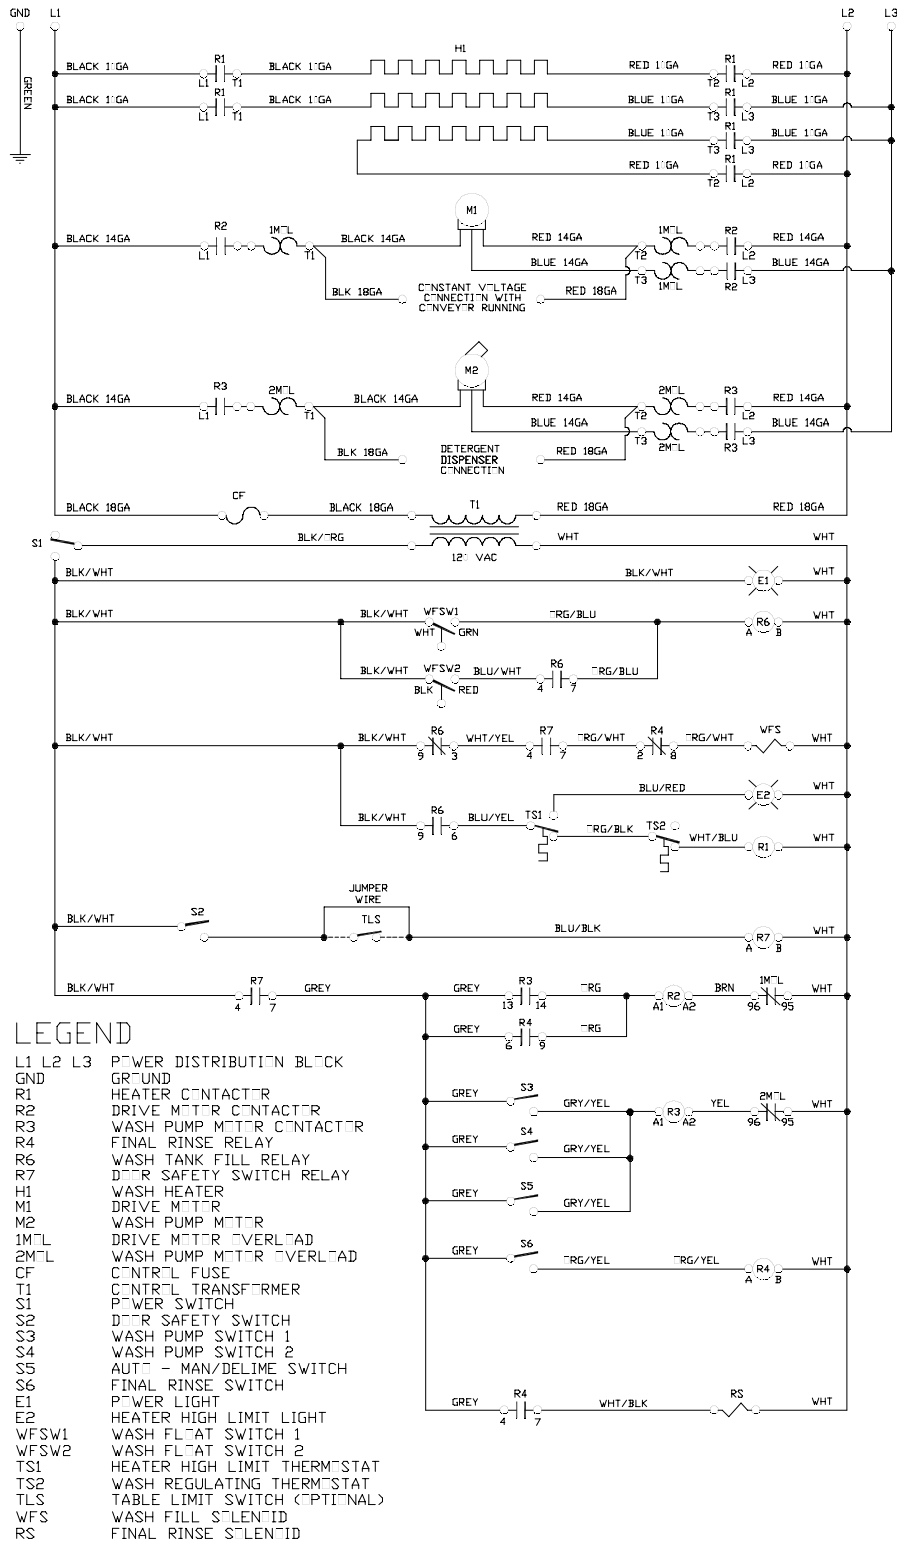

9915-002-95-800

SECTION 6: ELECTRICAL SCHEMATICS


TS-44/TSC-44 DUAL CONNECTION(460 VOLT, 60 HZ, 3 PHASE)

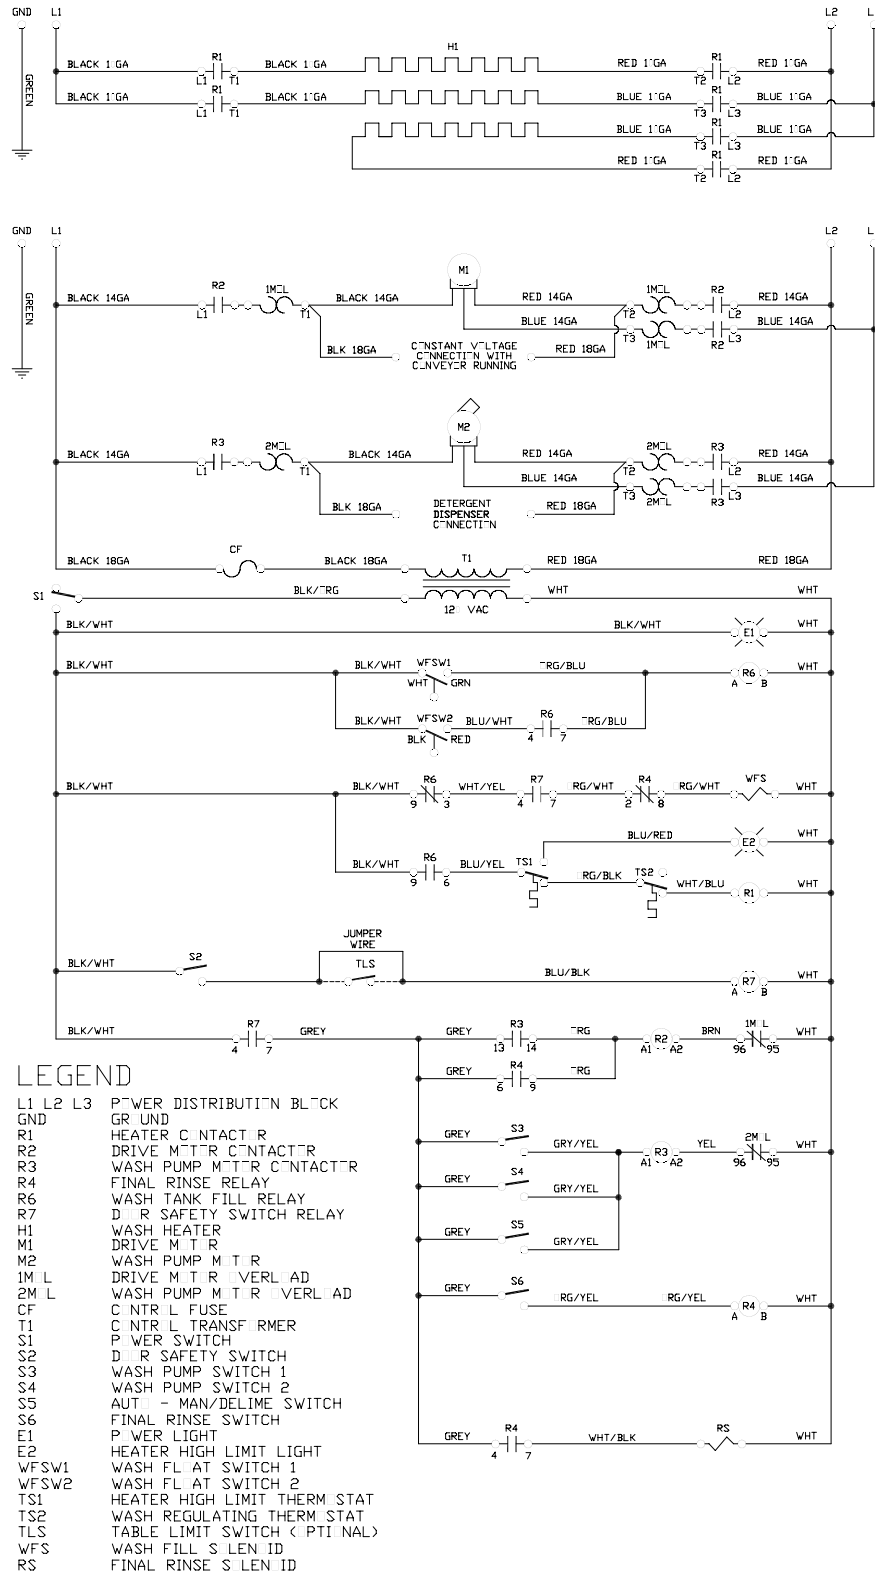

99 5-003-16-5

SECTION 6: ELECTRICAL SCHEMATICS


TS-44GP/TSC-44GP (208-230 VOLTS, 60 HZ, 1 PHASE)

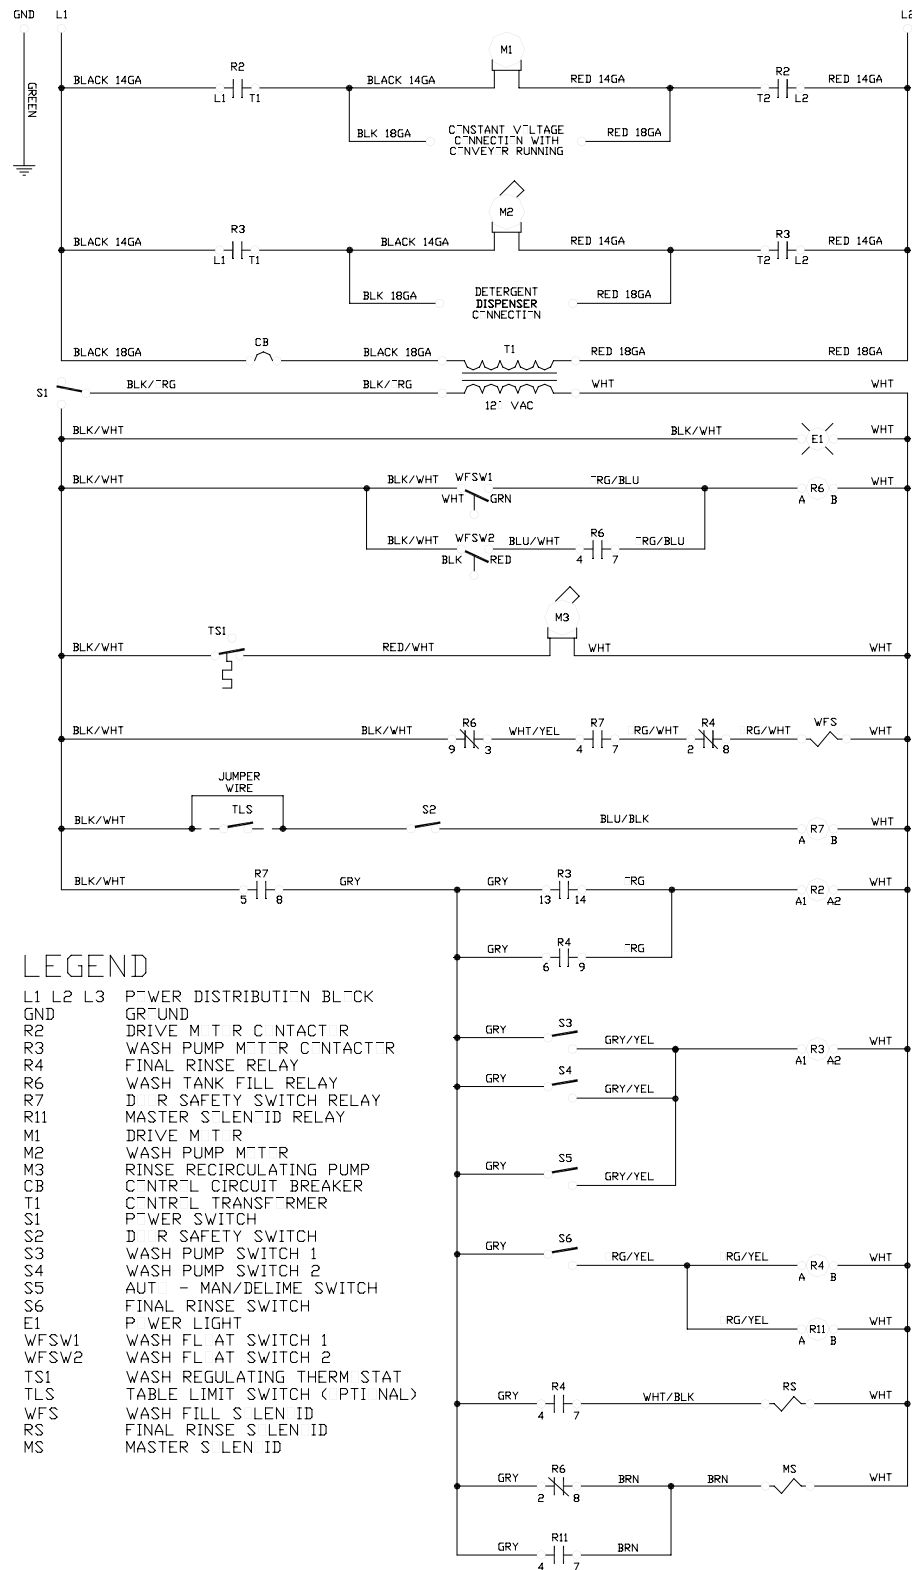

99 5-2-95-82


SECTION 6: ELECTRICAL SCHEMATICS

TS-44GP/TSC-44GP (208-230 VOLTS, 60 HZ, 3 PHASE)

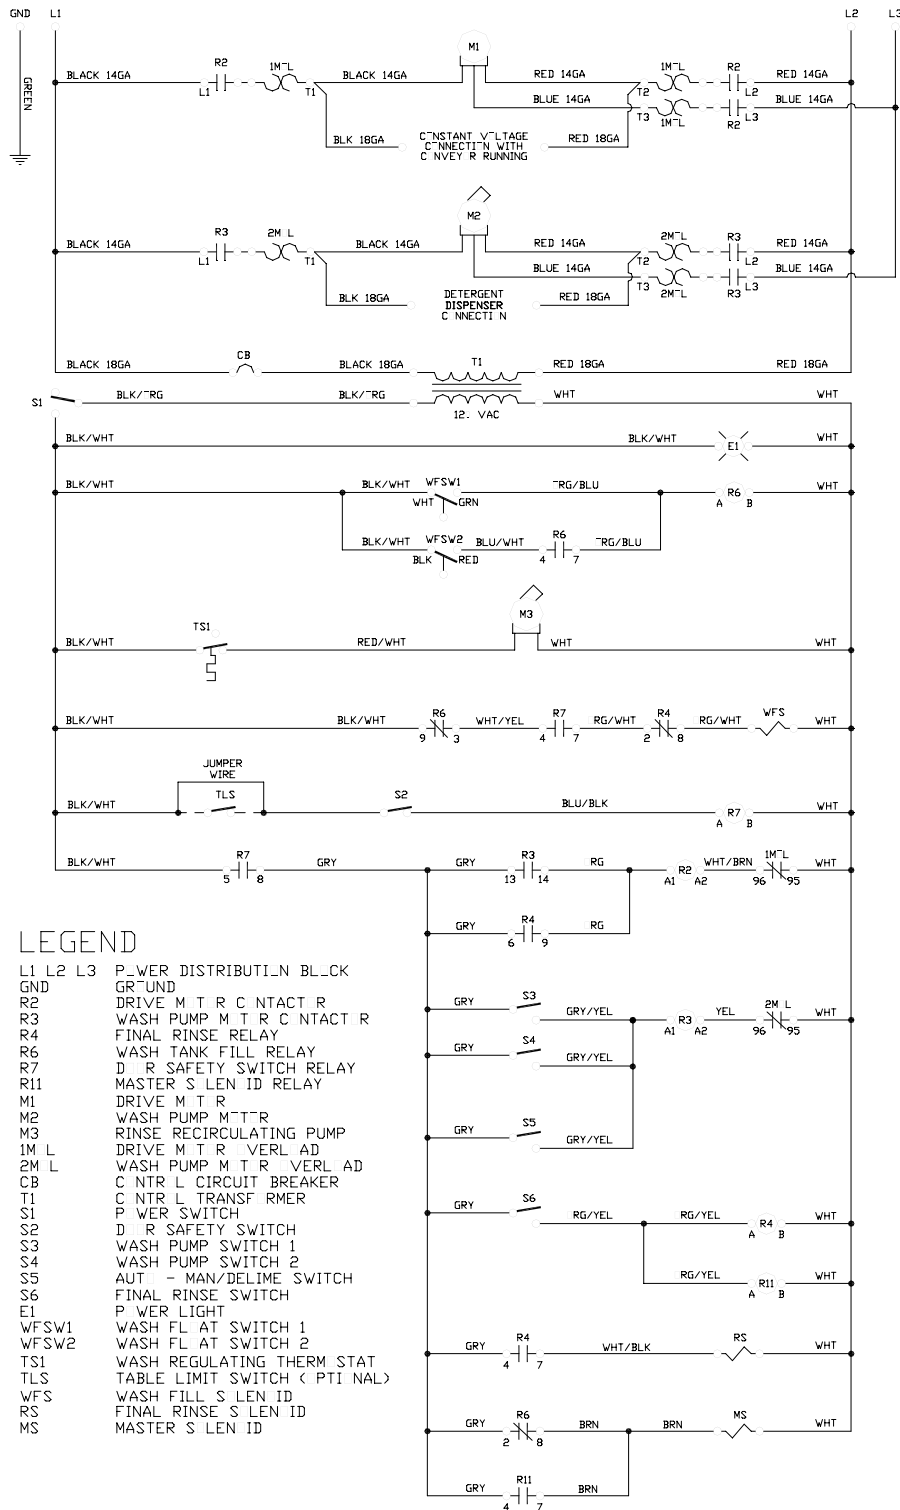


SECTION 6: ELECTRICAL SCHEMATICS

TS-44GP/TSC-44GP (460 VOLTS, 60 HZ, 3 PHASE)

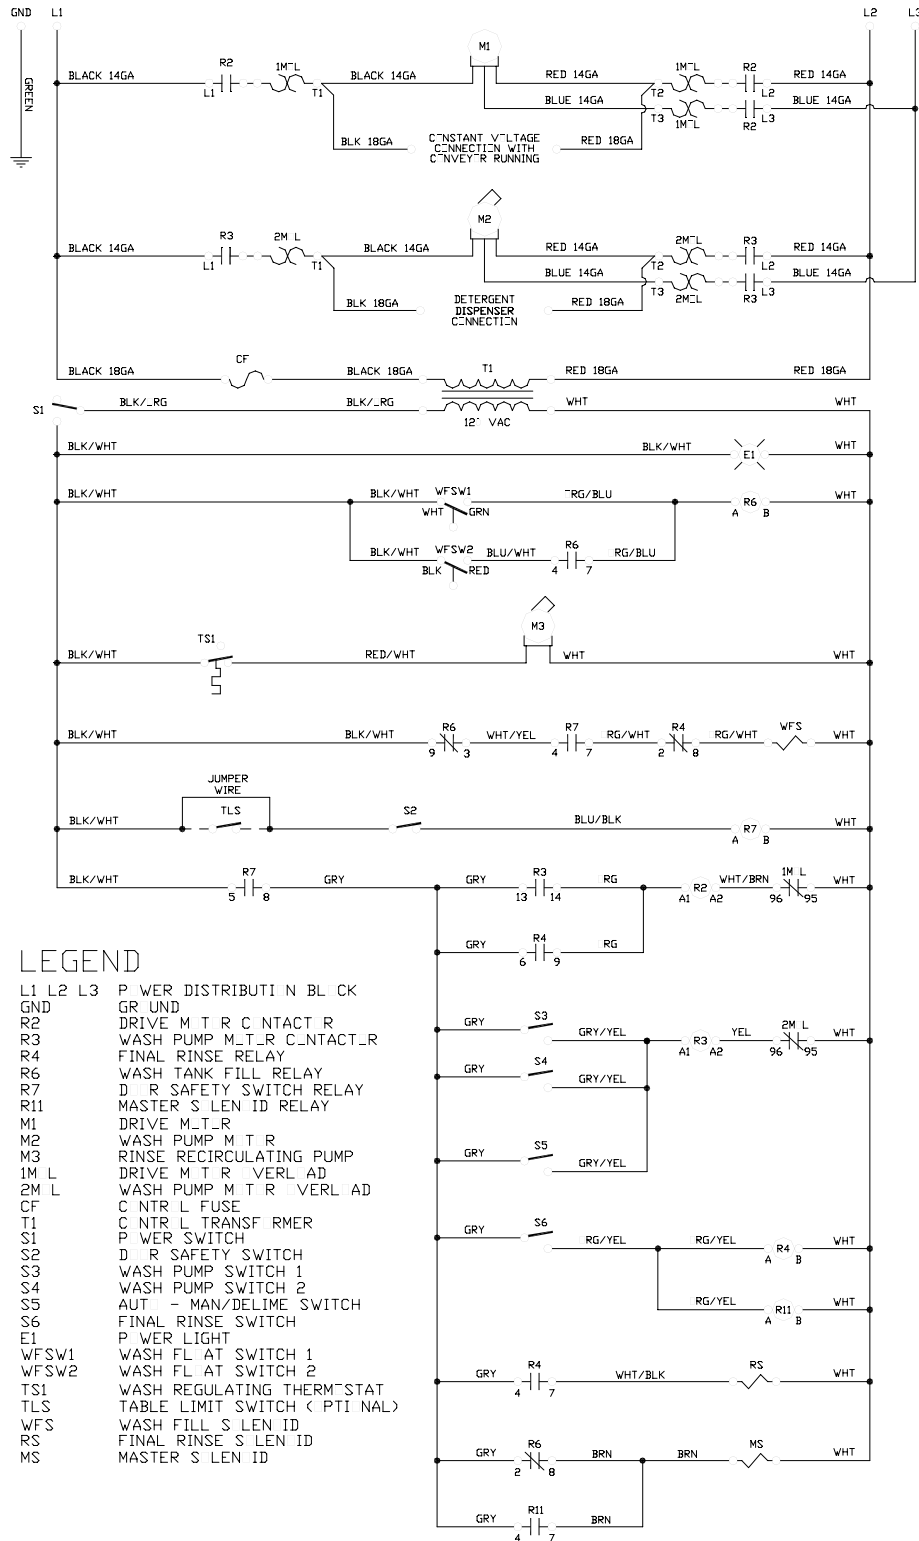

SECTION 6: ELECTRICAL SCHEMATICS


TS-66/TSC-66 (208-230 VOLT, 60 HZ, 1 PHASE)

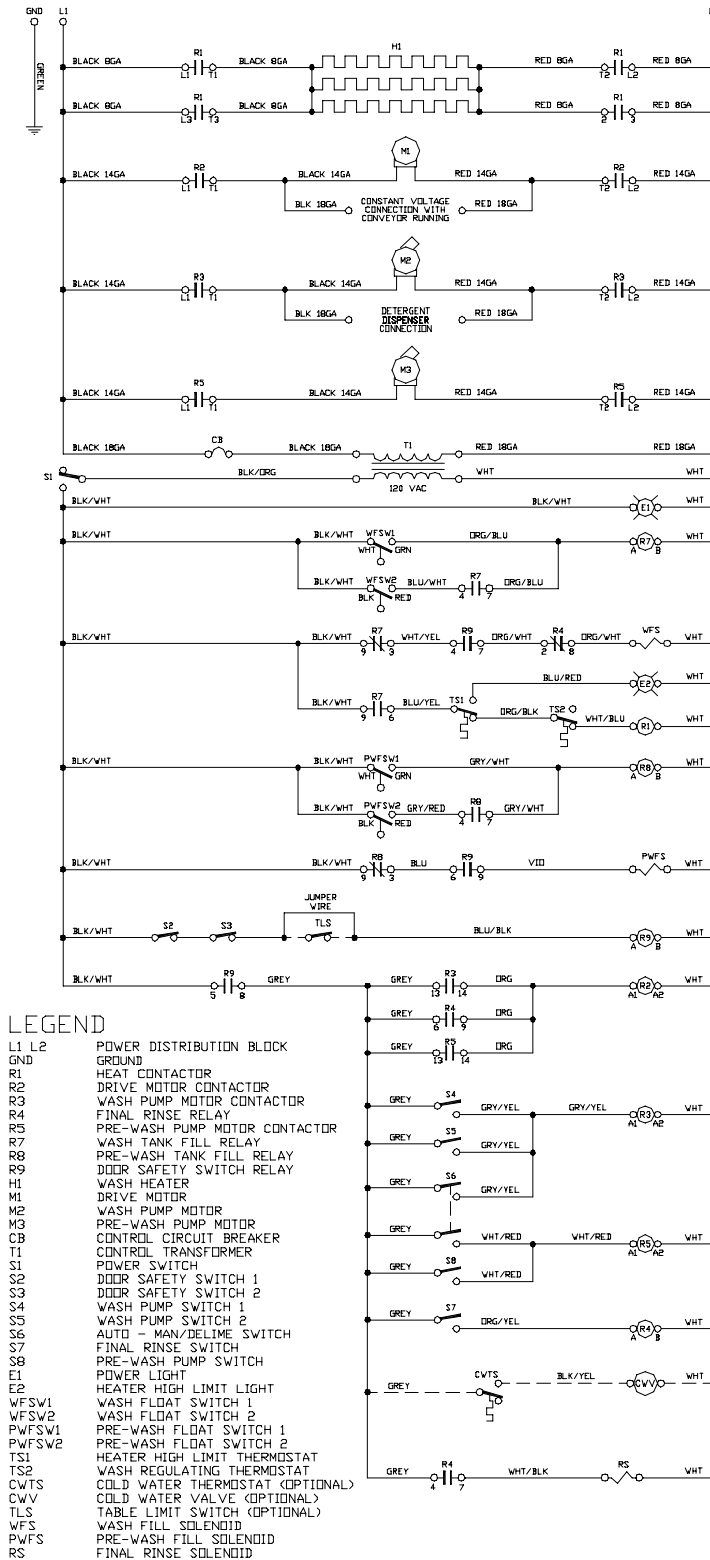

9905-002-98-49a


SECTION 6: ELECTRICAL SCHEMATICS

TS-66/TSC-66 (208-230 VOLT, 60 HZ, 3 PHASE)

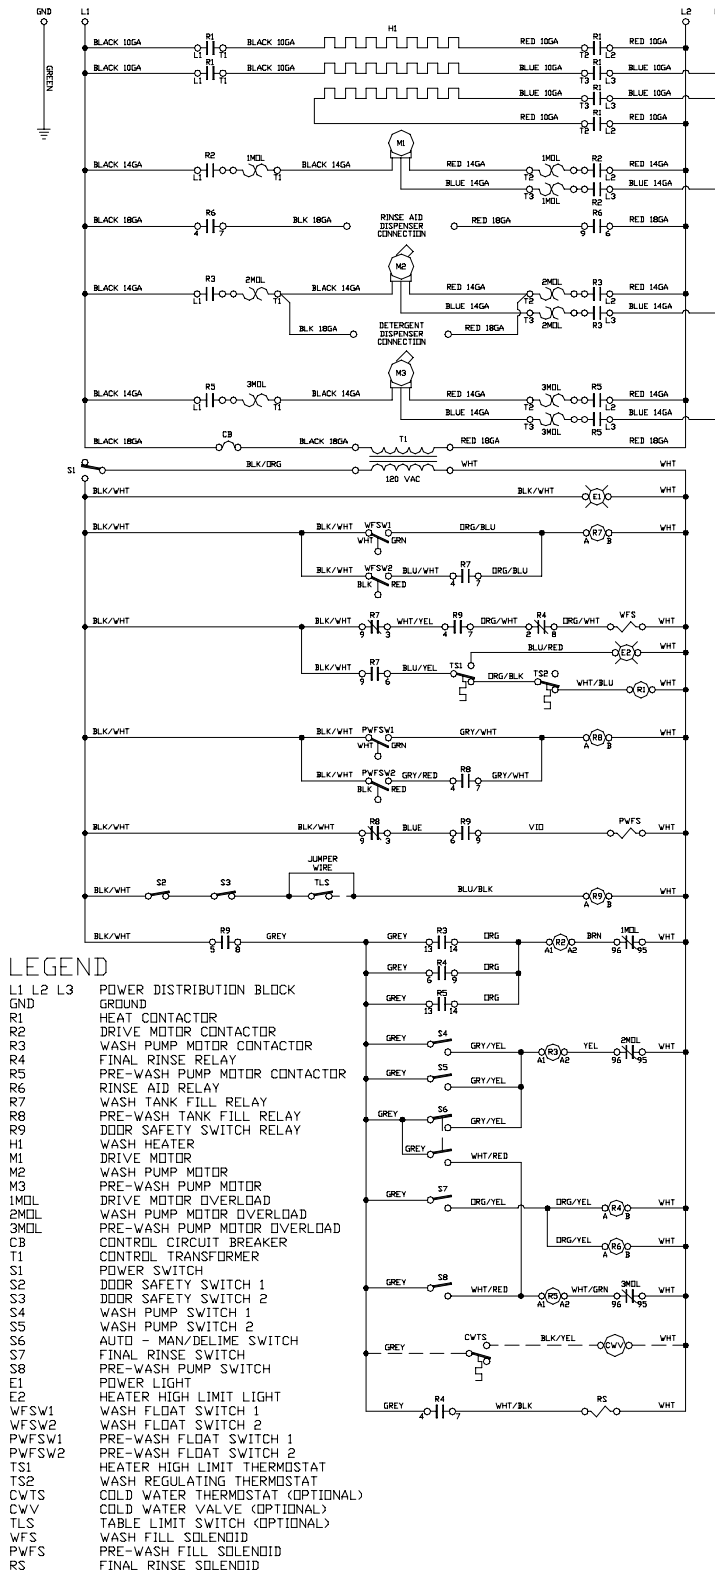


SECTION 6: ELECTRICAL SCHEMATICS

TS-66/TSC-66 (460-600 VOLTS, 60 HZ, 3 PHASE)

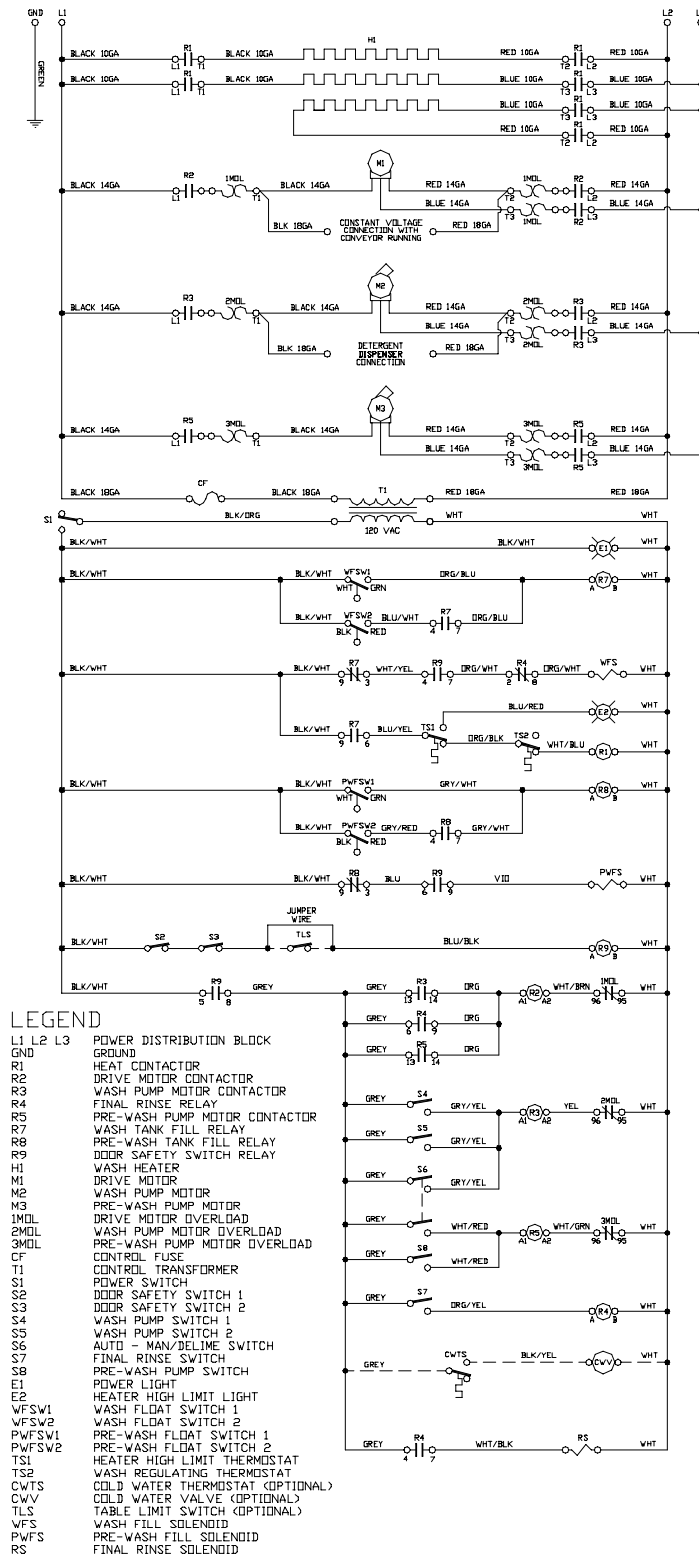

9905-002-98-50a


TS-66GP/TSC-66GP (208-230 VOLTS, 60 HZ, 1 PHASE)

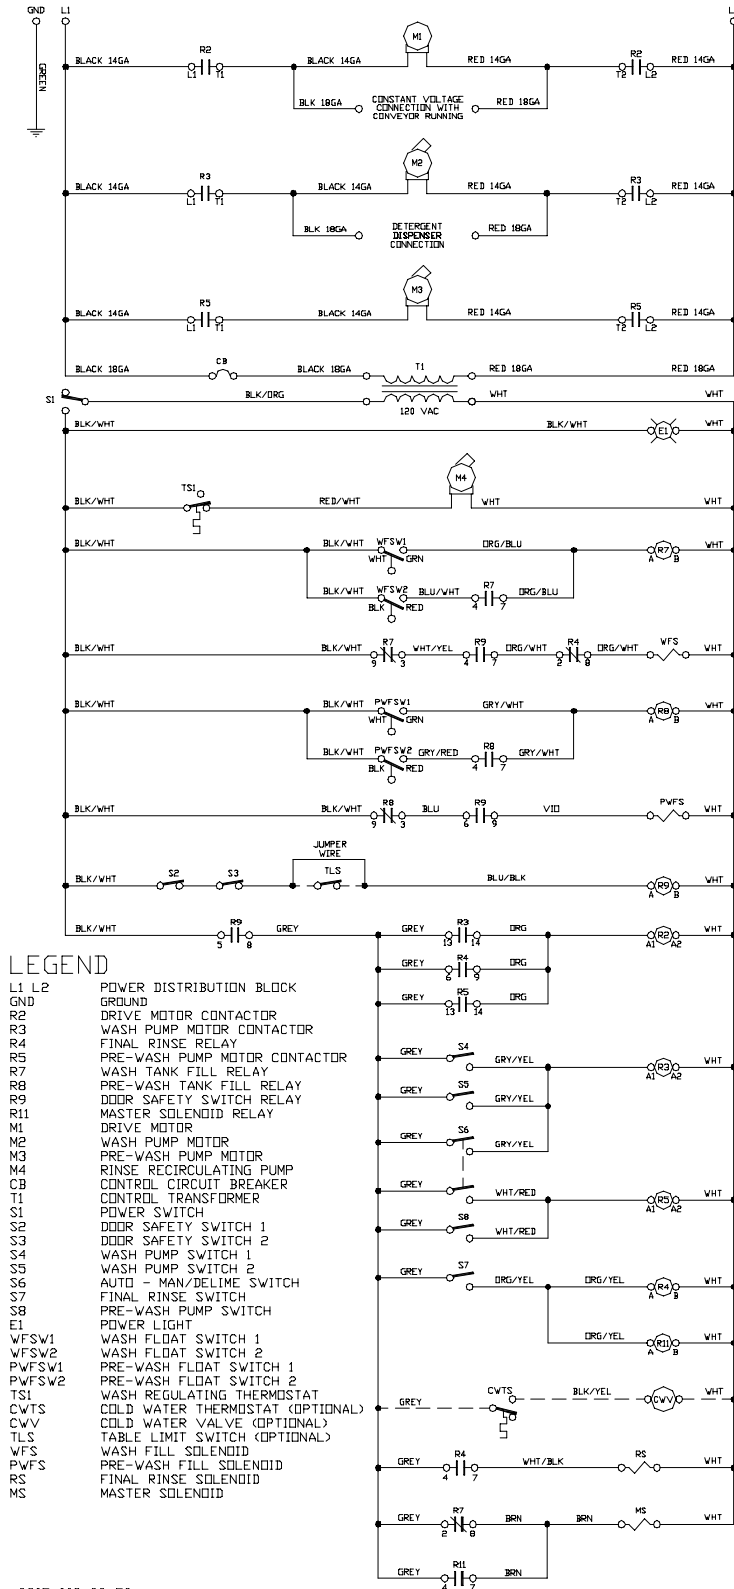

9905-002-98-52a

SECTION 6: ELECTRICAL SCHEMATICS


TS-66GP/TSC-66GP (208-230 VOLTS, 60 HZ, 3 PHASE)

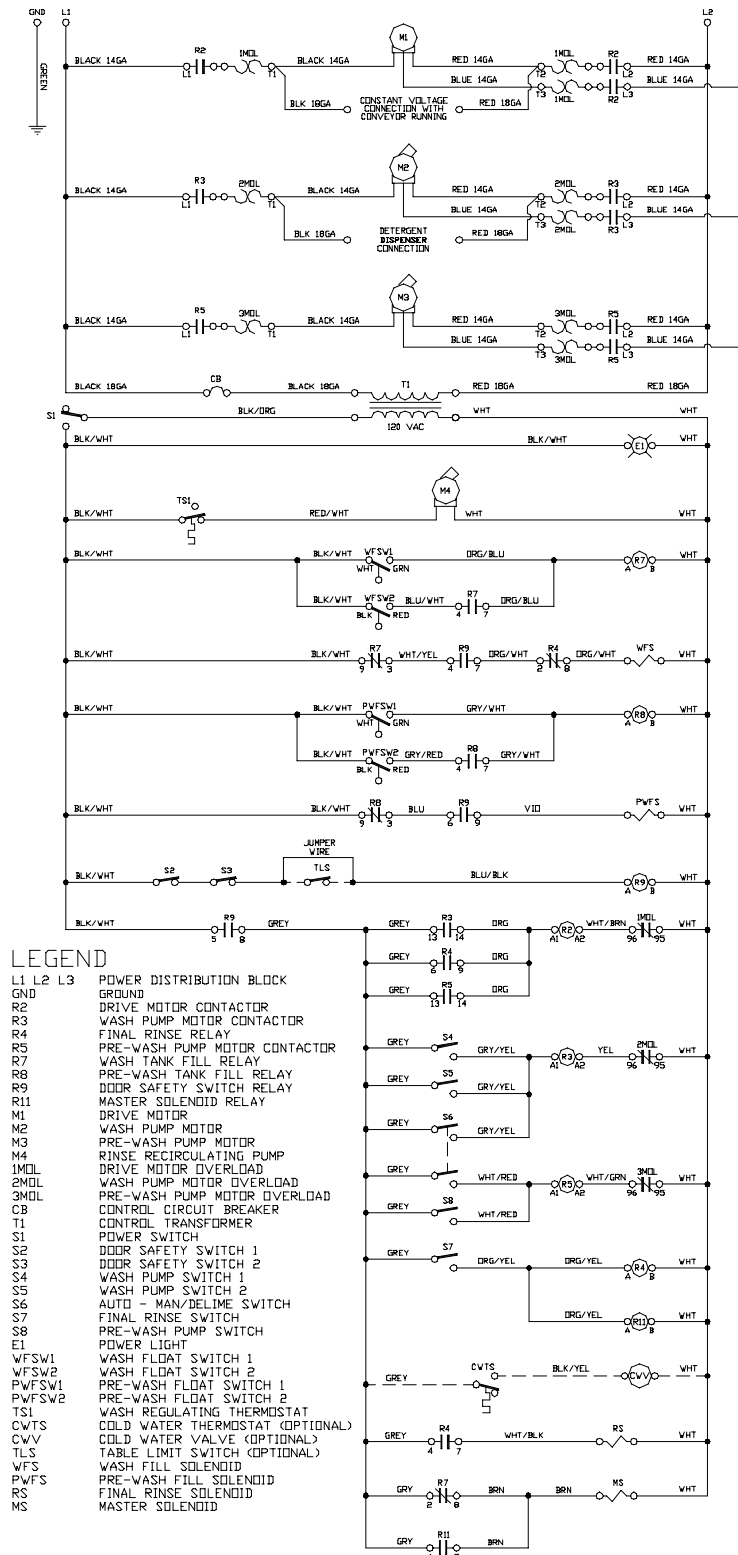

9905-002-98-51a

SECTION 6: ELECTRICAL SCHEMATICS

TS-66GP/TSC-66GP (460 VOLTS, 60 HZ, 3 PHASE)

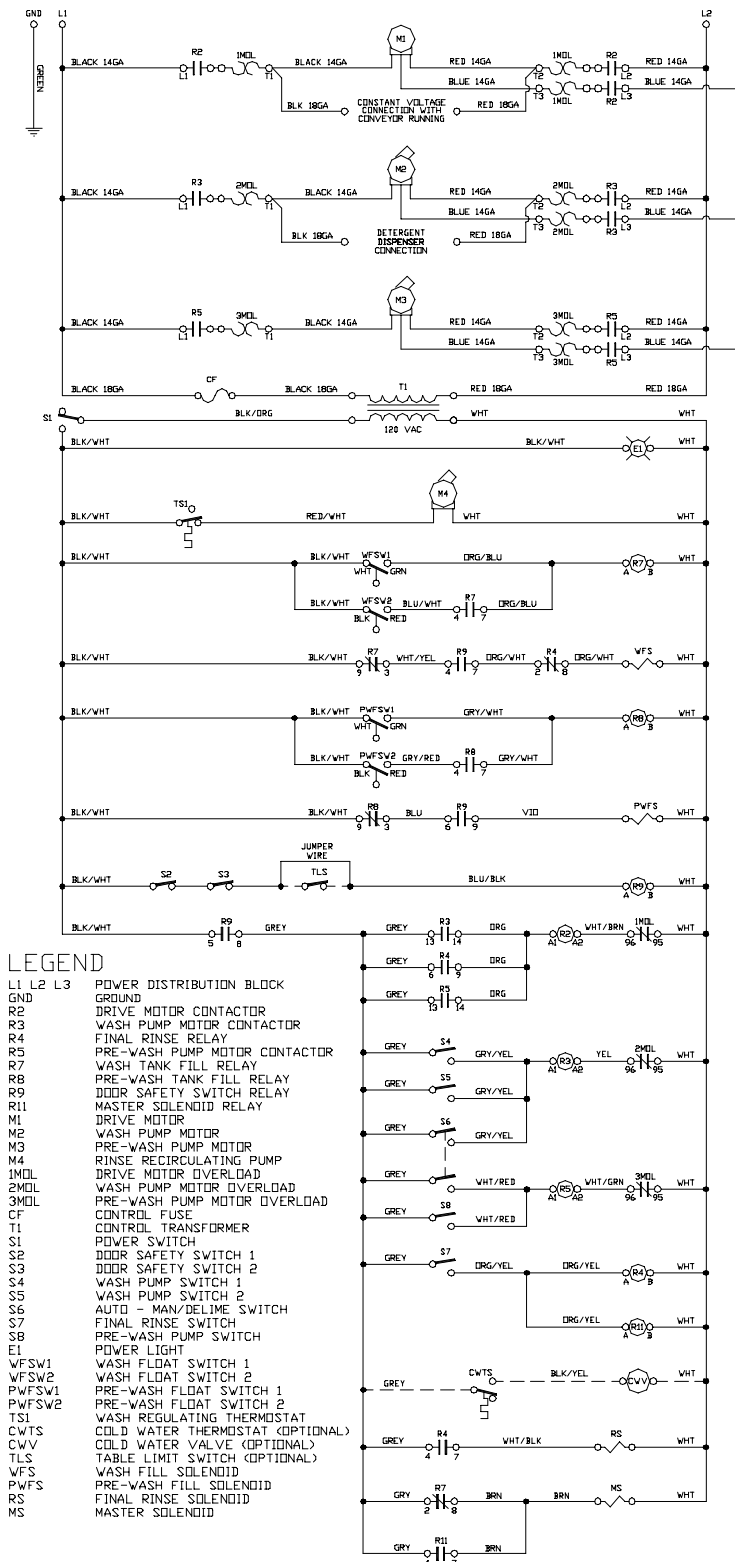


9905-002-98-53a

SECTION 6: ELECTRICAL SCHEMATICS


EXHAUST FAN HOOK-UP SCHEMATIC & CONVEYOR SIDE LOADER SCHEMATIC

CONVEYOR SIDE LOADER

 TS-44 & TSC-44 CONVEYORS



TS-66 & TSC-66 CONVEYORS

 


9905-002-56-84a

CONVEYOR EXHAUST FAN HOOKUP

LEGEND

T TIMER
TB TERMINAL BOARD

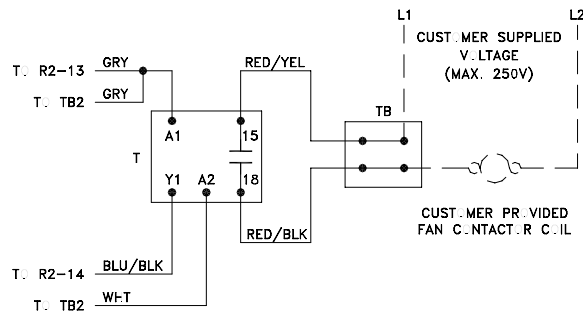


9905-002-55-86b

GAS CONVEYOR EXHAUST FAN HOOKUP

LEGEND

T TIMER
TB TERMINAL BOARD

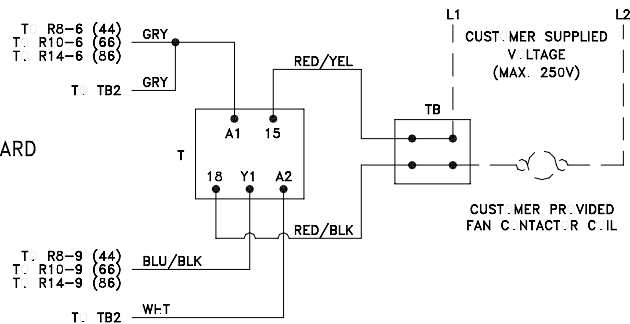

9905-003-14-58a

SECTION 7: JACKSON MAINTENANCE & REPAIR CENTERS

SECTION 7: JACKSON MAINTENANCE & REPAIR CENTERS

ALABAMA TO FLORIDA

ALABAMA

JONES-McLEOD APPLIANCE SVC

1616 7TH AVE. NORTH
BIRMINGHAM, AL 35203
(205) 251-0159
800-821-1150
FAX: (205) 322-1440
service@jones-mcleod.com

JONES-McLEOD APPLIANCE SVC

854 LAKESIDE DRIVE
MOBILE, AL 36693
(251) 666-7278
800-237-9859
FAX: (251) 661-0223

ALASKA

RESTAURANT APPLIANCE SERVICE

7219 ROOSEVELT WAY NE
SEATTLE, WA 98115
(206) 524-8200
800-433-9390
FAX: (206) 525-2890
info@restappl.com

ARIZONA

AUTHORIZED COMMERCIAL FOOD EQMT. SVC

4832 SOUTH 35TH STREET
PHOENIX, AZ 85040
(602) 234-2443
800-824-8875
FAX: (602) 232-5862
acsboss@aol.com

GCS SERVICE INC.

PHOENIX, AZ
(602) 474-4510
800-510-3497
FAX: (602) 470-4511

ARKANSAS

BROMLEY PARTS & SVC

10TH AND RINGO
P.O. BOX 1688
LITTLE ROCK, AR 72202
(501) 374-0281
800-482-9269
FAX: (501) 374-8352
service@bromleyparts.com
parts@bromleyparts.com

GCS SERVICE, INC.

3717 CHERRY ROAD
MEMPHIS, TN 38118
(901) 366-4587
800-262-9155
FAX: (901) 366-4588

CALIFORNIA

BARKERS FOOD MACHINERY SERVICES

5367 SECOND STREET
IRVINDALE, CA 91706
(626) 960-9390
800-258-6999
FAX: (626) 337-4541
service@barkers.com

GCS SERVICE INC.

LOS ANGELES, CA
(213) 683-2090
800-327-1433
FAX: (213) 683-2099

GCS SERVICE INC.

SANTA ANA, CA
(714) 542-1798
800-540-0719
FAX: (714) 542-4787

GCS SERVICE INC.

S. SAN FRANCISCO, CA
(650) 635-0720
800-969-4427
FAX: (650) 871-4019

COMMERCIAL APPLIANCE SERVICE, INC.

6507 PACIFIC AVENUE, SUITE 102
STOCKTON, CA 95207
(916) 567-0203
(800) 464-2222
(916) 567-0266 FAX

GCS SERVICE INC.

SAN DIEGO, CA
(858) 549-8411
800-422-7278
FAX: (858) 549-2323

INDUSTRIAL ELECTRIC SVC.

5662 ENGINEER DRIVE
HUNTINGTON BEACH, CA 92649
(714) 379-7100
(800-457-3783
FAX: (714) 379-7109

P & D APPLIANCE SVC

100 SOUTH LINDEN AVE.
S. SAN FRANCISCO, CA 94080
(650) 635-1900
800-424-1414
FAX: (650) 635-1919
pndappl@aol.com

P & D APPLIANCE

4220-C ROSEVILLE ROAD
NORTH HIGHLANDS, CA 95660
(916) 974-2772
800-824-7219
FAX: (916) 974-2774

COMMERCIAL APPLIANCE SERVICE, INC.

281 LATHROP WAY, #100
SACRAMENTO, CA 95815
(916) 567-0203
(800) 464-2222
(916) 567-0324 FAX

COLORADO

GCS SERVICE INC.

SHERIDAN, CO
(303) 371-9054
800-972-5314
FAX: (303) 371-4754

HAWKINS COMMERCIAL APPLIANCE SERVICE

3000 S. WYANDOT ST.
ENGLEWOOD, CO 80110
(303) 781-5548
(800) 624-2117
FAX: (303) 761-5561
johns@hawkinscommercial.com

METRO APPLIANCE SERVICE

1640 S BROADWAY
DENVER, CO 80210
(303) 778-1126
800-525-3532
FAX: (303) 778-0268
metroappls@aol.com

CONNECTICUT

GCS SERVICE INC.

HARTFORD, CT
(860) 549-5575
800-423-1562
FAX: (860) 527-6355

SUPERIOR KITCHEN SERVICE INC.

22 THOMPSON ROAD
WINDSOR, CT 06088
(888) 590-1899
(888) 590-1996 FAX

DELAWARE

FOOD SERVICE EQMT.

2101 PARKWAY SOUTH
BROOMALL, PA 19008
(610) 356-6900
FAX: (610) 356-2038
dancerule@aol.com

GCS SERVICE INC.

PHILADELPHIA, PA
(215) 925-6217
800-441-9115
FAX: (215) 925-6208

ELMER SCHULTZ SERVICE

36 BELMONT AVE.
WILLMINGTON, DE 19804
(302) 655-8900
800-225-0599
FAX: (302) 656-3673
elmer2@erols.com

EMR SERVICE DIVISION

106 WILLIAMSPORT CIRCLE
SALISBURY, MD 21804
(410) 543-8197
FAX: (410) 548-4038

FLORIDA

COMMERCIAL APPLIANCE SERVICE

8416 LAUREL FAIR CIRCLE
BLDG 6, SUITE 114
TAMPA, FL 33610
(813) 663-0313
800-282-4718
FAX: (813) 663-0212
commercialappliance@world-net.att.net

GCS SERVICE INC

MIAMI, FL
(305) 621-6666
800-766-8966
FAX: (305) 621-6656

GCS SERVICE INC

ORLANDO, FL
(407) 841-2551
800-338-7322
FAX: (407) 423-8425

NASS PARTS AND SERVICE, INC.

1144 BELVILLE ROAD, UNIT 359
DAYTONA BEACH, FL 32114
(386) 226-2642
(800) 432-2795
(386) 736-7695 FAX

GCS SERVICE INC

TAMPA, FL
(813) 626-6044
800-282-3008
FAX: (813) 621-1174

SECTION 7: JACKSON MAINTENANCE & REPAIR CENTERS

FLORIDA TO MARYLAND

JONES-McLEOD APPLIANCE SVC

854 LAKESIDE DRIVE
MOBILE, AL 36693
(251) 666-7278
800-237-9859
FAX: (251) 661-0223
service@jones-mcleod.com

NASS PARTS AND SERVICE, INC.

1108 SOUTH WOODS AVENUE
ORLANDO, FL 32805
(407) 425-2681
(800) 432-2795
(407) 425-3463 FAX

NASS PARTS AND SERVICE, INC.

1376 HEIDE AVENUE
PALM BAY, FL 32907
(321) 952-2012
(800) 432-2795
(321) 953-0266 FAX

GEORGIA

GCS SERVICE INC

ATLANTA, GA
(770) 452-7322
800-334-3599
FAX: (770) 452-7473

HERITAGE FOODSERVICE GROUP OF ATLANTA

2100 NORCROSS PKWY.
SUITE 130
NORCROSS, GA 30071
(770) 368-1465
866-388-9837
FAX: (866) 388-9838

WHALEY FOODSERVICE REPAIRS

109-A OWENS INDUSTRIAL DRIVE
SAVANNAH, GA 31405
(912) 447-0827
888-765-0036
FAX: (912) 447-0826

PIERCE PARTS & SERVICE

2422 ALLEN ROAD
MACON, GA 31216
(478) 781-6003
800-368-2512
FAX: (478) 781-7186

HAWAII

FOOD EQMT. PARTS & SERVICE CO.

300 PUUHALE RD.
HONOLULU, HI 96819
(808) 847-4871
FAX: (808) 842-1560
fepsco@hula.net

IDAHO

RESTAURANT APPLIANCE SVC.

7219 ROOSEVELT WAY NE
SEATTLE, WA 98115
(206) 524-8200
800-433-9390
FAX: (206) 525-2890
info@restappl.com

RON'S SERVICE

703 E 44TH STREET STE 10
GARDEN CITY, ID 83714
(208) 375-4073
FAX: (208) 375-4402

ILLINOIS

CONES REPAIR SVC.

2408 40TH AVE.
MOLINE, IL 61265
(309) 797-5323
800-716-7070
FAX: (309) 797-3631
jackb@cones.com

EICHENAUER SERVICES INC.

130 S OAKLAND ST.
DECATUR, IL 62522
(217) 429-4229
800-252-5892
FAX: (217) 429-0226
esi@esiquality.com

GCS SERVICE INC.

ELMHURST, IL
(630) 941-7800
800-942-9689
FAX: (630) 941-6048

GCS SERVICE INC.

ST. LOUIS, MO
(314) 683-7444
800-284-4427
FAX: (314) 638-0135

GENERAL PARTS, INC.

248 JAMES STREET
BENSONVILLE, IL 60106
(630) 595-3300
(800) 880-3604
FAX: (630) 595-0006

INDIANA

GCS SERVICE INC.

INDIANAPOLIS, IN
(317) 545-9655
800-727-8710
FAX: (317) 549-6286

B622 LA PAS TRAIL
INDIANAPOLIS, IN 46268
(317) 290-8060
(800) 410-9794
(317) 290-8085 FAX

IOWA

GOODWIN TUCKER GROUP

2900 DELAWARE AVENUE
DES MOINES, IA 50317
(515) 262-9308
800-372-6066
FAX: (515) 262-2936
parts@goodwintucker.com

CONES REPAIR SVC.

1056 27TH AVENUE SW
CEDAR RAPIDS, IA 52404
(319) 365-3325
800-747-3326
FAX: (319) 365-0885

KANSAS

GCS SERVICE INC.

KANSAS CITY, MO
(816) 920-5999
800-229-6477
FAX: (816) 920-7387

GENERAL PARTS, INC.

1101 E. 13TH STREET
KANSAS CITY, MO 64106
(816) 421-5400
(800) 279-9967
(816) 421-1270 FAX

KENTUCKY

CERTIFIED SERVICE CENTER

127 DISHMAN LANE
BOWLING GREEN, KY 42101
(270) 783-0012
(877) 907-0012
FAX: (270) 783-0058

CERTIFIED SERVICE CENTER

RAMCO BUSINESS PARK
4283 PRODUCE ROAD
LOUISVILLE, KY 40218
(502) 964-7007
800-637-6350
FAX: (502) 964-7202
cwalker@certifiedsc.com
droenigk@certifiedsc.com

CERTIFIED SERVICE CENTER

1051 GOODWIN DRIVE
LEXINGTON, KY 40505
(606) 254-8854
800-432-9269
FAX: (606) 231-7781
jatkings@certifiedsc.com

GCS SERVICE INC.

LOUISVILLE, KY
(502) 367-1788
800-752-6160
FAX: (502) 367-0400

GCS SERVICE INC.

LEXINGTON, KY
(606) 255-0746
800-432-9260
FAX: (606) 255-0748

LOUISIANA

HERITAGE SERVICE GROUP

1532 RIVER OAKS WEST
NEW ORLEANS, LA 70123
(504) 734-8864
(800) 499-2351
(504) 733-2559 FAX

MAINE

GCS SERVICE INC.

CHELSEA, MA
(617) 889-9393
800-225-1155
FAX: (617) 889-1222

MASSACHUSETTS RESTAURANT SUPPLY

34 SOUTH STREET
SOMERVILLE, MA 02143
(617) 868-1930
800-338-6737
FAX: (617) 686-5331

PINE TREE FOOD EQUIPMENT

175 LEWISTON ROAD
GRAY, ME 04039
(207) 657-6400
(800) 540-5427
(207) 657-5464 FAX

MARYLAND

EMR SERVICE DIVISION

700 EAST 25TH STREET
BALTIMORE, MD 21218
(410) 467-8080
800-879-4994
FAX: (410) 467-4191
baltparts@emrco.com

SECTION 7: JACKSON MAINTENANCE & REPAIR CENTERS

MARYLAND TO NEW YORK

EMR SERVICE DIVISION
106 WILLIAMSPORT CIRCLE
SALISBURY, MD 21804
(410) 543-8197
888-687-8080
FAX: (410) 548-4038
baltparts@emrco.com

EMR SERVICE DIVISION

5316 Sunnyside Ave.
Beltsville, MD 20715
(301) 931-7000
800-348-2365
FAX: (301) 931-3060
baltparts@emrco.com
GCS SERVICE INC.
SILVER SPRING, MD
(301) 585-7550 (DC)
(410) 792-0338 (BALT)
(800) 638-7278
FAX: (301) 495-4410

MASSACHUSETTS

ACE SERVICE CO.
95 HAMPTON AVE.
NEEDHAM, MA 02494
(781) 449-4220
800-225-4510 MA & NH
FAX: (781) 444-4789
taceservice@aol.com

**MASSACHUSETTS RESTAU-
RANT SUPPLY**

34 SOUTH STREET
SOMERVILLE, MA 02143
(617) 868-1930
800-338-6737
FAX: (617) 868-5331

GCS SERVICE INC.
CHELSEA, MA
(617) 889-9393
800-225-1155
FAX: (617) 889-1222

GCS SERVICE INC.
HARTFORD, CT
(860) 549-5575
800-723-1562
FAX: (860) 527-6355

**SUPERIOR KITCHEN SER-
VICE INC.**

399 FERRY STREET
EVERETT, MA 02149
(617) 389-1899
(888) 590-1899
(617) 389-1996 FAX

MICHIGAN

GCS SERVICE INC.
LIVONIA, MI
(248) 426-9500
800-772-2936
FAX: (248) 426-7555

**JACKSON SERVICE COMPA-
NY**

3980 BENSTEIN RD.
COMMERCE TWSHP, MI 48382
(248) 363-4159
800-332-4053
FAX: (248) 363-5448

GCS SERVICE INC.
GRAND RAPIDS, MI
(616) 241-0200
800-823-4866
FAX: (616) 241-0541

MINNESOTA

GCS SERVICE INC.
MINNEAPOLIS, MN
(612) 546-4221
800-345-4221
FAX: (612) 546-4286

GENERAL PARTS, INC.

11311 HAMPSHIRE AVENUE
SOUTH
BLOOMINGTON, MN 55438-
2456
(952) 944-5800
(800) 279-9980
(800) 279-9980 FAX

MISSISSIPPI

GCS SERVICE INC.
JACKSON, MS
(601) 956-7800
800-274-5954
FAX: (601) 956-1200

GCS SERVICE INC.
MEMPHIS, TN
(901) 366-4587
800-262-9155
FAX: (901) 366-4588

MISSOURI

GCS SERVICE INC.
KANSAS CITY, MO
(816) 920-5999
800-229-6477
FAX: (816) 920-7387

GCS SERVICE INC.

ST. LOUIS, MO
(314) 638-7444
800-284-4427
FAX: (314) 638-0135

KAEMMERLIN PARTS & SVC.

2728 LOCUST STREET
ST. LOUIS, MO 63103
(314) 535-2222
FAX: (314) 535-6205
petek@kps.stl.com

GENERAL PARTS, INC.

1101 EAST 13TH STREET
KANSAS CITY, MO 64106
(816) 421-5400
(800) 279-9967
(816) 421-1270 FAX

MONTANA

**RESTAURANT APPLIANCE
SVC.**

7219 ROOSEVELT WAY NE
SEATTLE, WA 98115
(206) 524-8200
800-433-9390
FAX: (206) 525-2890
info@restappl.com

NEBRASKA

GOODWIN - TUCKER GROUP

7535 D STREET
OMAHA, NE 68124
(402) 397-2880
800-228-0342
FAX: (402) 397-2881
askme@goodwintucker.com

NEVADA

**HI TECH COMMERCIAL SER-
VICE**

1840 STELLA LAKE STREET
NORTH LAS VEGAS, NV 89106
(702) 649-4616
(877) 924-4832
FAX: (702) 649-4607
larry@hitechnv.com

5454 LOUIE LANE
RENO, NV 89511
(775) 852-9696
FAX: (775) 852-5104

GCS SERVICE INC.

LAS VEGAS, NV
(702) 450-3495
800-500-9060
FAX: (702) 450-3491

NEW HAMPSHIRE

GCS SERVICE INC.
CHELSEA, MA
(617) 889-9393
800-225-1155
FAX: (617) 889-1222

ACE SERVICE CO.

95 HAMPTON AVE.
NEEDHAM, MA 02494
(781) 449-4220
800-225-4510 MA & NH
FAX: (781) 444-4789
taceservice@aol.com

**MASSACHUSETTS RESTAU-
RANT SUPPLY**

34 SOUTH STREET
SOMERVILLE, MA 02143
(617) 868-1930
800-338-6737
FAX: (617) 868-5331

NEW JERSEY

JAY HILL REPAIRS
90 CLINTON RD.
FAIRFIELD, NJ 07004
(973) 575-9145
800-836-0643
FAX: (973) 575-5890
jhrepair@aol.com

GCS SERVICE INC.
EAST RUTHERFORD, NJ
(973) 614-0003
800-399-8294
FAX: (973) 614-0230

GCS SERVICE INC.
PHILADELPHIA, PA
(215) 925-6217
800-441-9115
FAX: (215) 925-6208

ELMER SCHULTZ SERVICES

201 W. WASHINGTON AVE.
PLEASANTVILLE, NJ 08232
(609) 641-0317
800-378-1641
FAX: (609) 641-8703
elmer2@erols.com

NEW YORK

**APPLIANCE INSTALLATION
AND SERVICE CORP.**

1336 MAIN STREET
BUFFALO, NY 14209
(716) 884-7425
800-722-1252
FAX: (716) 884-0410
ais@worldnet.att.net

SECTION 7: JACKSON MAINTENANCE & REPAIR CENTERS

NEW YORK TO PENNSYLVANIA

B.E.S.T. INC.

3003 GENESEE STREET
BUFFALO, NY 14225
(716) 893-6464
800-338-5011
FAX: (716) 893-6466
bestserv@aol.com

DUFFY'S EQUIPMENT SVC.

3138 ONEIDA STREET
SAUQUOIT, NY 13456
(315) 737-9401
800-443-8339
FAX: (315) 737-7132
duffyequip@aol.com

NORTHERN PARTS & SVC.

21 NORTHERN AVENUE
PLATTSBURGH, NY 12903
(518) 563-3200
800-634-5005
FAX: (800) 782-5424
info@northernparts.com

GCS SERVICE INC.

BROOKLYN, NY
(718) 486-5220
800-969-4271
FAX: (718) 486-6772

ALL SERVICE KITCHEN

EQUIPMENT REPAIR
10 CHARLES ST.
NEW HYDE PARK, NY 11040
(516) 378-1176
FAX: (516) 378-1735

ALL ISLAND REPAIRS

40-9 BURT DRIVE
DEER PARK, NY 11729
(631) 242-5588
FAX: (631) 242-6102

NORTH CAROLINA

AUTHORIZED APPLIANCE SERVICECENTER

1020 TUCKASEEGEE RD.
CHARLOTTE, NC 28208
(704) 377-4501
(800) 532-6127
FAX: (704) 377-4504

AUTHORIZED APPLIANCE

SERVICECENTER
800 N. PERSON ST.
RALEIGH, NC 27604
(919) 834-3476
FAX: (919) 834-3477

AUTHORIZED APPLIANCE SERVICECENTER

904 S. MARSHALL ST.
WINSTON-SALEM, NC 27403
(336) 725-5396
FAX: (336) 721-1289

AUTHORIZED APPLIANCE SERVICECENTER

104 HINTON AVE.
WILMINGTON, NC 28403
(910) 313-1250
FAX: (910) 313-6130

WHALEY FOODSERVICE

8334-K ARROWRIDGE BLVD
CHARLOTTE, NC 28273
(704) 529-6242
FAX: (704) 529-1558
info@whaleyfoodservice.com

WHALEY FOODSERVICE REPAIRS

203-D CREEK RIDGE RD.
GREENSBORO, NC 27406
(336) 333-2333
FAX: (336) 333-2533
info@whaleyfoodservice.com

WHALEY FOODSERVICE REPAIRS

335-105 SHERWEE DRIVE
RALEIGH, NC 27603
(919) 779-2266
FAX: (919) 779-2224
info@whaleyfoodservice.com

WHALEY FOODSERVICE REPAIRS

6418-101 AMSTERDAM WAY
WILMINGTON, NC 28405
(910) 791-0000
FAX: (910) 791-6662
info@whaleyfoodservice.com

NORTH DAKOTA

GCS SERVICE INC.

MINNEAPOLIS, MN
(612) 546-4221
800-345-4221
FAX: (612) 546-4286

GENERAL PARTS, INC.

10 SOUTH 18TH STREET
FARGO, ND 58103
(701) 235-4161
(800) 279-9987
(701) 235-0539 FAX

OHIO

CERTIFIED SERVICE CENTER

890 REDNA TERRACE
CINCINNATI, OH 45215
(513) 772-6600
800-543-2060
FAX: (513) 612-6600
sbarasch@certifiedsc.com

CERTIFIED SERVICE CENTER

171J-K NORTH HAMILTON RD.
COLUMBUS, OH 43213
(614) 751-3769
(866) 862-1252
FAX: (614) 751-5792
jadkins@certifiedsc.com

CERTIFIED SERVICE CENTER

6025 N. DIXIE DRIVE
DAYTON, OH 45414
(937) 898-4040
(800) 257-2611
FAX: (937) 898-4177
dharvey@certifiedsc.com

COMMERCIAL PARTS & SVC. OF COLUMBUS

5033 TRANSAMERICA DRIVE
COLUMBUS, OH 43228
(614) 221-0057
800-837-8327
FAX: (614) 221-3622

GCS SERVICE INC.

COLUMBUS, OH
(614) 476-3225
800-282-5406
FAX: (614) 476-1196

ELECTRICAL APPLIANCE REPAIR SVC.

5805 VALLEY BELT ROAD
CLEVELAND, OH 44131
(216) 459-8700
800-621-8259
FAX: (216) 459-8707
tomr@electappliance.com

OKLAHOMA

HAGAR RESTAURANT EQMT.

1229 W MAIN STREET
OKLAHOMA CITY, OK 73106
(405) 235-2184
800-445-1791
FAX: (405) 236-5592

OREGON

RON'S SERVICE

16364 SW 72ND AVE
PORTLAND, OR 97224
(503) 624-0890
800-851-4118
FAX: (503) 684-6107
lrobinson@ronsservice.com

PENNSYLVANIA

A.I.S. COMMERCIAL PARTS & SERVICE

1816 WEST 26TH STREET
ERIE, PA 16508
(814) 456-3732
800-332-3732
FAX: (814) 452-4843
aiserie@aol.com

ELMER SCHULTZ SVC.

540 NORTH 3RD STREET
PHILADELPHIA, PA 19123
(215) 627-5400
FAX: (215) 627-5408
elmer2@erols.com

GCS SERVICE INC.

PHILADELPHIA, PA
(215) 925-6217
800-441-9115
FAX: (215) 925-6208

GCS SERVICE INC.

HARRISBURG, PA
(717) 564-3282
800-367-3225
FAX: (717) 564-9286

GCS SERVICE INC.

PITTSBURGH, PA
(412) 787-1970
800-738-1221
FAX: (412) 787-5005

K & D PARTS AND SERVICE CO.

1833-41 N CAMERON STREET
HARRISBURG, PA 17103
(717) 236-9039
800-932-0503
FAX: (717) 238-4367
kdparts-service@paonline.com

CLARK SERVICE & PARTS

306 AIRPORT DRIVE
BOX 10
SMOKETOWN, PA 17576
(717) 392-5590
(717) 392-5735

SECTION 7: JACKSON MAINTENANCE & REPAIR CENTERS

RHODE ISLAND TO WISCONSIN

RHODE ISLAND

GCS SERVICE INC.
EAST PROVIDENCE, RI
(401) 434-6803
800-462-6012
FAX: (401) 438-9400

SUPERIOR KITCHEN SERVICE INC.

669 ELMWOOD AVENUE
PROVIDENCE, RI 02907
(888) 590-1899
(401) 781-1996 FAX

SOUTH CAROLINA

AUTHORIZED APPLIANCE SERVICECENTER

1811 TAYLOR ST.
COLUMBIA, SC 29202
(803) 254-8414
FAX: (803) 254-5146

AUTHORIZED APPLIANCE SERVICECENTER

2249 AUGUSTA RD.
GREENVILLE, SC 29605
(864) 235-9616
FAX: (864) 235-9623

WHALEY FOODSERVICE REPAIRS

I 26&US1
P.O. BOX 4023
WEST COLUMBIA, SC 29170
(803) 791-4420
800-877-2662
FAX: (803) 794-4630
info@whaleyservice.com

WHALEY FOODSERVICE REPAIRS

748 CONGAREE ROAD
GREENVILLE, SC 29607
(864) 234-7011
800-494-2539
FAX: (864) 234-6662
info@whaleyservice.com

WHALEY FOODSERVICE REPAIRS

1406-C COMMERCE PL.
MYRTLE BEACH, SC 29577
(843) 626-1866
FAX: (843) 626-2632
info@whaleyservice.com

WHALEY FOODSERVICE REPAIRS

4740-A FRANCHISE STREET
N. CHARLESTON, SC 29418
(843) 760-2110
FAX: (843) 760-2255
info@whaleyservice.com

SOUTH DAKOTA

GCS SERVICE INC.

MINNEAPOLIS, MN
(612) 546-4221
800-345-4221
FAX: (612) 546-4286

GENERAL PARTS, INC.

10 SOUTH 18TH STREET
FARGO, ND 58103
(701) 235-4161
(800) 279-9987
(701) 235-0539 FAX

TENNESSEE

GCS SERVICE INC.

MEMPHIS, TN
(901) 366-4587
800-262-9155
FAX: (901) 366-4588

GCS SERVICE INC.

NASHVILLE, TN
(615) 244-8050
800-831-7174
FAX: (615) 244-8885

TEXAS

ARMSTRONG REPAIR CENTER

5110 GLENMOUNT DRIVE
HOUSTON, TX 77081
(713) 666-7100
800-392-5325
FAX: (713) 661-0520
gm@armstrongrepair.com

COMMERCIAL KITCHEN REPAIR CO.

1377 N BRAZOS
P.O. BOX 831128
SAN ANTONIO, TX 78207
(210) 735-2811
800-292-2120
FAX: (210) 735-7421
brock@commercialkitchen.com

GCS SERVICE INC.

DALLAS, TX
(972) 484-2954
800-442-5026
FAX: (972) 484-2531

GCS SERVICE INC.

HOUSTON, TX
(713) 785-9187
800-868-6957
FAX: (713) 785-3979

GCS/STOVE PARTS

2120 SOLANA STREET
FORT WORTH, TX 76117
(817) 831-0381
800-433-1804
FAX: (817) 834-7754
bud@stoveparts.com

UTAH

LA MONICA'S RESTAURANT EQMT. SVC.

6182 SOUTH STRATLER AVENUE
MURRAY, UT 84107
(801) 263-3221
800-527-2561
FAX: (801) 263-3229
lamonica81@aol.com

VERMONT

NORTHERN PARTS & SVC.

4874 S. CATHERINE STREET
PLATTSBURGH, NY 12901
(518) 563-3200
800-634-5005
FAX: (800) 782-5424
info@northernparts.com

GCS SERVICE INC.

CHELSEA, MA
(617) 889-9393
800-225-1155
FAX: (617) 889-1222

VIRGINIA

DAUBERS, INC.

7645 DYNATECH COURT
SPRINGFIELD, VA 22153
(703) 866-3600
800-554-7788
FAX: (703) 866-4071
daubers@aol.com

GCS SERVICE INC.

SILVER SPRING, MD
(301) 585-7550(DC)
(410) 792-0388(BALT)
800-638-7278
FAX: (301) 495-4410

GCS SERVICE INC.

RICHMOND, VA
(804) 672-1700
800-899-5949
FAX: (804) 672-2888

GCS SERVICE INC.

VIRGINIA BEACH, VA
(757) 464-3500
800-476-4278
FAX: (757) 464-4106

WASHINGTON

GCS SERVICE INC.

SEATTLE, WA
(206) 763-0353
800-211-4274
FAX: (206) 763-5943

RESTAURANT APPLIANCE SERVICE

7219 ROOSEVELT WAY, NE
SEATTLE, WA 98115
(206) 524-8200
800-433-9390
FAX: (206) 525-2890
info@restappl.com

WEST VIRGINIA

STATEWIDE SERVICE, INC.

603 MAIN AVE.
NITRO, WV 25143
(304) 755-1811
(800) 441-9739
FAX: (304) 755-4001
sws3182@aol.com

WISCONSIN

APPLIANCE SERVICE CENTER, INC.

2439 ATWOOD AVE
MADISON, WI 53704
(608) 246-3160
800-236-7440
FAX: (608) 246-2721
ascmad@execpc.com

APPLIANCE SERVICE CENTER, INC.

6843 W. BELOIT RD.
WEST ALLIS, WI 53219
(414) 543-6460
800-236-6460
FAX: (414) 543-6480
ascmil@execpc.com

APPLIANCE SERVICE CENTER

786 MORRIS AVE
GREEN BAY, WI 54304
(920) 496-9993
800-236-0871
FAX: (920) 496-9927
ascfox@execpc.com

SECTION 7: JACKSON MAINTENANCE & REPAIR CENTERS

WISCONSIN TO WYOMING/INTERNATIONAL

GENERAL PARTS, INC.

W223 N735 SARATOGA DRIVE
WAUKESHA, WI 53186
(262) 650-6666
(800) 279-9946
(262) 650-6660 FAX

WYOMING

HAWKINS COMMERCIAL APPLIANCE SERVICE

3000 S. WYANDOT ST.
ENGLEWOOD, CO 80110
(303) 781-5548
(800) 624-2117
FAX: (303) 761-5561
johns@hawkinscommercial.com

METRO APPLIANCE SERVICE

1640 S BROADWAY
DENVER, CO 80210
(303) 778-1126
800-525-3532
FAX: (303) 778-0268
metroappls@aol.com

INTERNATIONAL

GLOBAL PARTS AND SUPPLY

7758 NW 72ND ST
MIAMI, FL 33166
(305) 885-6353

H.D. SHELDON AND CO

19 UNION SQUARE, WEST
NEW YORK, NY 10003
(212) 627-1759
(212) 924-6920

CANADA

THE GARLAND GROUP

1177 KAMATO ROAD
MISSISSAUGA, ONTARIO L4W
1X4
(905) 206-8380
SALES
(905) 624-1419
FAX: (905) 624-1851
SERVICE
800-427-6668
FAX: 800-361-7745

March 13, 2007

